

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com



PPHP86TBA



PPHP87BTA

8" Wireless BT Portable PA Speaker

Portable PA & Karaoke Party Audio Speaker with two wireless microphones, with tablet stand, with Built-in Rechargeable Battery, Flashing Party Lights and Disco Ball Lights, MP3/USB/ /FM Radio

USER GUIDE

WARNING



1. **DO NOT** place objects on top of the device, as objects may scratch the device.



2. **DO NOT** expose the device to dirty or dusty environments.



3. **DO NOT** insert any foreign objects into the device.



 
4. **DO NOT** expose the device to strong magnetic or electrical field.



5. **DO NOT** use the device in the rain



6. Please check with your Local Authority or retailer for proper disposal of electronic products.



7. **DO NOT** disassemble the device. Only a certified service technician should perform repair.



 
8. The device has apertures to disperse heat. **DO NOT** block the device ventilation, the device may become hot and malfunction as a result.

CONTROL BOARD FUNCTIONS

PPHP86TBA




PPHP87BTA

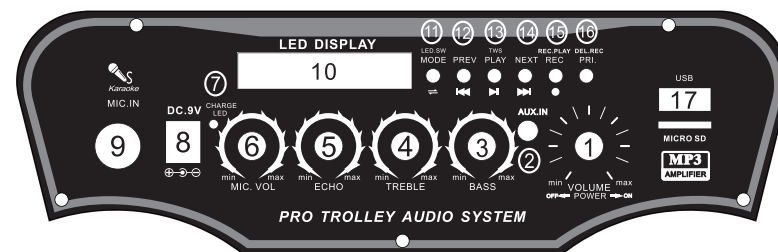

1. Master volume control/Power switch
2. 3.5MM AUX input jack
3. Bass volume control knob
4. Treble volume control knob
5. Echo control knob
6. Microphone volume control knob
7. Charge LED indicator, red color is on charge mode, light off is full charge mode
8. DC 9V input jack
9. 6.5MM microphone input jack
10. Display screen
11. Short press to choose mode/Press and hold to turn ON/OFF light
12. Previous
13. Play/Pause/press and hold for TWS function
14. Next
15. Short press to start recording, and press again to save and play recording.
Press and hold to play recorded files, press and hold again to quit recording.
16. **Microphone priority button:** When play recording, press and hold to delete current recording
17. USB and Micro SD Memory Card Slot

REMOTE CONTROL FUNCTIONS

 - Power:** Used to turn on/off the MP3 player power.
- MODE:** Used to switch the AUX/USB/BT/ Radio
- Mute button
- In FM mode, press to search radio station automatically and save.
- Next song in USB/In FM mode, short press to select saved radio station.
- Previous song in USB//In FM mode, short press to select last frequency, press and hold to fast backtrack frequency.
- EQ solution
- Repeat song
- Increase volume
- Decrease volume
- Play/Pause/In FM Mode, press to select saved radio station.
- Choose song number directly/In FM mode, choose FM frequency directly.

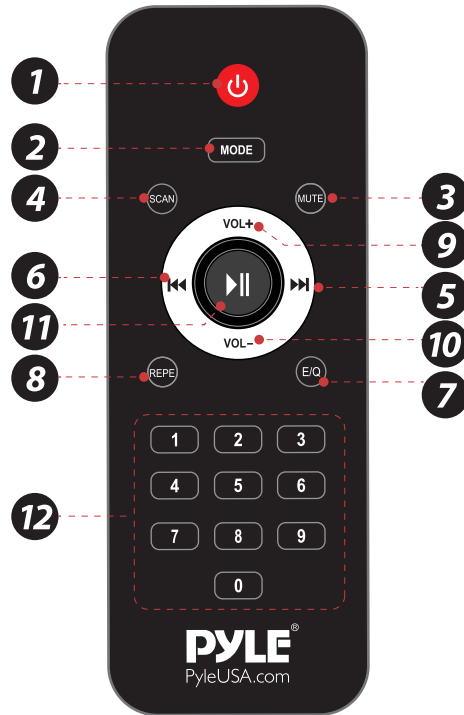

TWS FUNCTION

For increase sound effect, our unit provides TWS function as follows:

Step-1: Turn ON BT mode on your device and connect the machine.

Step-2: Press and hold each control board "TWS" button more than 3's, and you will see "ON" on display, unit will start to connect the other unit automatically, now you can enjoy stereo sound, and adjusting one unit volume will affect the other unit.

Remark:

- After connection, press and hold again one of control board "TWS" button more than 3's, you will see "OFF" on display, unit's TWS dis-connection.

TROUBLESHOOTING

Fault	Possible Cause	Solution
No sound	1. No input sound source. 2. Volume is too low.	1. Use a better music signal. 2. Adjust volume.
Distortion of sound	1. Volume too high. 2. Speaker may be damaged	1. Turn down the volume. 2. If speaker is damaged, repair or replace it.
Karaoke does not work	1. Microphone plug is not fully inserted. 2. Microphone switch is not on. 3. Microphone volume knob is at the lowest position.	1. Plug microphone properly into the socket. 2. Turn on microphone switch. 3. Adjust microphone volume properly.
MP3 does not play	1. The audio format in the USB is incorrect. 2. Improper operation has caused a process disorder. 3. USB disc is disconnected.	1. Convert audio format into Mp3 format. 2. Reboot the machine. 3. Insert USB disc properly.

Wireless BT Connectivity:

- Built-in BT for Wireless Music Streaming
- Simple & Hassle-Free Pairing
- Works with All of Today's Latest Devices
- Smartphones, Tablets, Laptops, Computers, etc.
- Wireless BT Version: 5.0
- Wireless BT Network Name: 'PYLEUSA'
- Wireless Range: Up to 32' ft.



This product can expose you to a chemical or group of chemicals, which may include "Lead and lead compounds" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.