


# PPSP18 - PITS18 User Manual

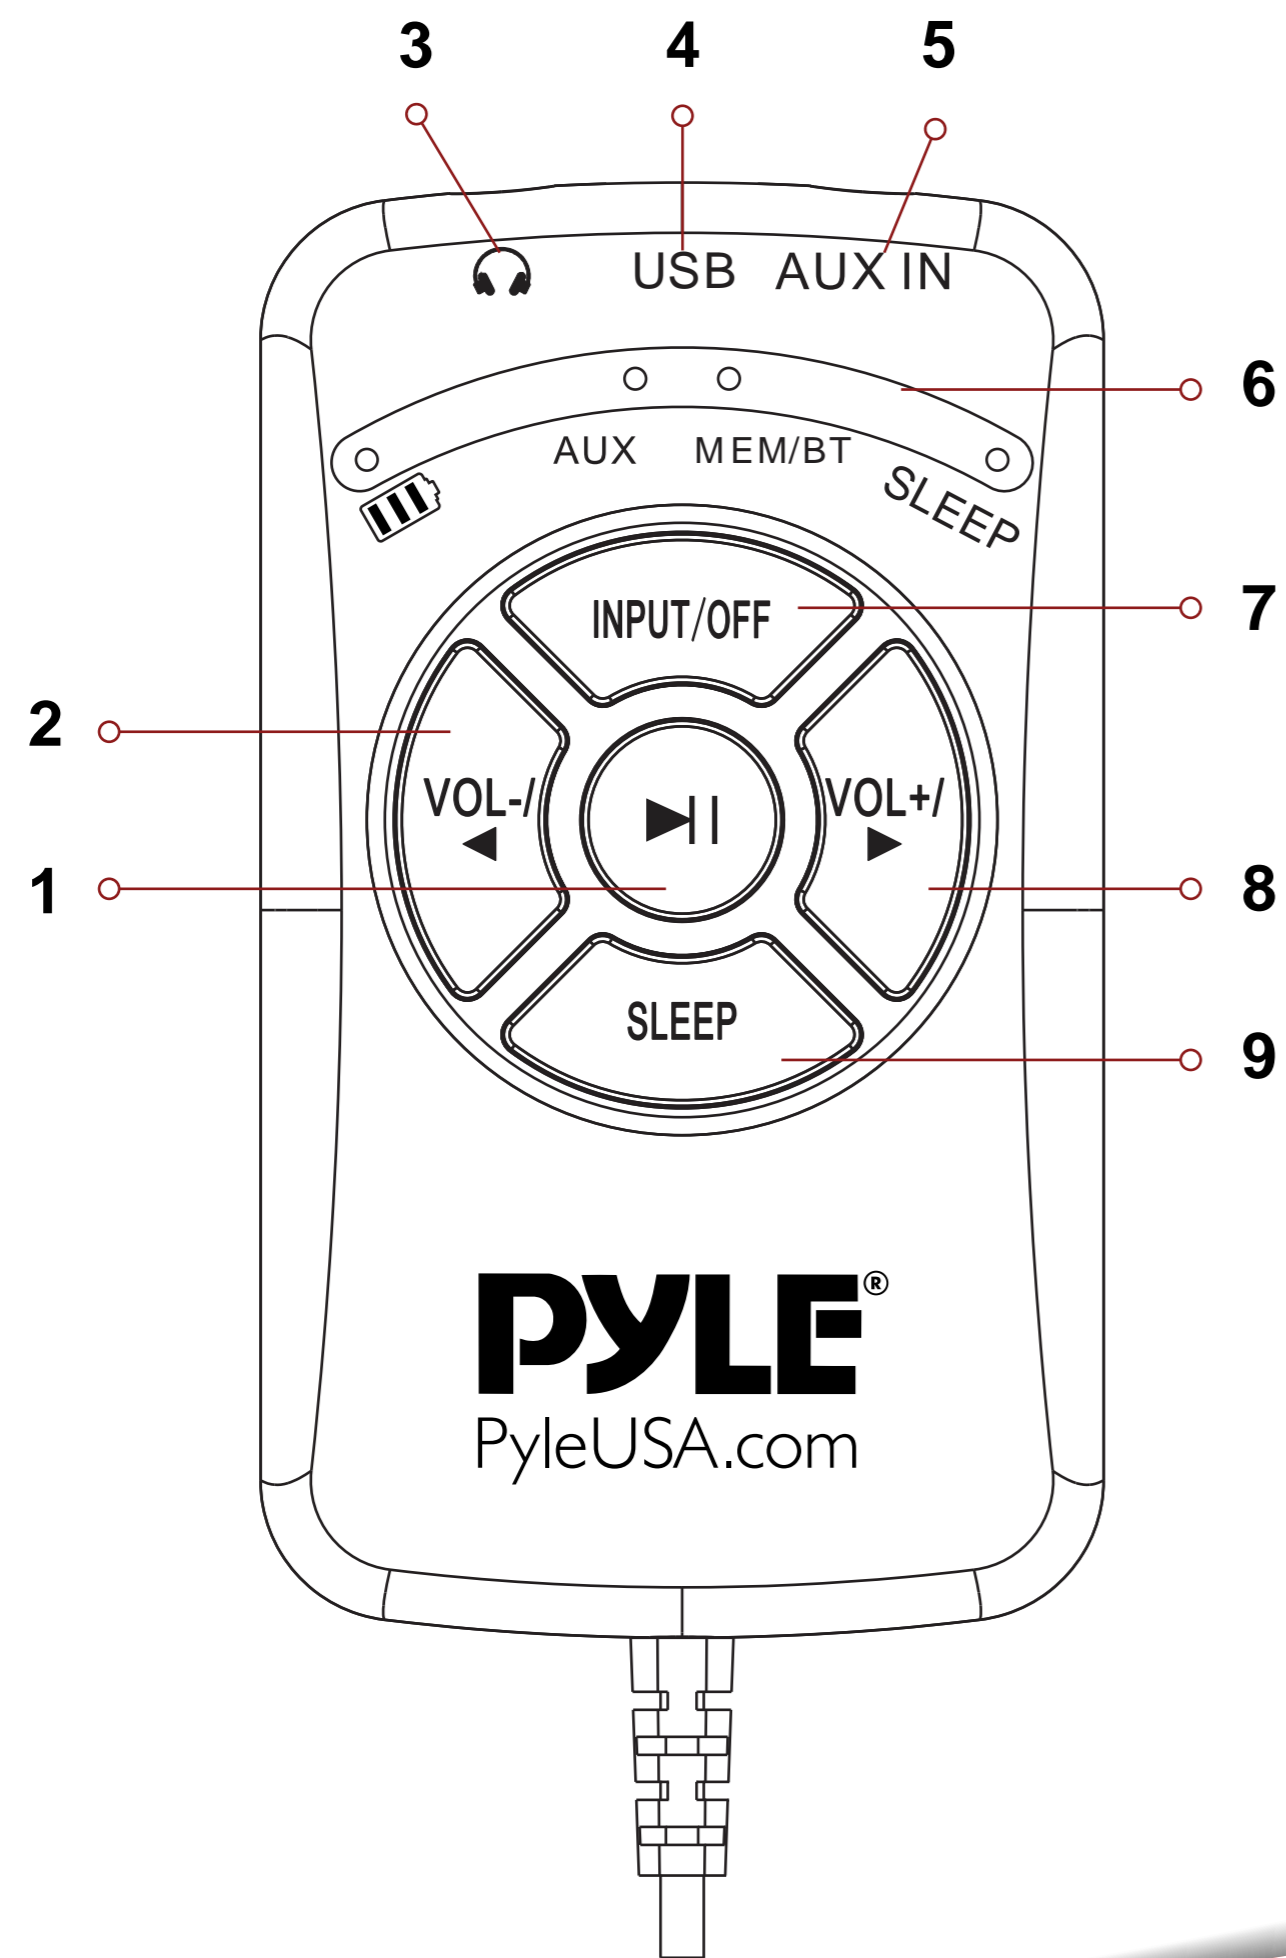

1. Power ON/OFF button

Long press for 3 sec to power on/off the machine

Play and Pause

2. Short press once to select previous song

Long press without release is to decrease the volume

3. Earphone out interface

4. USB interface

To charge the machine, or transfer data from computer

5. Audio input interface, get music from other devices

6. Working status inductor

7. Function shift between BT/Aux/Memory playing

8. Volume increase or next song

Short press for next song, long press to increase volume

9. Sleep button: press it and volume will decrease gradually and become no sound within 1 hour

When in Bluetooth MODE, The Bluetooth name is "PYLE"

Connect with your Smart phone via PYLE to get music wirelessly