

# PPSPKR131

## Wireless BT Streaming Mini Speaker

**PYLE**  
PyleUSA.com

### USER GUIDE

In order to have a better experience of the product, please read this manual carefully before using our product.

#### Function Description

FUNCTION KEY DESCRIPTION	
MODE	Mode switch
▶▶	Volume+/next song
◀◀	Volume-/previous song
▶	Play pause/double-click to switch between Chinese and English prompts
DC/5V AUX	Micro-USB charging port/external audio input port
USB	USB music player
MicroSD/TF	Micro SD music player



#### Instructions for use

##### 1. Wireless BT Streaming Connection

Turn on the speaker (ON/OFF); search for the Wireless BT name on the device: **BT SPEAKER**, after the pair is successful, you can use it. If you need to connect a new device, first disconnect the paired device and reconnect the new device.

##### 2. Wireless BT Playback

###### 1. Turn the machine ON/OFF

###### 2. Play pause Setting ▶||

When playing, press ▶|| to select play/pause.

###### 3. Volume +/- ◀◀ ▶▶

When playing, press and hold ◀◀ ▶▶ to increase or decrease the volume level.

###### 4. Up and down song

When playing, press ◀◀ ▶▶ to select the previous/next song.

##### 3. AUX Input

Use the Android interface to connect the Wireless BT speaker, the USB and 3.5 audio interface to connect to the computer to enter the external AUX mode, press ▶|| pause/play, press ◀◀ ▶▶ to select previous/next songs, and press and hold ◀◀ ▶▶ to adjust the volume.

##### 4. Micro SD/USB

Insert Micro SD/USB, enter Micro SD/USB mode automatically, press ▶|| pause/play, press ◀◀ ▶▶ to select previous/next songs, press and hold ◀◀ ▶▶ to adjust volume.

##### 5. MODE

Press the **MODE** button, followed by Wireless BT, USB, Micro SD, AUX.

#### Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)

#### Troubleshooting

COMMON PROBLEM	SOLUTION
Multiple connection and unsuccessful pairing	1. Whether the speaker is in search state, turn it on and restart. 2. Turn off other Wireless BT devices around.
Volume is weak/No sound	1. Turn ON the speaker volume. 2. Speaker battery is low.
Music Intermittent	1. The effective connection distance exceeded. 2. There are obstacles in the speaker.
Pilot lamp does not shine	The Wireless BT speaker has insufficient power. Please recharge and try again.