



**PRJG45**

**Multimedia Theater Gaming Mini-**



**Projector**

[www.pyleaudio.com](http://www.pyleaudio.com)

User's Manual

Please read this manual carefully before operating your projector

VER:HDMI

# User manual

## Safety caution:

Before using the projector , please read this manual carefully.

**Dangerous** --to reduce the danger of electric shock

\*Please cut off the power after use or before clear it

\*If the projector drop into water .do not touch it and cut off the power

\*Do not use the projector when you are in the shower.

\*Do not put the projector near the water.

\*Do not drop the projector into water or other liquid

\*Please keep the projector dry,do not use in wet condition

Warning-- to reduce fire ,electrocution and hurt

\*Please pull out the power cable when you do not use the projector or repair the projector

\*Please use our accessories (offered in the package) if kids or the disabled use the projector alone

\*Do not put the power cable near heat source

\*Please contact the distributor when the projector is broken, never solve it by yourself.

\*Do not insert any other things into the projector port

\*Do not use the liquid spray when the projector is working

\*Do not use the projector on blanket or bed. Because heat will caus electric shock or fire

\*Do not move projector just through carrying power cable only

\*The projector is suited for personal entertainment use only not professional projection device

\*Do not use the projector outside

\*Do not see the light from the len .it is high bright lamp .it will damage your eye ,specially for chirdren

## Accessory list :


Projector	x 1pc
power cable	x 1pc
AV cable	x 1pc
Vga cable	x 1pc (optional accessory)
Remote control	x 1pc (optional accessory)
HDMI cable	x1pc (optional accessory)

## Specification

Model No.	GP-1	projector system	LCD
Native resolution	320*240	Brightness	40lumems
Light source	LED	Color	16770K
Aspect Ratio	16:9/4:3	Operation method	manual remote
Contrast	300: 1	projection distance	0.5-3meters
Projection size	8-80inch	Power consumption	24W
weight	0.46KG	Maximum external memory	400G
Machine size	12.7×12.6×6.9cm	Power adapter	12V-2A
input port	12V power, AV, VGA, USB, SD, HDMI		
output port	speaker (1W×2), earphone		
Multimedia player	image play, audio play, video play		
AV video play	PAL&NTSC system		
Energy saving mode	listen separately (only sound in this mode)		

## Machine instruction:

Remark:do not block the air-out ventilation

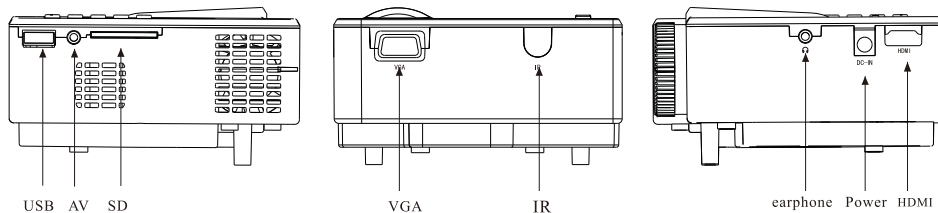

## Instruction of use :

Turn on or off

Ready :

When projector connect the power via the AC adapter, the indicator light is red ,the projector go into stand by situation

Turn on: press the "power"key one time,the indicator light is normal on. the projector turn on ,no need to wait .

Turn off

press the "power"key one time again,the indicator light is off. the projector turn off ,no need to wait .

## Focus adjustment

the projector can throw 8 - 80 inch image size according to different distance between projector and screen . Put the projector toward to center of the screen .And turn on the projector, focus the lens till the image is clear.

## Menu settings

Press "S/M" key for 3 seconds to enter menu settings

Press "◀/▶" button to adjust the menu

Press the "S/M" key to select the desired adjustment item

Press "◀/▶" key to adjust the item's specification

"Enter"-confirm, "ESC"-exit

## Signal input mode selection

Press "S/M" key to enter the signal input selection, press the "S/ M" key to select the source selection (AV, PC-RGB, HDMI, multimedia), press the "enter" key to enter the selected input signal.

## Play movie in media

under "media" mode, press "left/right" key to select "movie" icon, press "enter" key to enter this function; press "enter" to select the movie file; repeat this "enter" key again ,cancel the selection . Press "enter" for 3 seconds, play the file. Press "Esc" key to exit the function.


## Play music in media

under "media" mode, press "left/right" key to select "music" icon, press "enter" key to enter this function; press "enter" to select the music file; repeat this "enter" key again ,cancel the selection . Press "enter" for 3 seconds, play the file. Press "Esc" key to exit the function.

## Play photo in media

under "media" mode, press "left/right" key to select "photo" icon, press "enter" key to enter this function; press "enter" to select the photo file; repeat this "enter" key again ,cancel the selection . Press "enter" for 3 seconds, play the file. Press "Esc" key to exit the function.

## Function key instruction:

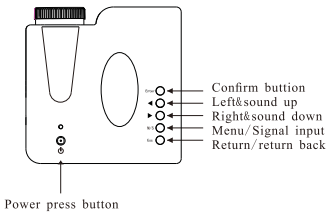

## The USB function support file format as following:

file	support format	postfix	Internal decoding format
picture	JPEG	.jpg	---
	BMP	.bmp	---
	PNG	.png	---
music	WMA	.wma	---
	MP3	.MP3	---
	MP4	.M4A	.dat/.mpg/.mpeg
movie	MPEG1	.dat/.mpg/.mpeg	---
	MPEG2	.mpg	---
	MPEG4	.avi/.mp4	DIVX, XVID
	RM, RMVB	.rm/.rmvb	RV8/9/10
	H264	.mkv/.mov	MPEG1,2,4
	MOV	.avi/.mp4	---
	M JPEG	.avi	---
	FLV	.flv	H264
	Vc1	.wmv/.asf	vc1
	DivX	.DIVX/.AVI	MPEG, DIVX