



PRJG95

MINI PROJECTOR USER MANUAL

1. Accessories List

AV signal cable	1pc
Remote control	1pc
Power cable	1pc
User manual	1pc
Warranty card	1pc

2. Important Safeguards

- I. Please read the manual carefully before operating projector.
To ensure stable power supply, please use standard power cord.
- II. Please use the power supply and cable indicated on the rating label.
The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
- III. Please do not disassemble the unit yourself as this will invalidate the warranty service.
To protect your eyes, do not stare directly at the lens when the projector is on.
The projector must be kept away from water and any other liquids.
- IV. To prevent electric shock, please keep the projector out of the rain and away from moisture.
It is recommended to switch off the projector after it has run for 6 hours non-stop.
Please use the original foam and other cushioning materials when transporting the projector.
- V. If the projector does not work, please contact the authorized service agent.

3. Specification

Model	Mini projector	Image system	LCD
Native resolution	800*480	Support resolution	Max 1920*1080
Lamp	LED	Input voltage	100V-240V
Language	English, 23 languages	Brightness	1,200 lumens
Contrast	1,500:1	Lens	F=125
Image size	35-120inch	Projection distance	1.22-3.77m
Color	18000K	Projection mode	Front projection
Aspect Ratio	16:9, 4:3	Speaker	2.0W*1
N.W/G.W	1.18KG/1.73KG	Size	225*152*90mm
Operation mode	Manual/Remote control	Working temp	-10~38°C
Output	Headphone	Input	HDMI/USB/VGA/AV

 
4. Multimedia Supported Files

Task	Format	Video Decode	Audio Decode
Movie	.avi	MPEG-4	Mp3, AAC
	.mpg	MPEG-1, MPEG-2	
Music	.dat	MPEG-1	Mp3
	.mp3	---	
Picture	.m4a/.aac	---	AAC
	.jpg/jpeg	Progressive JPEG Baseline JPEG	---
	.bmp	BMP	---




The projector does not support Dolby audio decoding.


5. Structural Diagram

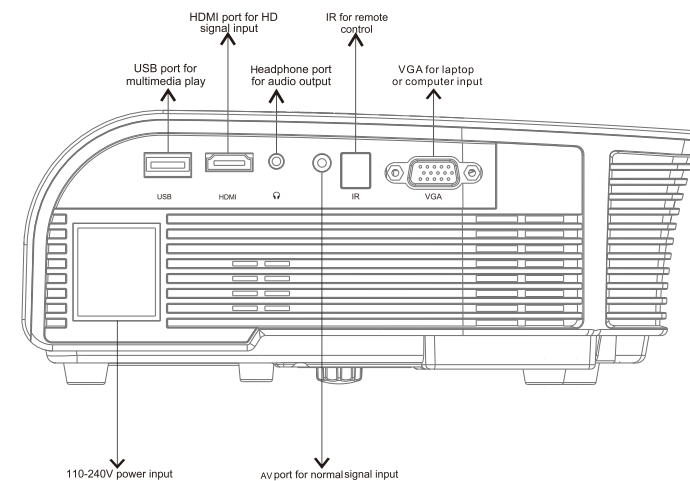

 6. Panel Functions

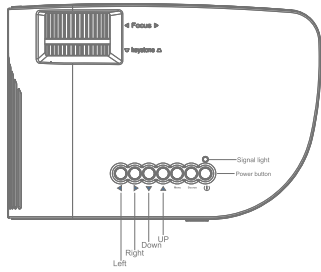

 Left: move left or volume down;
confirm the signal input source
Right: move right or volume up
Up: move up
Down: move down
Menu: operate multiple functions
Source: choose the input signal source
Power Button: power on or off

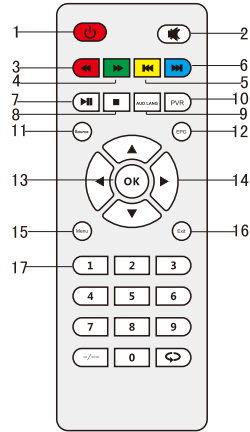


7. Function Operation


1. Power
2. Mute
3. Backward
4. Forward
5. Previous
6. Next
7. Play
8. Stop
9. Audio Language
(Only apply for European DVB-T)
10. Record digital TV channel and playback
(Only apply for European DVB-T)
11. Source
12. Electronic Menu
(Only apply for European DVB-T)
13. Confirm
14. Up/down/left/right(channel+/-/volume-/+)
15. Menu
16. exit
17. numbers

8. Function Operation

 - I. Power on/off
Once the projector is plugged in, it will be in Standby mode.
Power on: Press the power button on the projector or remote control once to turn the projector on.
Power off: Press the power button on the projector or remote control once to turn the projector off.
- II. Focusing
Place the projector in a certain place within the required distance so that the lens is perpendicular to the screen then rotate the lens until the image is clear.
- III. Signal Source Selection
Press "SOURCE" key on the remote and press "▲/▼" to find the required source, then press "OK" key to confirm.

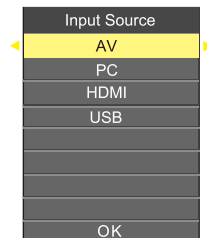

 9. Menu Setting

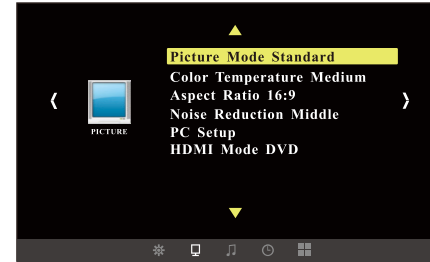


Press "MENU" key to enter the main menu, then press "◀▶", key to enter each sub-menu.

Press "▲/▼" key to select the sub-menu, then adjust the parameters as per your requirements, and press the "OK" key to confirm.


Sub-Menu Functions

 - I. Channel and software update menu :
Auto Tuning, ATV Manual Tuning, Programme Edit, Software Update.
- II. Picture sub-menu:
Picture Mode Standard, Color Temperature, Aspect Ratio, Noise Reduction, PC Setup, HDMI Mode.
- III. Sound sub-menu:
Sound Mode Standard, Balance, Auto Volume, EQ.
- IV. Time sub-menu:
Clock, Off Time, On Time, Sleep Timer, Auto Sleep.
- V. Option sub-menu:
OSD Language, Restore Factory Default, OSD Blending, OSD Duration, Flip, Focus.



10. Multimedia Player

 Insert the U-Disk and select USB from the source menu, the image on the screen will be like below:
Through this interface, you can choose the corresponding "PHOTO", "MUSIC", "MOVIE" or "TEXT" icon to play the required files.
For example : choose "MOVIE" by pressing the "OK" key on remote control, then all of video files will be displayed. Please press "OK" key to choose the one you like, the video will be automatically played in a small window and marked red tick "✓", then press "▶" "play" key to get a full screen video.
Remarks: red tick is a selection function, you can select favor video by mark red tick "✓", then the projector will play your favor.

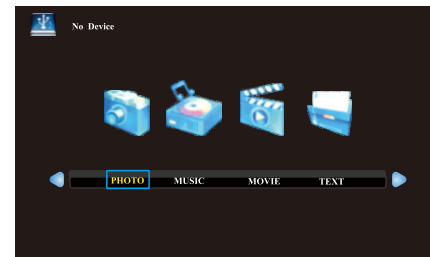

We offer 1 year warranty for the product.