# FLOOR-STANDING TRIPOD PROJECTOR SCREEN

## **QUICK SETUP GUIDE**

MODELS: PRJTP42, PRJTP52, PRJTP72, PRJTP84, PRJTP100



### **SETUP**

Choose a suitable place for setup, open the tripod feet first, pull out the upper bar to a suitable height and lock into place. Then hang the pull rod above to the goose neck and adjust the screen height. Then finally fix/lock the screen at the desired position. After use, release the screen and slide the unit back into the housing.

#### **USEFUL INFORMATION**

- a. The tripod legs should be placed on a smooth, level surface.
- **b.** When adjusting the height of screen, please do so slowly and carefully.

#### **FEATURES**

- Matte White Projector Screen
- Lightweight, Portable and Durable
- Premium Viewing Surface Matte Fabric
- Fold-Out Steel Tripod and Roll-Up Screen Style
- Perfect Design for Traveling I Mobile Presentations
- Black Masking Border for Optimum Image Focus and Alignment

- Allows for Clear and Vivid Image I Video Capture
- Simple Installation and Operation
- Aluminum Case Screen Housing
- Matte Fabric Thickness: 4.5mm
- Auto-Locking Pull Feature
- Viewing Format: 4:3
- Quick and Easy Setup
- Perfect for the Home or Office

# **SPECIFICATIONS**

	MODEL	VIEWING AREA	STANDING DIMENSIONS	TOTAL FOLDED/ CLOSED DIMENSIONS	WEIGHT
	PRJTP <b>42</b>	<b>23.5" x 31.5"</b> (40" Diagonal)	24.0" x 31.9" x 82.6"	4.6" x 7.3" x 41.3"	11.2 lbs
	PRJTP <b>52</b>	<b>29.5" x 39.5"</b> (50" Diagonal)	29.9" x 39.7" x 82.6"	4.6" x 7.3" x 49.2"	12.38 lbs
	PRJTP <b>72</b>	<b>43.3" x 57.1"</b> (72" Diagonal)	42.9" x 57.0" x 82.6"	4.6" x 7.3" x 66.5"	14.65 lbs
	PRJTP <b>84</b>	<b>50" x 66.9"</b> (84" Diagonal)	42.9" x 67.0" x 82.6"	4.8" x 7.5" x 66.5"	17.15 lbs
P	PRJTP <b>100</b>	<b>59.8" x 79.9"</b> (100" Diagonal)	42.9" x 78.7" x 82.6"	4.8" x 7.5" x 88.2"	19.9 lbs

## **WARNINGS**

The screen cannot be folded. Do not use fingers or hard objects against the screen surface. Avoid moisture, especially chemical, exposure to the stand and screen. Keep the screen far away from the high temperature objects or fire. If the screen is dirty, wash it by gently wipes of a broom or soft material rag, do not use organic solvents or chemicals to clean the screen surface. When pulling the screen down, do so slowly and at a vertical. Do not pull it roughly. Stop pulling as soon as the black border is visible, otherwise you risk damage and malfunction of the unit. d. After use, place the screen back into the housing in order to avoid damage or debris. If you do not use the unit for an extended period of time, please store the unit safely in it's original box.

