

**PYLE**  
*Vintage*



***PRT46***

**Retro Themed Country-Style**


Antique Wall-Mount Phone

***USER GUIDE***

***Please read these instructions carefully  
and retain for future reference.***

***Installation***

1. Connect the telephone handset cord to the handset jack
2. Connect the telephone line cord to the line cord jack
3. Connect the other telephone line cord to the telephone wall socket
4. Adjust the desired level (L/H) of the ringer signal with the switch on the back of telephone body. (See pictures below)

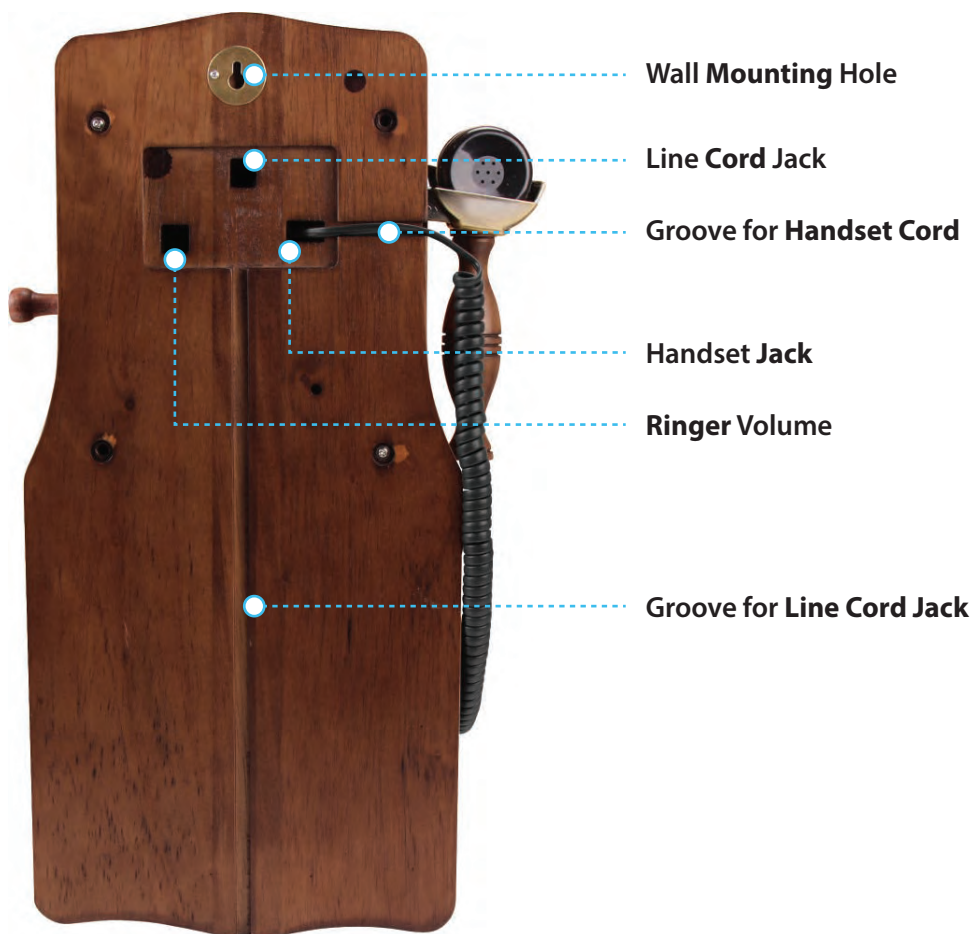

## Parts Included


Your new telephone includes the following items

- 1- Telephone Body
- 1- Telephone handset
- 1- Handset coil cord
- 1- Line cord
- 1- Owners manual

## Care and Maintenance

Use soft and dry cloth to clean the telephone, use polish for wood for polishing the wooden parts

1. Protect the telephone from the high temperature.
2. Keep the telephone free from the dust and moisture;  
If it gets wet please wipe it dry immediately.
3. Don't use any kind of chemical or any abrasive powder to clean the cabinet.
4. Don't use the telephone during the electrical storm;  
A lightning strike can cause serious damage.
5. As extra protection to disconnect the telephone during electrical storms.

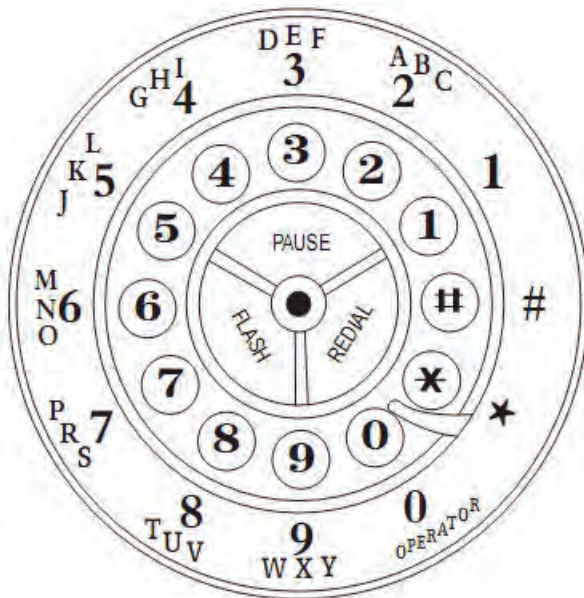

## How To Use

### 1. TONE/PLUSE SWITCH

On the bottom of telephone base is the P/T switchable dialer. If you have touch tone service then slide the switch to the T (Tone) position; if you have rotary dial service then slide the switch to the P (Pulse) position.

### 2. MAKING AND ANSWERING CALLS

To get a dial tone or answer an incoming call, lift the handset; To hang up, either replace the handset or simply press the **HANDSET CRADLE**.

### 3. RINGER SWITCH

You can choose the loudness of the ringing of the phone by the ringer switch located on the bottom of telephone base to either **HIGH** or **LOW**.

### 4. LAST NUMBER REDIAL (R)

The feature may be used to speed dial the last number dialed. Simply pick up the handset listen for dial tone and then momentarily press the **REDIAL** button, the last number dialed will dial out automatically.

### 5. FLASH FUNCTION

If you get a busy tone after entering the number, press the **FLASH** button first, after hearing the dial tone, institute a dial tone for another call. Press the **FLASH** button to terminate a call, and institute a dial tone for another call to getting another call from call waiting.

### 6. PAUSE FUNCTION

In some cases, such as **PABX** or Long distance service, a pause should be inserted in dialing sequence. The **PAUSE** button can be insert about 4 seconds interval with no dial output.

## Features:

- Tone/Pulse Switch
- Touch-Tone Buttons
- Last Number Redial Function
- Classic Design with Modern Technology
- Ringer High/Low Ringer Volume Selection
- Functional Crank Handle And Box, As Introduced In The 1920s
- Handcrafted Wood and Veneer Construction with Brushed Bronze-Plated Hardware
- **Country Wall Phone with Classic Design:**  
Authentic Reproduction of Early American Heritage Telephones



Handset **Jack**



**PYLE**<sup>®</sup>  
*Vintage*

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)

