


QUICK GUIDE

REPLACEMENT FILTER

USED IN:

PSLAPU35 Air Filter

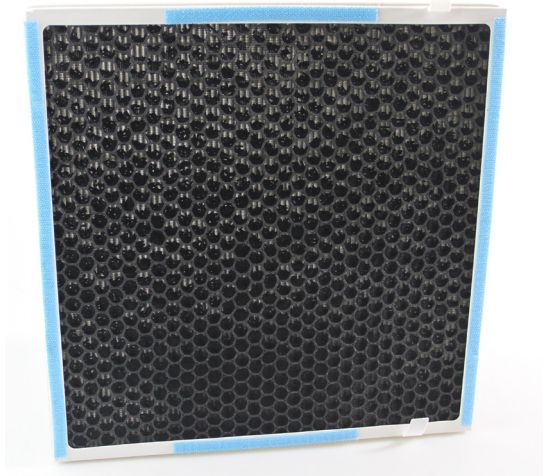


MODEL: **PRTSLAPFT1**

INSTALLING & REMOVING FILTERS

The POWER light flickering continuously indicates that it is time to replace the filter. Replace the filter according to the directions then press the POWER/UV-C button and hold for 5 seconds to restart the system. The light will stop flickering.

**Combination Filter will last approximately 6 months.*

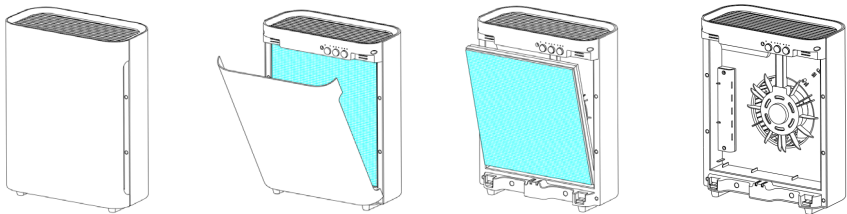

1. Open the front cover from the top.
2. Remove the combination filter by pulling the two strips.
3. Insert new **Combination Filter** into the unit. Consult the strips on the filter for correct installation direction.
4. Reattach the extra **Pre-filter** to the **Combination Filter**.
5. Reattach the front cover of the unit and securely latch into place.
6. Press and hold the **POWER/UV-C** Button for 5 seconds to reset Filter Change Indicator.