

PYLE
PyleUSA.com

PYLE
PyleUSA.com



VISIT US ONLINE:
Have a question?
Need service or repair?
Want to leave a comment?
PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com



PSBV110B

Wave Base Wireless BT Tabletop Soundbar

Digital Speaker System with Remote Control,
AUX (3.5mm) & Optical In, USB In

USER GUIDE

Before using your new product, please read these instructions to prevent any damage.

Important safety instructions

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping, or splashing, and no objects filled with liquids, such as vases, shall be placed on it.

Using close to a TV or computer

Some older TVs and computer monitors are magnetically sensitive devices and as such are likely to suffer discoloration or picture distortion when conventional speakers are placed nearby. If discoloration problems persist, try moving the soundbar away from your TV or monitor.

Placement


- Sensitive to extreme temperatures and humidity. Do not put it in locations subject to direct sunlight or in humid places, such as near an air conditioner, humidifier, bathroom, or kitchen.
- Do not put water or other liquids close to the soundbar. If liquid is spilled over the soundbar, it may be damaged.
- The soundbar should be placed on a sturdy, flat surface that is free from vibration, or mounted on a wall. Do not put the soundbar on an uneven or unstable surface, where it may fall and cause damage.

This user manual explains how to correctly install, operate, and get the best performance from your Home Theater Wireless BT Soundbar Speaker. Read this user manual carefully before installing your system, and then keep it handy for quick reference.

AUX FUNCTION

1. Put the 3.5mm cable into the Aux-in port and the other side into the mobile device.
2. Short press "**MODE**" into Aux in mode, with indication of Line-in, the green light will be lit.
3. Hold the **VOL-/PREV** on the sound bar to decrease the volume.
4. Hold the **VOL+/NEXT** on the sound bar to increase the volume.

FUNCTION DESCRIPTION

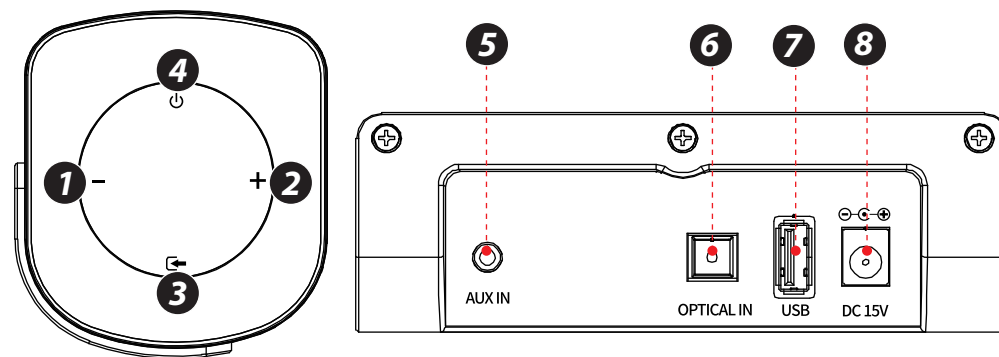


FUNCTION DESCRIPTION

1. **VOL-/PREV:** Press and hold to decrease the volume, press to skip to previous track.
2. **VOL+/NEXT:** Press and hold to increase the volume, press to skip to next track.
3. **Mode:** Press to change between modes **AUX/OPTICAL/USB/BT**.
4. **Power:** Press and hold to switch **ON/OFF** the sound bar. Press to **play/pause** music.
5. **AUX IN** Port.
6. **Optical** Port.
7. **USB** Port.
8. **DC IN** Port.

Note: The RC sensor is at the front of the sound bar.

REMOTE CONTROL FUNCTIONS

1. **Power:** Switch on or to standby
2. **Mute/Unmute**
3. Press to enter **USB Mode** when USB is Plugged in.
4. Press to enter **AUX Mode**
5. Press to enter **BT Mode**
6. Press to enter **OPT Mode**
7. Press to **Next track** on USB/BT Mode; Press and hold to fast forward on USB Mode
8. Press to **Previous Track** on USB/BT Mode; Press and hold to fast rewind on USB Mode
9. Press to **Play/Pause** on USB/BT Mode. In BT, press and hold to disconnect current connection and enter pairing mode. Press to mute/unmute in AUX or Optical mode.
10. Press for **Volume +**; Press and hold for fast Volume increase.
11. Press for **Volume -**; Press and hold for fast Volume decrease.
12. **EQ** button

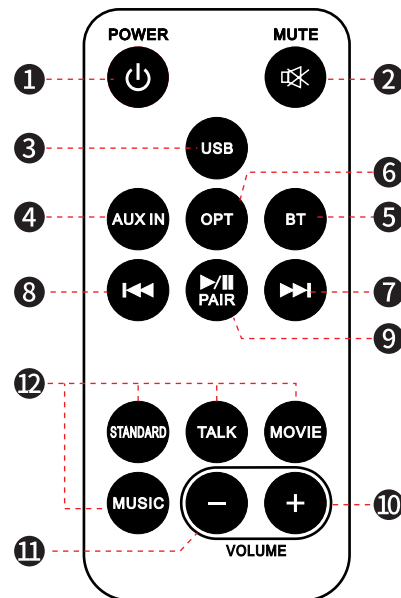

OPERATION INSTRUCTION

ON/OFF Switch

1. Connect the DC port of adapter to the sound bar then connect the power cord to a wall socket
2. Press the "**POWER**" to switch **ON** the sound bar, and it will enter BT mode automatically, with both sound alerts blue LED flashes quickly; press and hold the "**POWER**" again to switch **OFF**.
3. The Soundbar automatically turns **OFF** after 15 minutes idle.

WIRELESS BT CONNECTION

1. Put the soundbar near the BT device.
2. Switch **ON** the **PSBV110B**, an alert sound will appear and blue LED flashes quickly, which means it is ready for pairing.
3. Turn **ON** the **BT** function of the mobile device, search for "**PYLE**" and connect to it once found. If a Passkey is requested, enter "**0000**".
4. An alert will appear when connected, and the blue LED light will be on.
5. The soundbar will reconnect to the last paired device when switched on, If it doesn't connect, the soundbar will enter pairing mode automatically.

OPTICAL FUNCTION

1. Plug the optical cable into the optical port and the other side to TV or other device with optical/digital port.
2. Short press "**MODE**" into optical mode, LED lights (white) will light indicating "**optical**", music will start playing.

USB FUNCTION

1. Press "**MODE**" to USB mode, red LED lights on.
2. Press "**POWER**" on Soundbar or "**PLAY/PAUSE**" on remote control to play/pause.
3. Press **VOL-/PREV** or **VOL+/PREV** to go to previous/next song.

California Prop 65 Warning

⚠ WARNING:

This product contains Nickel carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov