



PSBV210WIFI

Sound Bar

User Manual



TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
IMPORTANT SAFETY INSTRUCTION.....	2-3
FEATURES	3
SPECIFICATIONS.....	4
PLACING THE UNIT.....	4
SYSTEMS CONNECTIONS	5
1.CONNECT POWER SUPPLY	5
2.CONNECT WITH PC&MP3.....	5
3. CONNECT WITH TV/DVD	6
FRONT PANEL FUNCTIONS.....	7
BACK PANEL FUNCTIONS	7
REMOTE CONTROL FUNCTIONS	8
HOW TO USE THE REMOTE CONTROL	9
OPERATIONS	10
1.GENERAL OPERATION	10
2.LISTEN TO FM RADIO	11
3.SD/USB SLOT OPERATION.....	12
4. HOW TO OPERATE BLUETOOTH FUNCTIONS.....	12/13
PACKAGE CONTENTS.....	13
MOBILE PHONE CONNECT WITH WIFI SOUND BAR	14
SET MULTIDEVICE TO ONE GROUP.....	15/16
MUZO APP MAIN FUNCTIONS.....	16
MUZO PLAYER ICON FUNCTION.....	17
UPGRADE MUZO APP ON LINE.....	18

IMPORTANT SAFETY INSTRUCTIONS

Warning

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Dangerous high voltages are preset inside the enclosure. Do not open the cabinet, refer to qualified personnel only.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert user to the presence of non-insulated “dangerous voltage” within the products’ enclosure, that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

1. Read these instructions

All the safety and operating instructions should be read before the product is operated.

2. Keep these instructions

The safety and operating instructions should be retained for future reference

3. Follow all instructions

All operating and use instructions should be followed.

4. Do not use this apparatus near water

Do not use this product near water and moisture, for example: near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool.

5. Clean only with dry cloth

Unplug this product from the wall outlet before cleaning. Do not use liquid cleansers or aerosol cleansers. Use a dry cloth for cleaning.

6. Do not block any ventilation openings.

Slots and openings in the cabinet and in the back or bottom are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating. These openings must NOT be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface.

7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

8. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus.

9. Unplug this apparatus during lightning storms or when unused for long period of time.

10. Power source

The product should be operated only from the type of power source indicated on the rear of the unit.

11. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

12. Object and liquid entry

Never push objects of any kind into this product through as they may touch dangerous voltage points or short out parts that could result in fire or electric shock.

Never spill or spray any type of liquid on the product.

13. Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

FEATURES

- Entire wooden case, piano style painted front panel with blue backlight LCD display
- 3D technology for true surround sound
- FM stereo radio with automatic search and can store 30 stations.
- USB 2.0 host and SD/MMC connector for external moving HD, flash drive, SD/MMC card, can play MP3, WMA, FLAC format music.
- INPUT, STANDBY,  PLAY/PAUSE/PHONE,  VOL + and  VOL- buttons.
- AUX1, AUX2, PC/MP3/FM/ANT inputs.
- Bluetooth & hands-free functions
- 1x5.25 woofer, 2x3" full range speaker and 2x1" tweeter with remote control
- WPS pair & WIFI cloud music play


SPECIFICATIONS

Power Supply.....	AC:100-24V, 50/60Hz
Peak RMS Output.....	300W
Input Sensitivity.....	400mV \pm 50mA
S/N(A Weight).....	\geq 80dB
Channel Separated Rate (1KHz).....	\geq 40dB
Woofer Impedance.....	8ohm
Tweeter and full range speaker impedance.....	4ohm
THD (1KHz, 1W, 8Ohm).....	\leq 0.5%
Frequency Response	20Hz-20KHz
Dimensions (WXDXH).....	23.8" x 9.8" x 4.7"
Weight.....	13 lbs.

NOTED: Specifications are subject to change for improvement without prior notice.

PLACING THE UNIT


Take advantage of 3D stereo technology, you can listen to surround sound without extra speakers. Placing your system as follows, and turn on BASS+/- or TRE+/- effect by pressing these Buttons on the remote control, you will get the surround sound effects.

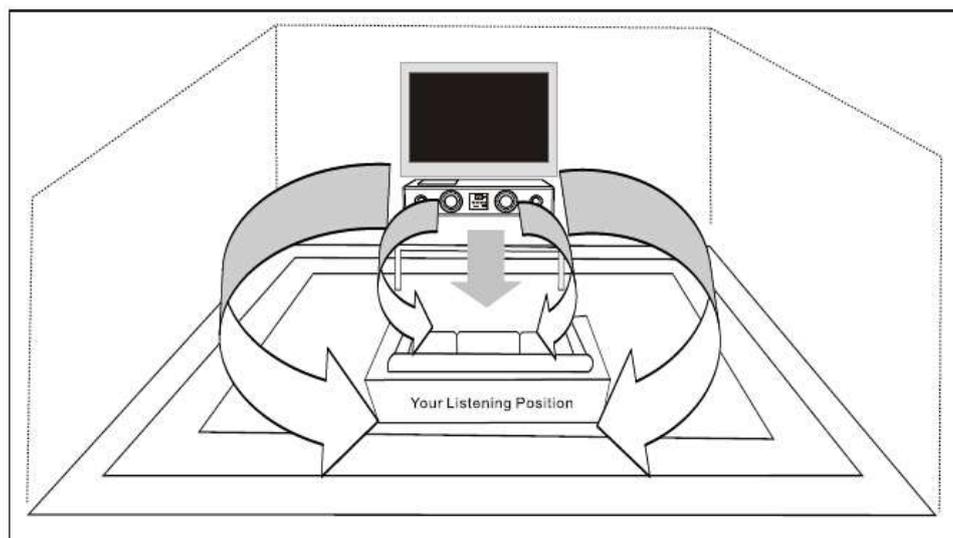

SYSTEM CONNECTIONS


1. CONNECT POWER SUPPLY

Insert the power plug into a wall socket; Make sure the voltage marked at the rear panel is same as your AC power. Do not operate with wet hands to avoid electric shock

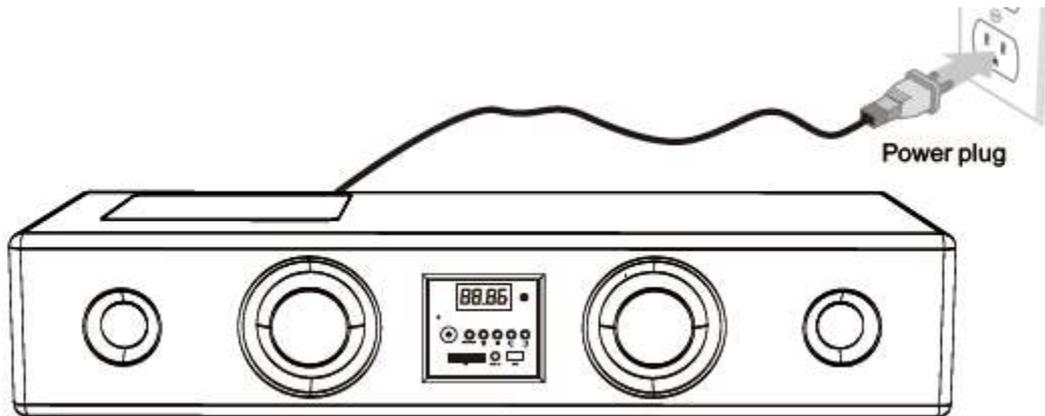


2. CONNECT WITH PC/MP3

To listen to the sound source from PC(Computer) or MP3 Players, connect the unit with the external device as below.

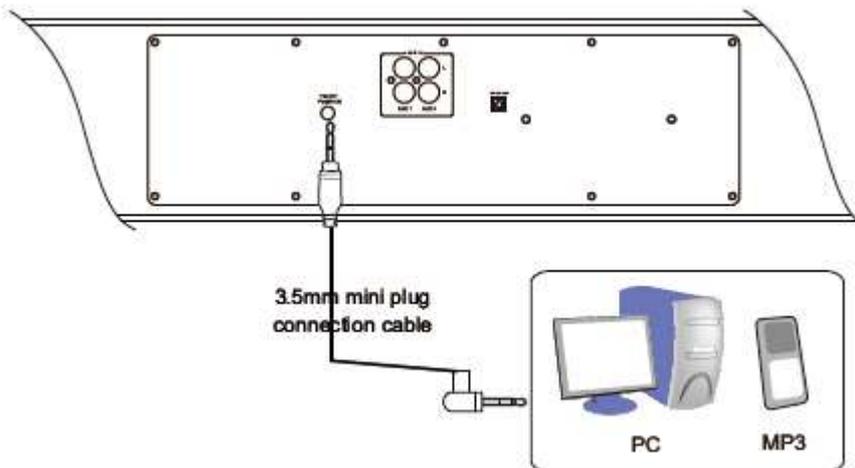


3. CONNECT WITH TV/DVD

To listen to the sound source from Television and/or CD/VCR/DVD/DVR players, connect the unit with the external device as below.

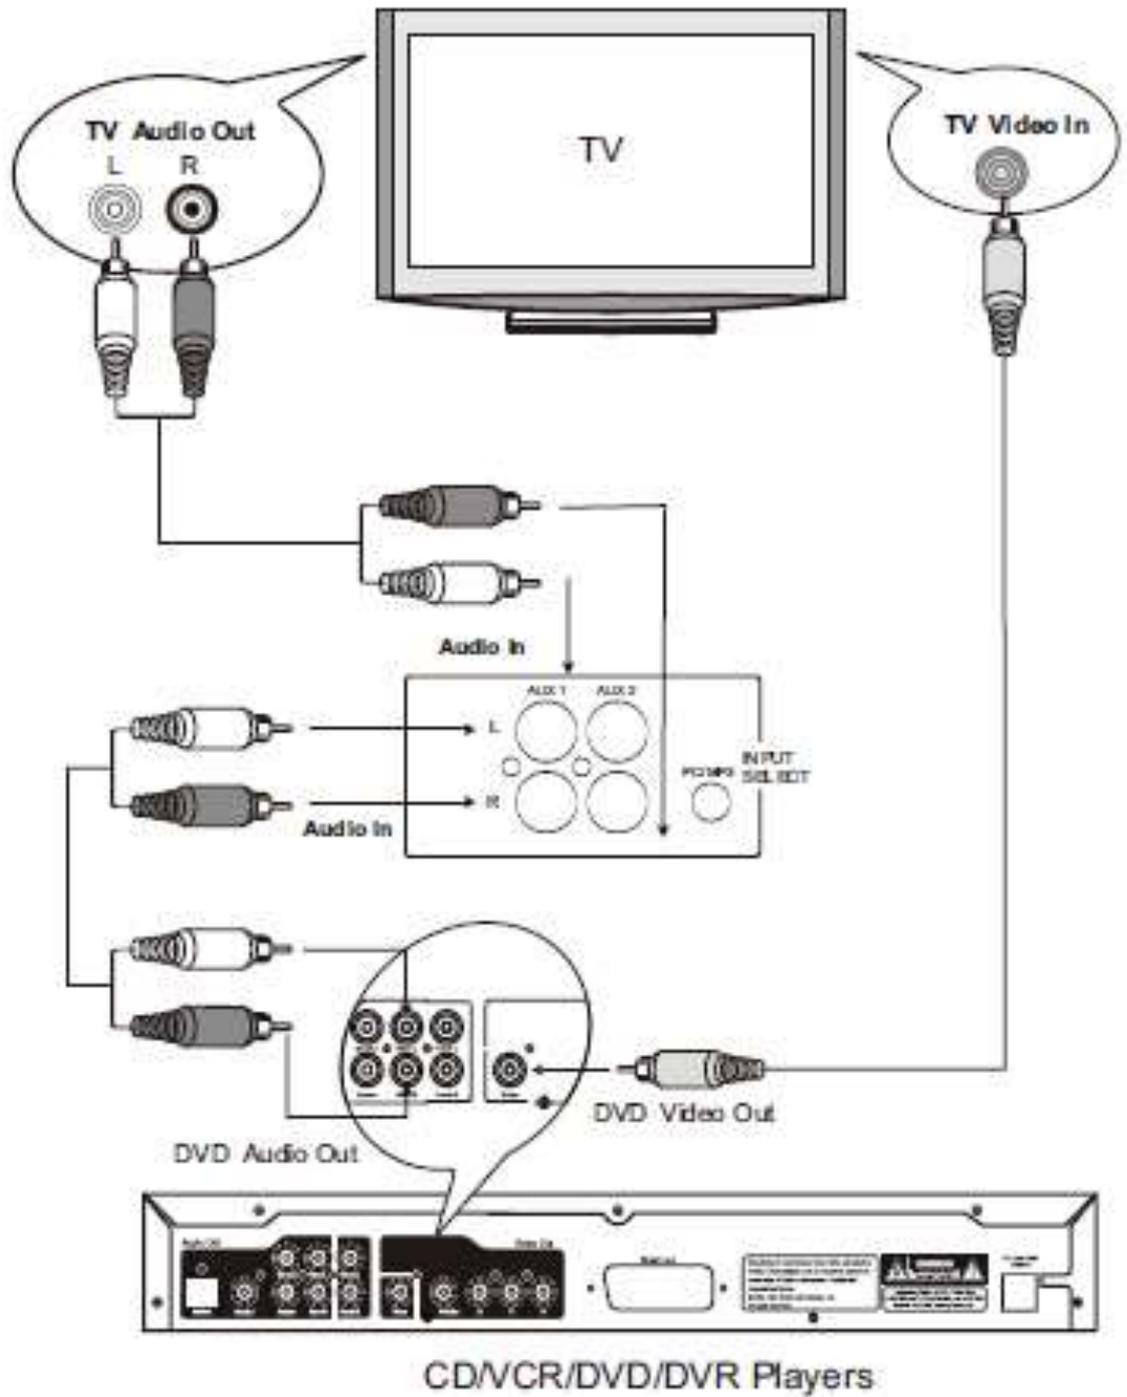

FRONT PANEL FUNCTIONS

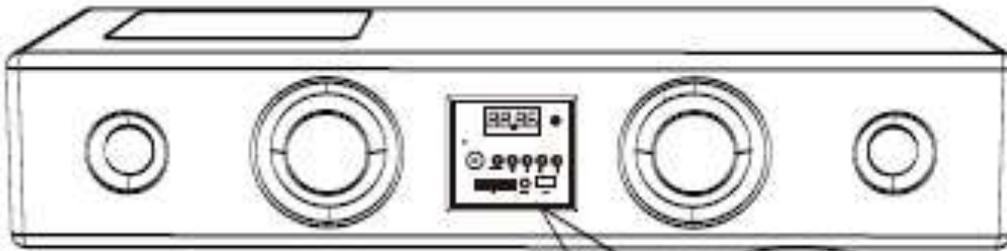


1. Power switch
2. Standby/Input light press for input hold for standby
3. WPS for WIFI Pair
4. Play/pause
5. LCD display
6. Power indicator
7. Remote sensor
8. Pre / VOL-
9. Next / VOL+
10. USB host
11. SD/MMC slot
12. 3.5mm LINE IN

EQ functions display

T. B1	— Treble Booster	TL P1	— Flat
T. B2	— Treble Reducer	TL P2	— Classic 1
POP	— Pop	S. B1	— Vocal Booster
BASS	— Bass	S. B2	— Bass Booster
PHS	— HPS	S. B3	— Bass Reducer


BACK PANEL FUNCTIONS

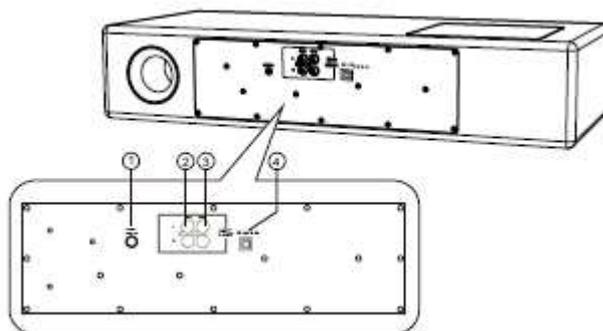

1. PC mp3 FM ANT input jack
2. AUX 1 L+R input jacks.
3. AUX 2 L+R input jacks
4. DC:18V2.5A

REMOTE CONTROL FUNCTIONS

1. **STANDY-BY** : Press to turn on the unit from standby mode,
Press again to turn the unit off (stand -by)
2. **3D**: Press to turn on the surround sound effect,
Press again to turn it off
3. **MUTE**: Press to turn off the sound temporary,
press again to turn the sound back.
4. **INPUT**: Press repeatedly to select the input source as desired.
5. **CH+**: In FM radio mode, press to search the stored upper channels.
6. **EQ**:10 Mode for choose, in FM mode press choose stereo or mono
7.  In card, USB mode or blue mode press to choose previous file, press to go to lower frequency radio stations.
8.  In Card, USB mode for BLUE mode press to play/pause; press & hold to fast forward; in FM radio mode press to store the current radio station into the memory
9.  :In card, USB mode or BLUE mode press to choose next file, press & hold to fast forward; in FM radio mode press to go to upper frequency radio stations.
10. **Scan**: In FM mode press to auto search and store working stations, in BLUE mode press enter paired mode then display show “0000”
11. **CH-**: In FM radio mode, press to search the stored lower channels.
12. **REPEAT**: In music mode press for choose repeat ONE or ALL
13. **VOL-**: Press to reduce the sound level.
14. **VOL+**: Press to increase the sound level.
15. **BASS-**: Press to reduce the sound level of woofer
16. **BASS+**: Press to increase the sound level of woofer
17. **TRE-**: Press to reduce the Treble
18. **RESET**: Press to reset the sound level to default setting.
19. **TRE+**: Press to increase the Treble

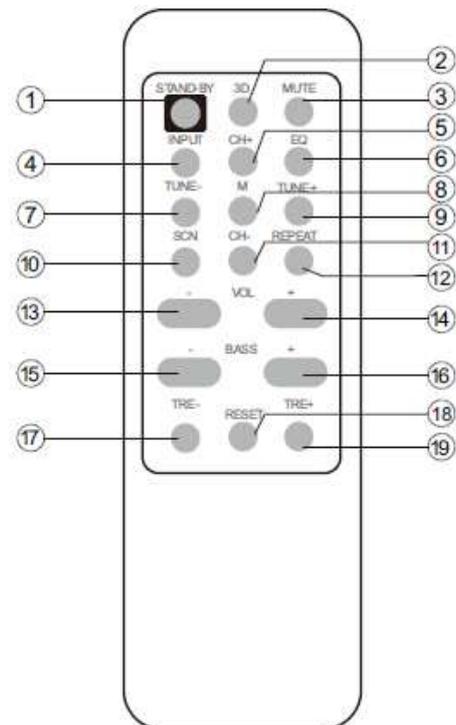


HOW TO USE THE REMOTE CONTROL

1. Battery Installation:

- a. Slide and lift up the battery door.
- b. Install two “AAA” size batteries (included) into the battery compartment according to the polarity markings inside battery compartment.
- c. Replace the battery door

BATTERY PRECAUTIONS


Follow these precautions when using batteries in this device.

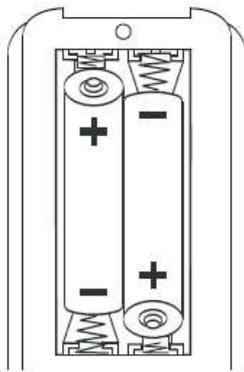

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated next to the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
4. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries which are not designed to be recharged. They can overheat and rupture.
6. Do not dispose of batteries in fire. Batteries may explode or leak.

2. Effective scope of the remote control

The remote control has an operating range which is less than 16 feet and 30 degree angle left or right away from the system.

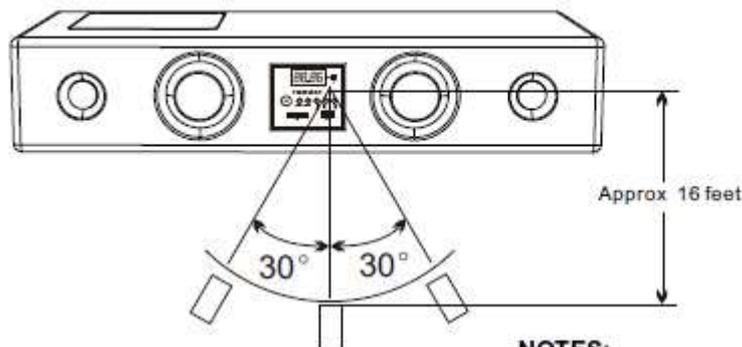

NOTES:

When there is an obstacle between the unit and the transmitter, the transmitter may not operate.

When direct sunlight, an incandescent lamp, fluorescent lamp or any other strong light shines on the remote sensor of the unit, the remote operation may be unstable.

OPERATIONS


1. GENERAL OPERATION

- 1) Press the **POWER** button on the front panel of the unit to turn the unit to Standby mode.
- 2) Press the **STANDBY** button on the unit or remote control to power on the unit
- 3) Press the **INPUT** button on the unit or remote control repeatedly to select the input sources to USB, CARD, FM radio, Blue, AUX1, AUX2, PC as desired.
- 4) Hold Press the (**⏮** or **⏭**) **VOL+/-** buttons on the unit or press it on the remote control to adjust volume as desired. Short Press (**⏮** or **⏭**) for choose PRE or NEXT song.
- 5) Press the **Bass+/-** buttons on the remote control to adjust the sound level of woofer.
- 6) Press the **3D** button on the remote control to turn the Surround Sound Effect ON, press again to turn it OFF.
- 7) During listening, press the **MUTE** button on remote control to turn off the sound temporary (**MUTE** will appear on the display), press again to turn the sound back on.
- 8) During listening, press the **RESET** button on the remote control to reset the sound level to default settings.
- 9) When finished listening, press the **STANDBY** button on the unit of remote control to turn off the unit (standby mode)
- 10) **WPS** only for WIFI pair with smart phone

NOTE: If the will not use the unit for long period of time, press the **POWER** button on the front panel of the unit to cut off the AC supply.

2. LISTEN TO FM RADIO


Connect the supplied 3.5mm audio cable to FM ANT jack on the rear of the unit as the figure below. Extend the wire and relocate it to get the best reception.

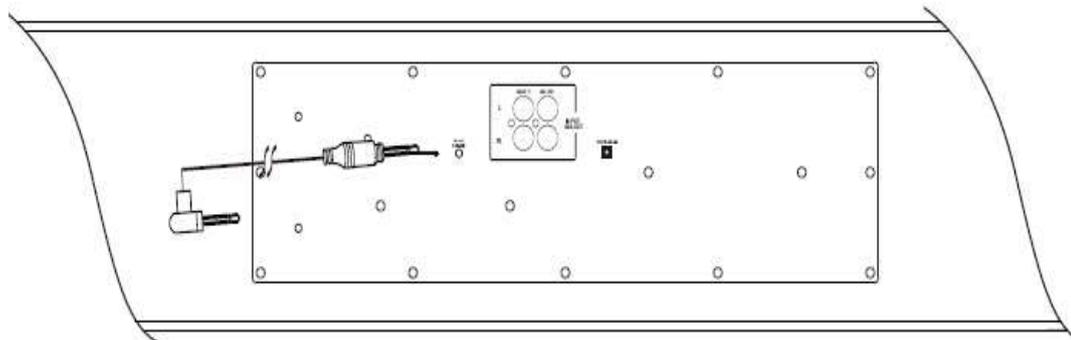

1. Power On the unit as previous procedures.
2. Press the **INPUT** button on the unit or remote control repeatedly until FM frequency appears on the display.
3. Press **◀◀** or **▶▶** button on the remote control repeatedly to search the specific radio stations. (To search the radio stations in auto mode. Press and hold **◀◀** or **▶▶** button two seconds then release the button. The unit will auto search the next available radio station then stop. Repeat above procedure to search all available radio stations.)
4. To store the current received radio station into the memory. Press the **MEMORY** **▶||/M** button on the remote control, **CH01** will appear on the display. Press the **CH+/CH-** buttons repeatedly to select channel number as desired. Press the **MEMORY** button again to store the current radio station to the selected channel.
5. Listen the preset channels; press the **CH+/CH-** buttons on the remote control repeatedly until the desired channel appears on the display.
6. Press the **EQ** button on the remote control repeatedly to select stereo or mono as desired. **STEREO** or **MONO** will appear on the display.
7. Press the **SCAN** button on the remote control to auto search the working radio station and auto store in memory then press **CH+/CH-** to choose the desired radio station.

3. SD/USB SLOT OPERATION

Before connecting USB flash drive or SD cards please make sure they are in right directions. Refer following figure.

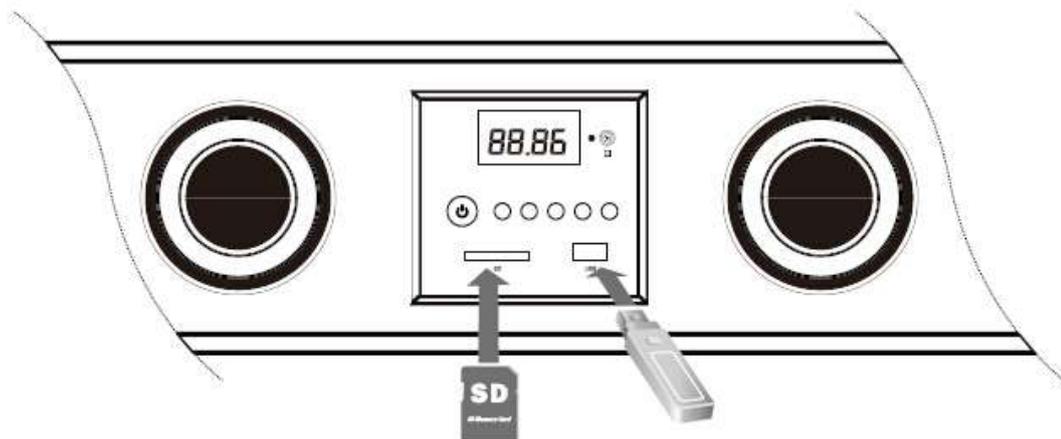

1. Power **ON** the unit as previous procedures.
2. Insert **SD** cards to **SD** slot or **USB** memory stick to **USB** slot.
3. Press **INPUT** button on the unit or remote control repeatedly until **CARD** or **USB** is displayed. To play files in USB, choose **USB**.
To play files in SD card choose **CARD**.
4. The unit will play the **MP3/WMA/ FLAC** songs automatically.
5. Press **⏮** or **⏭** button on the remote control to choose previous or next songs. Press and hold the buttons to fast rewind/fast forward.
6. When you turn off the unit and turn it on again, the unit will automatically play the last song which you played before turnoff.

4. HOW TO OPERATE BLUETOOTH FUNCTIONS

1. Press "**INPUT**" to enter "**BLUE**" mode then unit will auto show "**0000**" on display when connecting with your mobile phone in first times. (The unit will auto enter "**BLUE**" mode when there aren't any USB sticker or SD cards in unit.)
2. Use mobile phone Bluetooth search and choose "**BT-speaker**" enter "**0000**" for paired with unit. The unit will control your mobile phone music by press **⏭** or **⏮** VOL+ and **⏭**, these keys had same functions with "**USB/CARD**" mode.

3. When mobile phone had a call the unit will show “CALL” Press  to listening phone and the meanwhile you will enter hands free mode, the effect distance will be 1 meter. Hang up by repeat press  the unit will resume to play music.
4. The Bluetooth of unit will auto search and connecting with the last mobile phone after power off.
5. Our products had pass BLUETOOTH QDID certificates.

PACKAGE CONTENTS


1PC Owner's Manual




2PCS AAA Batteries



1PC 3.5mm/3.5mm
plug connection cable

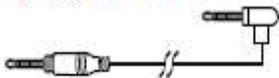

1PC Remote Control

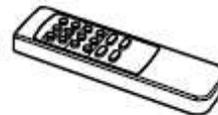

MOBILE PHONE CONNECT WITH WIFI SOUND BAR



Initial connect and set WIFI Sound bar

(Only initial use device should following below steps)

1. Initial use, you will need to install the APP software.

Android phone go to **Google play** search “MUZO player” download and install, IOS systems phone go to **APPSTORE** search “MUZO player” download and install it.

Turn unit power ON, the WIFI systems takes about 20” to start then show “SSU-SCH” on LCD.

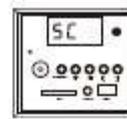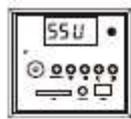


Open APP click 



Click "WIFI Setting"



show WPS icon

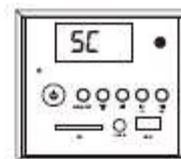

press  button will hear a remind sound



Input password and click Connect



Go to cloud to play the music after connected succeeded

SET MULTIDEVICE TO ONE GROUP

ADD MULTIDEVICE

Following below steps to set multi-device

1. Click the device LIST+
2. Add the extra device steps as same as initial add device
3. You will see the added device show under your list after you finished the steps.



COMBINE MULTIDEVICE OPERATES


Use the finger hold press the added device and then drag up the devices will combine together.



Drug up added device

Combine together

SET MULTIDEVICE TO DIFFERENTS CHANNELS

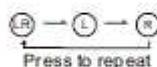

Set one device to
" L " channel


Set another device to
" R " channel

SEPARATE MULTDEVICE

The device will separate after you drag down the added device then you can play 2 different songs.



Drag down the added device

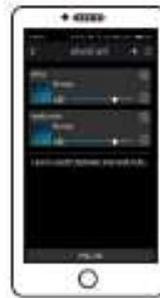

Separate the multidevice

MUZO APP MAIN FUNCTIONS



Main Menu



Music Menu



Music Main list

Hold press music menu slide up change to music list, slide down to return.




Music Menu



Music List

MUZO PLAYER ICON FUNCTIONS

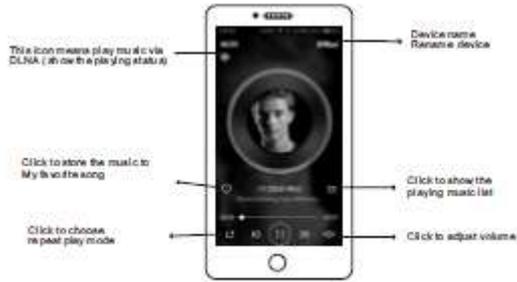

UPGRADE MUZO APP ON LINE

The upgrade will fail if power off or WIFI off during the upgrade procedures, the device will restart after upgrade succeeded.



Click "New" enter upgrade
MuZoAPP



MuZo App has new versions it will restart
your upgrade, just click "Upgrade" to upgrade