

WATERPROOF MP3 PLAYER

PSHWPMP3



User Manual


Music Format: MP3/WMA
USB Interface: USB 2.0

1. Parts


1) Item List

- PSHWPMP3 player
- Waterproof earphone (ear-hanger type, long/short)
- Earbud set
- Goggle clip holder
- USB cable (special)
- User Manual
- Normal HiFi Earphone (Non-waterproof)

2) Connections

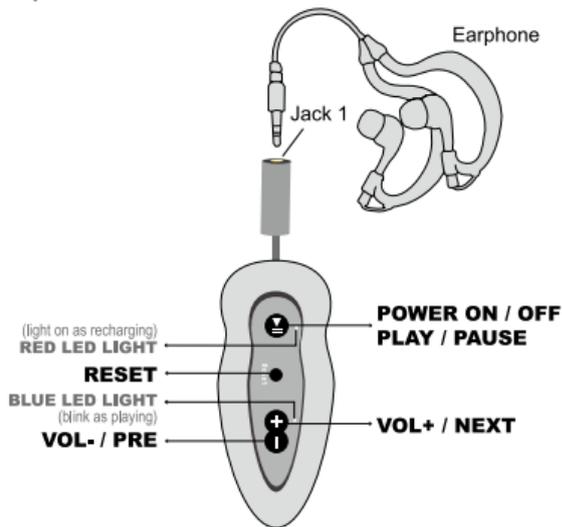

 3) USB Charging and Music Transfer



2. Operation Instructions

- 1) To switch the MP3 player on, press the **▶** button for three seconds till LED light goes on.
- 2) To switch it off, press the **⏻** button for three seconds till LED light goes off.
- 3) While playing music, tapping the **⊕** or **⊖** buttons once will skip a track or replay the previous one.
- 4) Press and hold the **⊕** or **⊖** button just the volume.

3. Charging

Insert the USB cable into jack 1 and connect it to the PC USB port. It is recommended that you leave your MP3 player to charge for minimum of 1 hour (or until the red LED light goes off) to ensure optimum battery life.

4. Transferring Music

Transferring music to your MP3

- 1) Insert the USB cable into jack 1 and connect it to a PC.
- 2) The MP3 player will appear as a removable drive in 'My Computer'.
- 3) Select the music files you want and simply drag

and drop them onto the MP3 player.

- 4) When you are finished transferring music, right-click on the MP3 player's icon and select 'eject'.
- 5) It is then safe to unplug.

5. Operating Diagrams



POWER ON



POWER OFF




HOLD TO ADJUST VOLUME



QUICK TAP TO SKIP TRACKS

6. Applications

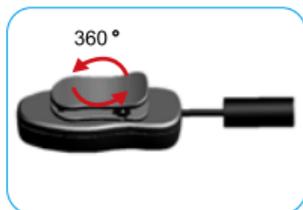

360 degree swivel clip



1. For Swimming



2. For Walking



3. For Cycling



4. For Skiing

Other Information

- Please be aware that swimming pool and sea water are corrosive and to keep your MP3 player in good condition we recommend that you rinse it in fresh water after use.
- The water will enter into the earphone and turns the voice down when you are swimming. The voice will turn up again when you shake off the water that inside the earphone.
- Your PSHWPMP3 MP3 player is waterproof down to a depth of 3 meters. It is suitable for use in the shower, bath or while swimming on the surface in a pool or in the sea.
- To ensure proper use, make sure you pull on the jack instead of the MP3 player.
- Do not connect your USB cable to the PC while the water remain inside your phone jack. It may cause short circuit and damage the system. Do shake off the water before the connection.



Note : User may find out the earphone lines are not equally in length. This is to be connected to PSHWPMP3 player which may be worn on user's right or left side on his head.