

Bug Zapper



WARNINGS:

1. Household use only. Suitable for indoor and outdoor use.
2. High voltage!  Do not touch the inner electric grids.
3. Never put metal objects inside the grids while in operation.
4. Keep away from flammable objects and high-temperature objects.
5. Check the local voltage before operating and plugging in.
6. Hang or place the unit where children cannot reach or access.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Keep the appliance and its cord out of reach of children.
9. This is not a toy and children should not play with it. Children should be supervised to ensure that they do not play with the appliance.
10. An electric shock hazard may exist if water is directed at the inside of the insect killer.
11. When using extension cords, keep the socket-outlet away from moisture and avoid damage to the cord.
12. The appliance is not to be used in locations where flammable vapor or explosive dust is likely to exist.
13. When hanging the zapper by the convenient top hook, make sure to only use the attached chain loop ring and hang the unit at the location with adequate bearing support. You must reduce the risk of the unit falling from any hanging distance and secure hanging safety.
14. The lamp in this appliance cannot be replaced. Scrap the appliance when the lamp ceases to operate.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Any other servicing should be performed by an authorized service representative.
16. Unplug the appliance before cleaning. Clean the plastic enclosure/ grille with dry clothes. Be sure to empty the collection tray every week or whenever needed.