

SereneLife



PSLHTM30

Electric Leaf Blower

Handheld Home Garden Corded Blower

USER MANUAL

WARNING! When using electric garden tools, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury.

IMPORTANT SAFETY INSTRUCTION

READ ALL INSTRUCTIONS BEFORE USING THIS BLOWER/ VACCUM

WARNING - To reduce the risk of fire, electric shock or injury

1. When servicing use only identical replacement parts.
2. To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other) and will require the use of a polarized extension cord. The appliance plug will fit into a polarized extension cord only one way. If the plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. This plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the proper wall outlet. Do not change the equipment plug, extension cord receptacle, or extension cord plug in any way.
3. **Avoid Dangerous Environment**
Don't use appliances in damp or wet locations.
4. Don't use while raining.
5. **Keep Children Away!**
All visitors should be kept at a distance from work area.
6. **Dress Properly** - Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and substantial footwear is recommended when working outdoors. Wear protective hair covering to contain long hair.
7. **Use Safety Glasses** - Always use face or dust mask if operation is dusty.
8. **Use Right Appliance** - Do not use appliance for any job except that for which it is intended.
9. Ground Fault Circuit Interrupter (**GFCI**) protection should be provided on the circuit(s) or outlet(s) to be used for the gardening appliance.

Receptacles are available having built-in GFCI protection and can be used for this measure of safety.

10. **Warning** - To reduce the risk of electric shock, use only with an extension cord intended for outdoor use, such as an extension cord of cord type SJTW.
11. **Extension Cord** - Make sure your extension cord is in good condition
When using an extension cord, be sure to use a cord that is heavy enough to carry the current your product will draw. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating.
12. **Avoid Unintentional Starting** - Don't carry plugged-in appliance with finger on the switch. Be sure switch is off when plugging in.
13. **Don't Abuse Cord** - Never carry appliance by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
14. Don't grasp the exposed cutting blades or cutting edges when picking up or holding the appliance.
15. **Don't Force Appliance** - It will do the job better and with less likelihood of a risk of injury at the rate for which it was designed.
16. **Don't Overreach** - Keep proper footing and balance at all times.
17. **Stay Alert** - Watch what you are doing. Use common sense.
Do not operate appliance when you're tired.
18. **Disconnect Appliance** - Disconnect the appliance from the power supply when not in use, before servicing, when changing accessories such as blades, and the like.
19. **Store Idle Appliances Indoors** - When not in use, appliances should be stored indoors in a dry, and high or locked-up place out of reach of children.
20. **Maintain Appliance With Care** - Keep cutting edge sharp and clean for best performance and to reduce the risk of injury. Follow instructions for lubricating and changing accessories. Inspect appliance cord periodically, and if damaged, have it repaired by an authorized service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean, and free from oil and grease.

21. **Check Damaged Parts** - Before further use of the appliance, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function.
22. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless indicated elsewhere in this manual.
23. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
24. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
25. Use only as described in this manual. Use only manufacturer's recommended attachments.
26. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
27. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. **Keep cord away from heated surfaces.**
28. Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord.
29. Do not handle plug or appliance with wet hands.
30. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow
31. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
32. Turn off all controls before unplugging.
33. Use extra care when cleaning on stairs
34. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
35. For Household Use Only.

36. **DOUBLE INSULATION** - When servicing, use only identical replacement parts.
37. **WARNING** - To reduce the risk of electric shock - Do not use on wet surfaces. Do not expose to rain. Store indoors.
38. **CAUTION** - To reduce the risk of injury from moving parts - unplug before servicing.
39. **WARNING** - To reduce the risk of electric shock - Unplug before cleaning or servicing.
40. **WARNING** - Be sure to keep every component assembled before you turn ON appliance.
41. **WARNING** - To reduce the risk of injury to persons, do not operate without guards in place.
42. **WARNING** - This appliance is provided with double insulation. Use only identical replacement parts. See instructions for Servicing of Double-Insulated Appliances.
43. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
44. Do not use without dust bag and/or filters in place.

SAVE THESE INSTRUCTION



SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding.

No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel.

Replacement parts for a double-insulated appliance must be identical to the parts they replace.

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

Work area

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Electrical Safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces such as pipes, radiators, ranges and refrigerators. There is an increased risk of electrical shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an outdoor extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.

Personal Safety

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use power tool while you're tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating power tools may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as a dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.

- Avoid accidental starting. Ensure the switch is in the off-position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the tool on. A wrench or a key that is left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities ensure that these are connected and properly used. Use of these devices can reduce dust related hazards.

Power tool use and care

1. Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
2. Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

6. **Keep cutting tools sharp and clean.** Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
7. Use the power tool, accessories and tool bits etc, in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work to be performed. Using the power tool for operations different from intended could result in a hazardous situation.

8-9. **Service**

Have your power tool serviced by a qualified by qualified repair personnel using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

10-11. **Additional safety rules for blower vacs.**




Always wear adequate protective clothing when operating the tool to avoid injuries to face, eyes, hands, feet, head or hearing. Use safety glasses or a face shield, high boots or sturdy shoes, long trousers, work gloves, a hard hat and ear defenders.











12. Do not start the tool when it is upside down or when it is not in operating position.
13. Switch the motor off and remove the plug when the tool is not being used, left unattended, being cleaned, being moved from one place to another or when the extension cord is entangled or damaged
14. Do not operate the tool near people, especially children or pets. Turn it off if they get too close. Maintain a safe distance of at least 5m from other people when using the tool.
15. Never direct the blower tube towards bystanders or pets. Never blow debris in the direction of bystanders or pets. The operator is responsible for accidents or hazards occurring to other people or their property.
16. Do not handle the plug or the tool with wet hands and do not use the tool in the rain.
17. Use only outdoor rated extension leads that are so marked. Keep the extension cord away from heat, oil and sharp edges.
18. Ensure that the extension lead is secured in a manner that prevents it from disconnecting from the plug whilst in use.




19. Keep all the air intakes and the blower tube free of dust, lint, hair and other material that may cause reduction in air flow.
20. Keep a balance and stable stance while using the tool.
21. Do not switch ON the tool in enclosed or poorly ventilated spaces or in the presence of inflammable and/or explosive substance such as liquids, gases and powders.
22. Do not get distracted and always concentrated on what you are doing. Use common sense. Never operate the tool when you are tired, sick or under the influence of alcohol or other drugs.
23. Do not operate this appliance with long loose hair or loose fitting jewellery. Tie long loose hair back and remove loose fitting jewellery.
24. Do not allow the blower vac to pick up any burning or smoldering materials like ashes cigarette butts etc.
25. Do not attempt to pick up breakable objects like glass, plastics, etc.
26. Do not use in vacuum operation without the collection bag fitted.
27. Do not use the blower vac in either vacuum or blower position on gravel surfaces.
28. Only operate the tool during broad daylight or with adequate artificial light.
29. When the tool is not in use, store it in a dry place and out of reach of children.
30. After use, disconnect the tool from the power supply and check for damage. If you have the slightest doubts, contract an authorized service centre.
31. Only use the tool according to the instructions given in this manual.
32. Check regularly that screws are tight.
33. Use only spare parts and accessories recommended by the manufacturer.
34. Do not try to repair the tool or access internal parts. Contract authorized service centers only

SYMBOLS

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SYMBOL	DESIGNATION/EXPLANATION
	Indicates a potential personal injury hazard.
	Read this safety and operating instructions in this booklet and keep it in a safe place for future reference.
	Always wear eye protection with side shields marked to comply with ANSI Z87.1, along with hearing protection.
	Do not expose to rain or use in damp locations.
	Failure to keep long hair away from the air inlet could result in personal injury.
	Do not operate without tubes in place.
	Failure to keep loose clothing from being drawn into air intake could result in personal injury.
	Double insulation
	WARNING! Keep all persons, especially children and domestic animals, at a safe distance of at least 6 meters, when operating the garden vacuum.
	WARNING! Switch the garden vacuum OFF and disconnect from the mains supply before making adjustments, cleaning blockages, or starting any cleaning and maintenance procedures.

	<p>WARNING! Dangerous feed orifice. Keep hands and feet out of the openings while the machine is running.</p>
	<p>WARNING! Rotating Fans. Keep hands and feet out of the openings while the machine is running.</p>
	<p>ENVIRONMENTAL PROTECTION Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.</p>

Know Your Blower/Vacuum

The safe use of this product requires an understanding of the information on the tool spacing and in this operator's manual as well as knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features spacing and safety rules.

MAIN BLOWER TUBE

The main blower tube can be easily installed on blower without any additional tools.

CORD RETAINER

A convenient cord retainer helps keep extension cord connection secure during spacing blower operation.

VACUUM TUBES

The mulching tubes can be added without any additional tools to provide mulching spacing and vacuuming functionality.

 
WARNING - Do not use this product if any parts on the Packing List are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

WARNING - If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

WARNING - Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

WARNING - Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

Description

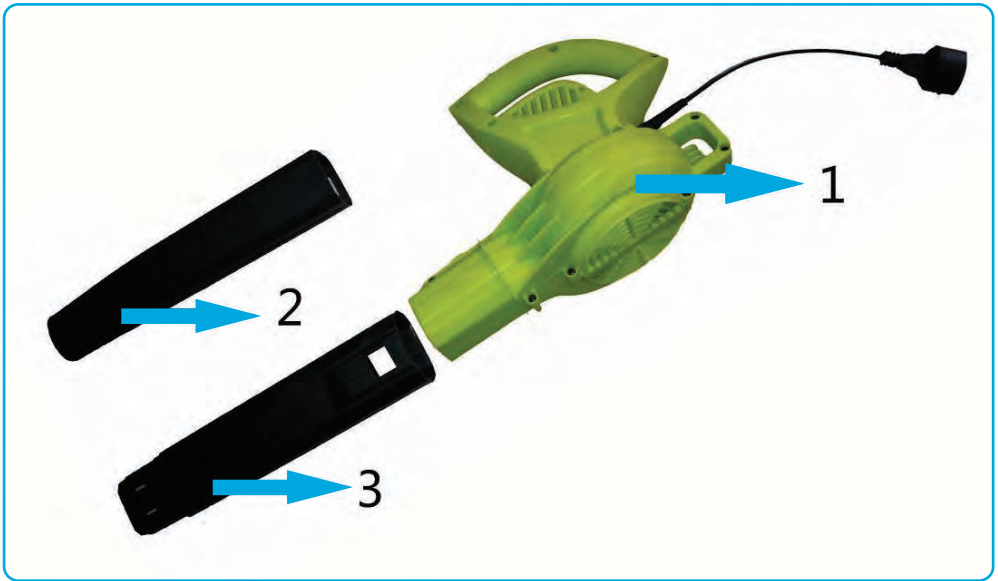

1 Main handle

2 Upper blow tube

3 Lower blow tube

UNPACKING

This product requires assembly

- Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing please call Customer service for assistance.

Extension cord

1. Polarized Appliance Connections

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other) and will require the use of a polarized extension cord. The appliance plug will fit into a polarized extension cord only one way. If the plug does not fit fully into the extension cord, reverse the plug. If the plug still does not fit, obtain a correct polarized extension cord. A polarized extension cord will require the use of a polarized wall outlet. This plug will fit into the polarized wall outlet only one way. If the plug does not fit fully into the wall outlet reverse the plug. If the plug still does not fit contact a qualified electrician to install the proper wall outlet. Do not change the equipment plug, extension cord receptacle or extension cord plug in any way.

WARNING - Check extension cords before each use. If damaged replace immediately. Never use product with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

Preparing the Blower Vacuum prior to use

 
The blower vacuum requires some assembly prior to use for the first time this includes the fitting of the blow/vacuum tube to the housing and the fitting of the collection bag.

Blower Function

A-1

2

3

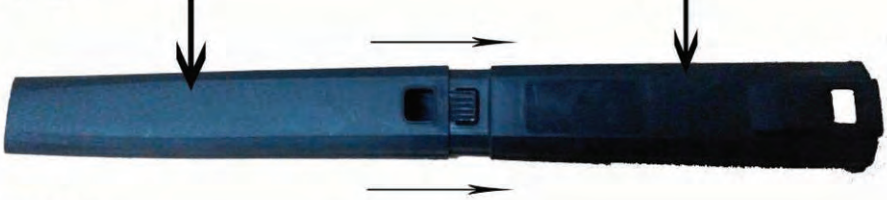


A-3



A-3

3

 1

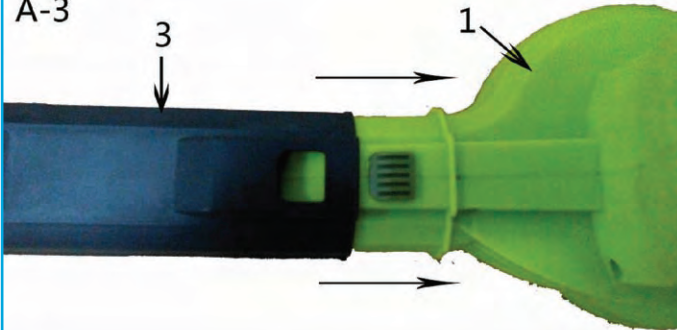

A-4



Assembly

- Plug upper blow tube 2 into lower blow tube 3 (fig. A-1)
- Plug lower blow tube 3 into main handle (fig. A-3)

Start-up

- Each time before you use the device, check that the mains plug and mains lead are undamaged.
- Insert the extension cable into the strain relief
- Move the switch to position 0,
- Plug in the mains plug.

Switch ON

Point the suction tube downwards when operating the device.

We recommend running the mains lead towards the rear over your shoulder

OPERATION

WARNING - Do not allow familiarity with products to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury.

WARNING - Always wear eye protection with side shields marked to comply with ANSI Z87.1, along with hearing protection. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.

WARNING - Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

APPLICATIONS

You may use this product for the purposes listed below:

- Clearing leaves and other yard debris from your lawn
- Keeping decks, patios, garages and driveways free from leaves, pine needles and other debris

STARTING/STOPPING THE BLOWER

Attach the outlet end of an extension cord to the plug on the rear of the blower.

NOTE: Use only approved outdoor extension cord as described previously in this manual.

Route the extension cord through the side of the loop located on the rear of the blower housing and place underneath the cord retainer.

OPERATING THE BLOWER

- To keep from scattering debris, blow around the outer edges of a debris pile. Never blow directly into the center of a pile.
- To reduce sound levels, limit the number of pieces of equipment used.
- Use rakes and brooms to loosen debris before blowing.
In dusty conditions, slightly dampen surfaces when water is available.
- Watch out for children, pets, open windows, or freshly washed cars, and safely blow debris away.
- Hold the blower with the handle in your right hand.
(Proper operating position is shown in figure 12.)
- Operate power equipment at reasonable hours only-- not early in the morning or late at night when people might be disturbed. Comply with the times listed in local ordinances.
- After using blowers or other equipment, CLEAN UP!
Dispose of debris properly.
- Attach the outlet end of an extension cord to the plug on the rear of the blower.
- **NOTE:** Use only an approved outdoor extension cord as described previously in this manual.
- Route the extension cord through the side of the loop located on the rear of the blower housing and place underneath the cord retainer.



MAINTENANCE

WARNING - When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

WARNING - Always wear eye protection with side shields marked to comply with ANSI Z87.1, along with hearing protection. Failure to do so could result in objects being thrown into your eyes, resulting in possible serious injury.

WARNING - Before inspecting, cleaning or servicing the machine, unplug the power cord and wait for all moving parts to stop. Failure to follow these instructions can result in serious personal injury or property damage.

WARNING - Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic, which may result in serious personal injury.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts.

Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean clothes to remove dirt, dust, oil, grease, etc.

STORAGE (1 MONTH OR LONGER)

- Clean all foreign materials from the blower.
- Store indoors in a place that is out of reach of children. Keep away from corrosive agents such as garden chemicals and de-icing salts.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Material is not sucked in properly (reduced vacuuming power)	<ol style="list-style-type: none">1. Machine is clogged or blocked2. Bag too full3. Speed setting too low (only for garden vacuum with fully variable speed control)4. Extension cable too long, or cross-section too small. Socket too far away from main connection, and cross-section of connection lead too small.	<ol style="list-style-type: none">1. Empty bag2. Adjust to higher speed3. Extension cable at least 16AWG, maximum 25 meter long. Cross-section of at least 14AWG in longer cables.
Unit can't blow or suck debris	<ol style="list-style-type: none">1. Bag full2. Blocked tube3. Blocked impeller4. Dirty bag5. Torn bag6. Bag unzipped7. Unit unplugged	<ol style="list-style-type: none">1. Empty the bag.2. Clear the blockage.3. Clear the blockage4. Clean the bag.5. Replace the bag.6. Zip up the bag.7. Plug into an outlet or an extension cord

<p>Unit will not start</p>	<ol style="list-style-type: none"> 1. Unit is unplugged. 2. Power/speed switch is in the OFF position. 3. Defective power switch. 4. Vacuum tubes are not correctly installed. 5. Intake port/cover is not closed. 6. House circuit may have tripped. 7. Connection lead defect. 	<ol style="list-style-type: none"> 1. Check cord to make sure it is plugged into an electrical outlet. 2. Slide switch to high or low. 3. Check vacuum tubes to ensure that they are allowing the switch to be engaged when correctly installed. 4. Ensure that port/cover is fully closed and locked. 5. Check wall circuit breaker panel and reset if necessary. 6. Check fuse (10 A) 7. Replace lead or have lead checked (electrician) Never use defect lead 8. To solve the problem, contact the manufacturer or an authorized company (see customer service list)
----------------------------	---	---

DISPOSAL



Waste electrical products should not be disposed of together with household waste. Please recycle where facilities exist.

Check with your local authority or retailer for recycling advice.

PSLHTM30

Electric Leaf Blower

Handheld Home Garden Corded Blower

Features:

- Home & Backyard Corded Blower
- High-Powered Blower Motor
- Simple Electric Plug-in Operation
- Lightweight, Handheld Design for Mobility
- Integrated Handle for One-Handed Operation
- Rugged & Heavy-Duty Design
- Blow Tube Disassembles for Easy Storage
- Perfect for Lawns, Gardens, Back Yards, Walkways, Landscapes

What's in the Box:

- Electric Leaf Blower
- Blow Tube Assembly, 2-Pc.

Technical Specs:

- Power Output: 6Amp
- Wind Speed/Blower Power: Up to 135 MPH,14K RPM
- Engine Type: Single Speed Brush Motor
- Noise rating: 99dB
- Construction Material: Engineered ABS
- Power Cable Length: 10.0' ft
- Power: 120V
- Total Assembled Dimensions (L x W x H): 12.6" x 7.3" x 9.6" -inches
- Sold as: 1

SereneLife



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE