

SereneLife



PSLHTM34

Electric Garden Blower, Vacuum & Shredder

Home Gardening & Backyard
Landscape System

USER MANUAL

Please read these instructions carefully and make sure you understand them before using.

Explanation of Symbols on your product

-  Read the user manual before using the machine
-  Whenever the machine is in use, safety goggles must be worn to safeguard against flying object, as must ear protectors, such as soundproof helmet, in order to protect the operator's hearing. If the operator is working in an area where there is a risk of falling objects, a safety helmet must be worn.
-  Wear gloves to protect your hands
-  Keep bystanders away
-  Do not expose to rain
-  **WARNING! Danger**
-  **WARNING!** Flying objects
-  Always switch **OFF** the device, disconnect the plug and wait until the cutting disc stops.
-  Rotating impeller blades can cause serious injury
-  Danger-rotating blades
-  Switch off and unplug the device before cleaning or performing maintenance on it

GENERAL POWER SOURCE SAFETY WARNINGS

WARNING! Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE

1. Working Area

- a. Keep working area clean and well lit.
Untidy and dark areas can lead to accidents.

- b. Do not operate power tools in potentially explosive surroundings, for example, in the presence of inflammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c. Keep children and bystanders at a distance when operating a power tool. Distractions can cause you to lose control of it.

2. Electrical Safety

- a. Always check that the power supply corresponds to the voltage on the rating plate.
- b. Power tool plugs must match the outlet. Never modify the plug in any way. Do not use adapter plugs with earthed power tools. Unmodified plugs and matching outlets will reduce the risk of an electric shock.
- c. Avoid body contact with earthed surfaces such as pipes, radiators, kitchen ranges and refrigerators. There is an increased risk of an electric shock if your body is earthed.
- d. **Do not expose power tools to rain or wet conditions.** If water gets inside a power tool, it will increase the risk of an electric shock.
- e. Do not damage the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of an electric shock.
- f. When operating a power tool outdoors, use an extension cable suitable for outdoor use. using a cord suitable for outdoor use reduces the risk of an electric shock.
- g. If operating a power tool in a damp location is unavoidable, use a power supply protected by a residual current device (RCD). Using an RCD reduces the risk of an electric shock.

3. Personal Safety

- a. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool when you are tired or under the influence of drugs, alcohol or medication.
A moment of inattention when operating a power tool may result in serious personal injury.

- b. Use safety equipment. Always wear eye protection. Using safety equipment such as a dust mask, non-skid safety shoes, a hard hat, or hearing protection whenever it is needed will reduce the risk of personal injury.
- c. Avoid accidental starts. Ensure the switch is in the off position before inserting the plug. Carrying power tools with your finger on the switch or plugging in power tools when the switch is in the on position makes accidents more likely.
- d. Remove any adjusting keys or spanners before turning on the power tool. A spanner or key left attached to a rotating part of the power tool may result in personal injury.
- e. Do not reach out too far. Keep your feet firmly on the ground at all times. This will enable you to retain control over the power tool in unexpected situations.
- f. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from the power tool. Loose clothes, jewellery or long hair can become entangled in the moving parts.
- g. If there are devices for connecting dust extraction and collection facilities, please ensure that they are attached and used correctly. Using such devices can reduce dust-related hazards.

4. Power Tool Use and Care

- a. Do not expect the power tool to do more than it can. Use the correct power tool for what you want to do. A power tool will achieve better results and be safer if used in the context for which it was designed.
- b. Do not use the power tool if the switch cannot turn it on and off. A power tool with a broken switch is dangerous and must be repaired.
- c. Disconnect the plug from the power source before making adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- d. Store power tools, when not in use, out of the reach of children and do not allow people who are not familiar with the power tool or these instructions to operate it. Power tools are potentially dangerous in the hands of untrained users.

- e. Maintain power tools. Check for misalignment or jammed moving parts, breakages or any other feature that might affect the operation of the power tool. If it is damaged, the power tool must be repaired. Many accidents are caused by using poorly maintained power tools.
- f. Keep cutting tools sharp and clean. Properly maintained cutting tools with sharp cutting edges are less likely to jam and are easier to control.
- g. Use the power tool, accessories and cutting tools, etc., in accordance with these instructions and in the manner intended for the particular type of power tool, taking into account the working conditions and the work which needs to be done. Using a power tool in ways for which it was not intended can lead to potentially hazardous situations.

5. Service

Your power tool should be serviced by a qualified specialist using only standard spare parts. This will ensure that it meets the required safety standards.



WARNING: Take care not to expose this tool to rain and remove plug from mains supply immediately if the supply cable is damaged.



WARNING: DO NOT OPERATE THIS TOOL WITH COLLECTION BAG REMOVED. Serious injury from the fan or flying debris could result.



WARNING: DO NOT OPERATE THIS TOOL WITH VACUUM/BLOWER TUBE REMOVED. Serious injury from the fan or flying debris could result.



WARNING: Electric shock could occur if used on wet surfaces. Do not expose to rain. Store indoors.




WARNING: Always wear eye protection to prevent rocks or debris from being blown or ricocheting into the eyes or face which can result in blindness or other serious injury.

MACHINE SAFETY WARNINGS

1. Always direct the cable to the rear, away from the appliance.
2. If a cord becomes damaged during use, disconnect the supply cord from the mains supply immediately.
3. Operate the appliance only in daylight or in good artificial light.
4. Walk, never run.
5. Keep all cooling air inlets clear.
6. Do not attempt to modify the power tool in any way. The use of any attachment or accessory over than those recommended in this instruction manual could result in damage to the power tool and injury to the operator.
7. Never feed hard objects such as stones, bottles, cans or pieces of metal into the **PSLHTM34**. They can cause damage to the machine and possibly injury to the operator and bystanders.
8. If a foreign body, or other debris, is accidentally feed into the PSLHTM34, stop it immediately and do not use the unit until it has been checked and you are sure that the entire unit is in a safe operating condition.
9. If the PSLHTM34 makes any unusual noise or starts to vibrate abnormally STOP immediately remove the plug from the mains supply and investigate the cause. Excessive vibration can cause damage to the unit and injury to the operator.
10. Never operate the appliance while people, especially children, or pets are nearby.
11. The operator or user is responsible for accidents or hazards occurring to other people or their property.
12. Before using, always check the appliance including supply and extension cord for signs of damage and aging.
13. Never operate the appliance with defective guards or shields, or without safety devices, for example debris collector in place.

General Information

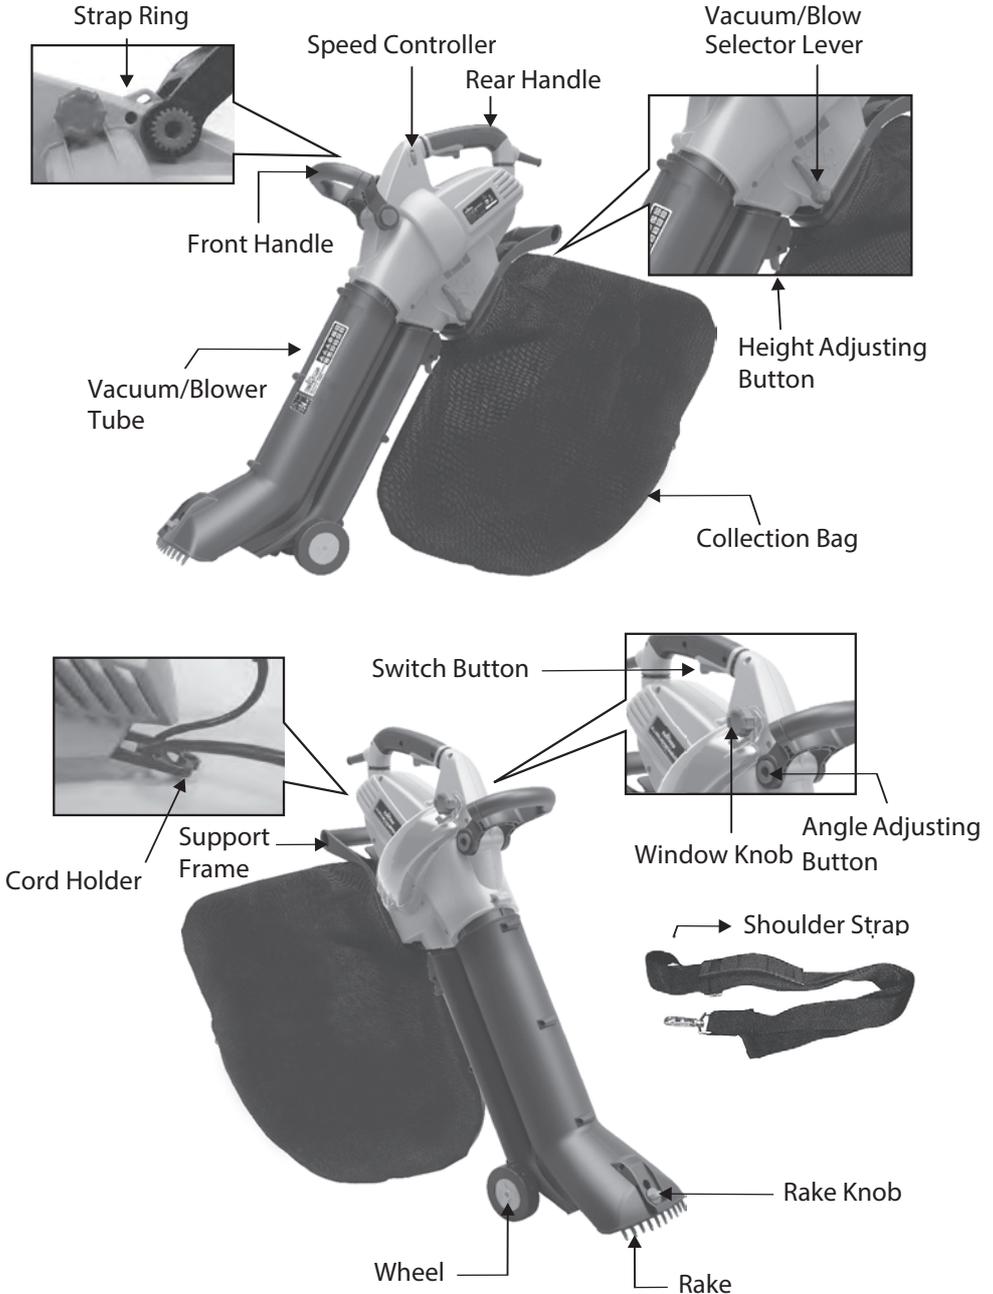

ASSEMBLY INSTRUCTIONS



WARNING: Always switch off tool and unplug cord from outlet before removing vacuum bag for emptying.

HEIGHT ADJUSTMENT

1. Press the height adjusting button (A) and slide the Vacuum/Blower tube (B) to desired length. (Fig. 1) It can be adjusted up to 300mm.

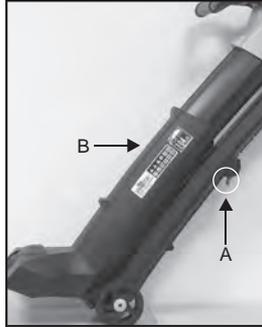


Fig. 1

SHOULDER STRAP INSTALLATION

1. Attach the strap clip to the top of main body. (Fig. 2)
2. With machine on operation's right hand side, place shoulder strap across chest and over left shoulder.



Fig. 2

FITTING THE COLLECTION BAG



Before fitting the collection bag ensure that the Vacuum/Blow selector lever operates smoothly and that it is not obstructed by debris from the previous use.

To Install the Collection Bag

1. Insert the buckle (A) of support frame into the slot of the housing. Frame will click into position when properly fitted. (Fig. 3A)

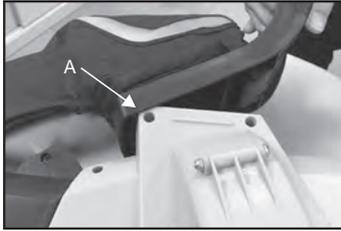


Fig. 3A

To Dismantle the Collection Bag

1. Press the spring lever (B) to release the bag. (Fig. 3B)

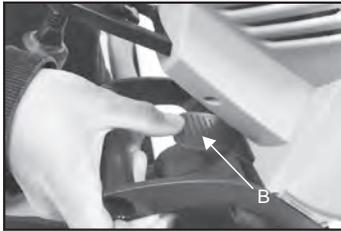


Fig. 3B

FRONT HANDLE ADJUSTMENT

1. Press the angle adjusting buttons (A) on the front handle. (Fig. 4)
2. Adjust the front handle (B) to a comfortable angle.
3. Release the adjusting buttons and the handle will automatically reset to lock position.

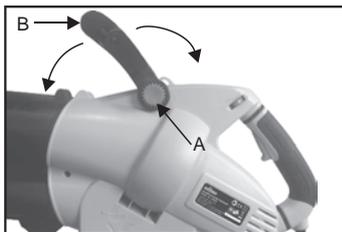


Fig. 4

RAKE ADJUSTMENT

1. Rotate the rake knob (A) 90 anticlockwise and then the rake will automatically pup-up. (Fig. 5A)
2. Lock the knob by rotating 90 clockwise. (Fig. 5B)

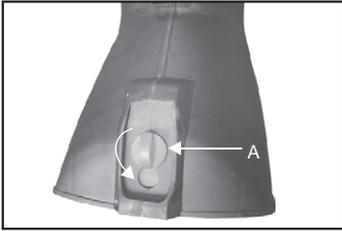


Fig. 5A

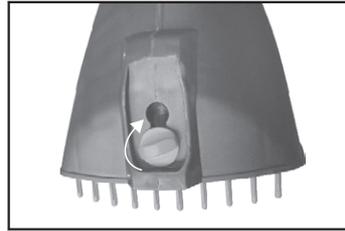


Fig. 5B

OPERATION INSTRUCTIONS

Before Starting

Plug the Blower/Vacuum/Shredder into the mains supply via the (R.C.D.) and switch on. Check that the (R.C.D.) is operating correctly.

Starting the Blower/Vacuum/Shredder

To start the Blower/Vacuum/Shredder ensure that the Vacuum/Blower tube is fitted correctly and attach the collection bag. Without the collection bag assembled, you cannot start the Blower/Vacuum/Shredder, since serious injury from the fan or flying debris could result.



WARNING: Before selecting either Vacuum or Blower function ensure that the selector lever operates smoothly and that it is not obstructed by debris from the previous use.

Select either the Vacuum or Blower function using the selector lever on the side of the machine and press the switch button. If more power is required, slide the speed controller from position 1 to position max.

Stopping the Blower/Vacuum/Shredder

To turn **OFF** the machine you can simply release the switch button.

Using the Blower/Vacuum/Shredder

Do not attempt to pick up wet debris, allow fallen leaves etc., to dry out before using the Blower/Vacuum/Shredder. The Blower/Vacuum/Shredder can be used to blow debris from patios, paths, driveways, lawns, bushes

and borders. It will also pick up leaves, paper, small twigs and wood chippings. When using the Blower/Vacuum/ Shredder in Vacuum mode the debris is sucked up the suction tube before being ejected into the debris collection bag, as the debris passes through the suction fan it is partially shredded. The shredded organic debris is ideal to use as mulch around plants.



Any hard objects, such as stones, tin cans glass etc, will damage the suction fan.



Do not use the Blower/Vacuum/Shredder to suck up water or very wet debris.



Never operate the Blower/Vacuum/Shredder without the debris collection bag fitted.

BLOWER MODE

Inspect the area to be worked before starting. Remove any objects or debris that could be thrown, jammed or become entangled in the Blower/Vacuum /Shredder. Select the blow function using the selector lever on the side of the machine and switch **ON**. With the Blower/ Vacuum/Shredder resting on its wheels, move the Blower/Vacuum/Shredder forward directing the nozzle at the debris to be cleared. Alternatively hold nozzle just above the ground and swing the machine from side to side. Moving forward and direct the nozzle at the debris to be cleared. Blow the debris into a convenient heap then use the vacuum function to collect the debris.

VACUUM MODE

Inspect the area to be worked before starting. Remove any objects or debris that could be thrown, jammed or become entangled in the Vacuum-Blower. Select the vacuum function using the selector lever on the side of the machine and switch **ON**. With the Blower/Vacuum/ Shredder resting on its wheels move the Blower/ Vacuum/Shredder forwards directing the nozzle at the debris to be collected. Alternatively with the Blower/Vacuum/Shredder held just above the ground swing the machine from side to side, moving forwards and directing the nozzle at the debris to be collected. Do not force the nozzle into the debris as this will block the suction tube and reduce the efficiency of the machine.

Organic materials such as leaves contain a large amount of water that can cause them to stick to the inside of the suction tube. To reduce sticking the material should be left for a few days to dry out.

CLEANING AND MAINTENANCE

Cleaning

1. Keep the ventilation slots of the machine clean to prevent overheating of the machine.
2. Regularly clean the machine housing with a soft cloth, preferably after each use.
3. Keep the ventilation slots free from dust and dirt.
4. If the dirt does not come off use a soft cloth moistened with soapy water.
5. Never use solvents such as petrol, alcohol, ammonia water, etc.
These solvents may damage the plastic parts.

Maintenance

Our machines have been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper machine care and regular cleaning.

Keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition.

1. Check the collection bag frequently for wear or deterioration.
2. Replace worn or damaged parts.
3. Use only genuine replacement parts and accessories
4. Store the appliance only in a dry place

ENVIRONMENT



Should your appliance need replacement after extended use, do not dispose of it with the household refuse, but in an environmentally safe way.

Waste produced by electrical machine items should not be handled like normal household rubbish. Please recycle where recycle facilities exist. Check with your Local Authority or retailer for recycling advice.

PSLHTM34

Electric Garden Blower, Vacuum & Shredder Home Gardening & Backyard Landscape System

Features:

- 3-in-1 Garden System: Blower + Vacuum + Shredder
- High-Powered Motor
- Simple Electric Plug-in Operation
- Corded Design with Power Cable Up to 10' Feet
- Easy-to-Use, Hassle-Free Control
- Includes Re-Usable / Washable Collection Bag
- Comfortable Adjustable Handle Grip
- Retractable Sweeping Rake
- Rugged, Heavy-Duty Design
- Rolling Wheels for Easy Backyard Mobility
- Perfect for Lawns, Gardens, Back Yards, Walkways, Landscapes

What's in the Box:

- Electric Blower / Vacuum Shredder
- Re-Usable Waste Collection Bag
- Shoulder Strap

Technical Specs:

- Power Output: 12Amp
- Wind Speed/Blower Power: 160 MPH
- Operation Speed: Up to 15,500 RPM
- Air Volume: 554 CFM
- Waste Collection Bin Capacity: 12 Gal. (45+ Liter)
- Construction Material: Engineered ABS
- Power Cord Length: 10.0' ft
- Power: 120V
- Dimensions (L x W x H): 34.8" x 8.1" x 10.4" -inches
- Sold as: 1



SereneLife