

SereneLife



PSLWEWCKR22

Corded Grass Trimmer Edger

Handheld Electric Home Garden Grass Cutter

USER MANUAL



WARNING: READ INSTRUCTIONS BEFORE USING THE PRODUCT

Let's get started...

These instructions are for your safety.

Please read through them thoroughly before use and retain them for future reference.

Getting Started	01
Safety Information	02
Your Product	07
Before you start	09
In more detail	10
Product Functions	12
Operation	14
Care and Maintenance	15
Troubleshooting	19
Recycling and Disposal	19
Specs & Features	24

Safety Information

Safety Warnings:

If an extension cord is used, it cannot be lighter than H05VV-F, wire diameter cannot be less than $2 \times 0.75 \text{ Mm}^2$, and the length of extension is not more than 75m.

IMPORTANT
Read carefully before use.
Keep for future reference.



WARNING! Safety rules must be followed when using the product. For your own safety and that of bystanders, please read these instructions before operating the product. Please keep the instructions safe for later use.

Don't connect a damaged cord to the supply or touch a damaged cord before it is disconnected from the supply for the reason that damaged cords can lead to contact with live parts

Training

1. Read the instructions carefully. Be familiar with the controls and correct use of the machine.
2. Never allow children, persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine, local regulations may restrict the age of the operator.
3. Keep in mind that the operator or user is responsible for accidents or hazards occurring to the people or their property.

Preparation

1. Make sure all electric cords are in good condition before using them. Check for any damaged or exposed wires, fraying or cracked leads, and cracked or broken power sockets or plugs. If the cord has been damaged during use, disconnect the cord immediately from the power supply.
DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.
Do not use if the cord is damaged or worn.

2. Before use, always visually inspect the machine for damaged, missing or misplaced guards or shields.
3. Never operate the machine while people, especially children, or pets are nearby.

Operation

1. Keep supply and extension cords away from cutting means.
2. Wear eye protection and stout shoes and long trousers at all times while operating the machine.
3. Avoid using the machine in bad weather conditions especially when there is a risk of lightning.
4. Use the machine only in daylight or good artificial light.
5. Never operate the machine with damaged guards or shields or without guards or shields in place.
6. Switch on the motor only when the hands and feet are away from the cutting means.
7. Always disconnect the machine from the power supply (i.e. remove the plug from the mains, remove the disabling device or removable battery)
 - whenever the machine is left unattended;
 - before clearing a blockage;
 - before checking, cleaning or working on the machine;
 - after striking a foreign object;
 - whenever the machine starts vibrating abnormally.
8. Take care against injury to feet and hands from the cutting means.
9. Always ensure that the ventilation openings are kept clear of debris.
10. Never to replace the non-metallic cutting means with metallic cutting means.
11. Do not overreach and to keep the balance at all times, to always be sure of the footing on slopes and to walk, never run.
12. Do not to touch moving hazardous parts before the machine is disconnected from the mains and the moving hazardous parts have come to a complete stop.

Maintenance and Storage

1. Disconnect the machine from the power supply (i.e. remove the plug from the mains, remove the disabling device or removable battery) before carrying out maintenance or cleaning work.

2. Use only the manufacturer's recommended replacement parts and accessories.
3. Inspect and maintain the machine regularly. Have the machine repaired only by an authorized repairer.
4. When not in use, store the machine out of the reach of children.

Recommendation

The machine should be supplied via a residual current device (RCD) with a tripping current of not more than 30 mA.

Vibration and Noise Reduction

To reduce the impact of noise and vibration emission, limit the time of operation, use low-vibration and low noise operating modes as well as wear personal protective equipment.

Take the following points into account to minimise the vibration and noise exposure risks:

1. Only use the product as intended by its design and these instructions.
2. Ensure that the product is in good condition and well maintained.
3. Use correct attachments for the product and ensure they are in good condition.
4. Keep tight grip on the handles/grip surface.
5. Maintain this product in accordance with these instructions and keep it well lubricated (where appropriate).
6. Plan your work schedule to spread any high vibration tool use across a longer period of time.

Emergency

Familiarise yourself with the use of this product by means of this instruction manual. Memorise the safety directions and follow them to the letter. This will help to prevent risks and hazards.

1. Always be alert when using this product, so that you can recognise and handle risks early. Fast intervention can prevent serious injury and damage to property.
2. Switch off and disconnect from the power supply if there are malfunctions. Have the product checked by a qualified professional and repaired, if necessary, before you operate it again.

Residual Risks

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain. The following dangers can arise in connection with the structure and design of this product:

1. Health defects resulting from vibration emission if the product is being used over long periods of time or not adequately managed and properly maintained.
2. Injuries and damage to property due to broken cutting attachments or the sudden impact of hidden objects.

Symbols

On the others the following symbols and abbreviations. Familiarise yourself with them to reduce hazards like personal injuries and damage to property.

V~	Volt, (alternating voltage)	mm	Millimetre
Hz	Hertz	kg	Kilogram
W	Watt	dB(A)	Decibel (A-rated)
/min or min ⁻¹	Per minute	m/s ²	Metres per second squared
°C	Degree Celsius		
IPX0	Protection against penetration of dust, but no protection against water.		



Lock / to tighten or secure.



Unlock / to loosen.



Note / Remark.



Caution / Warning.



Read the instruction manual.



Wear hearing protection.



Wear a dust mask.



Wear protective gloves.



Wear protective, slip-resistant footwear.



Wear tight-fitted protective clothes.



Wear eye protection.

yyWxx

Manufacturing date code; year of manufacturing (20yy) and week of manufacturing (Wxx)



Switch the product off and disconnect it from the power supply before assembly, cleaning, adjustments, maintenance, storage and transportation.



 
Do not expose the product to rain or wet conditions (moisture).



Objects thrown by the product could hit the user or other bystanders. Always ensure that other people and pets remain at a safe distance from the product when it is in operation. In general, children must not come near the area where the product is.




Inspect the area where the product is to be used and remove all objects which can be thrown by the product. If objects are hidden while operating stop the motor and remove the object.



Keep other people out of working area during operation. A distance of at least 15m must be observed.



 Disconnect from the mains plug if the cord is damaged or entangled. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY.**



Contact of the guide bar tip with any object should be avoided.



Guaranteed sound power level value in dB



This product is of protection class II. That means it is equipped with enhanced or double insulation.






The product complies with the applicable European directives and an evaluation method of conformity for these directives was done.



WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice

Your product

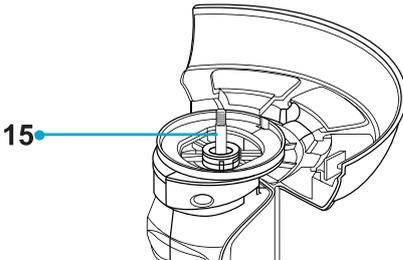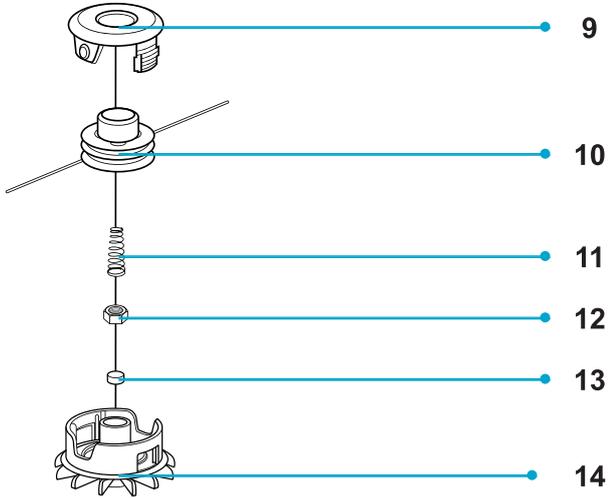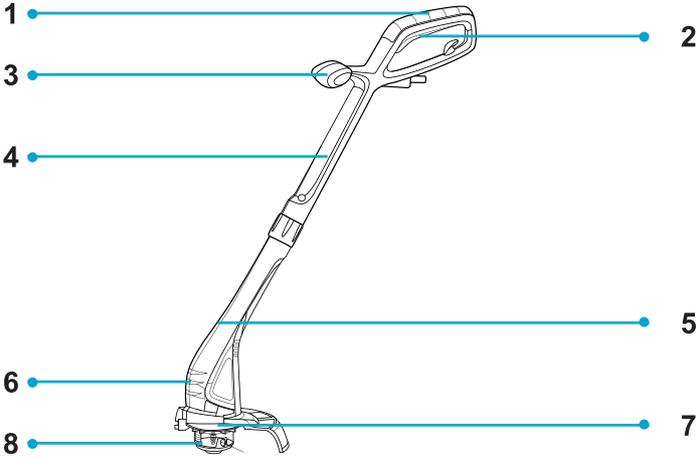

- | | |
|------------------|------------------|
| 1. Rear handle | 9. Cover |
| 2. On/off switch | 10. Trimmer line |
| 3. Front handle | 11. Spring |
| 4. Upper shaft | 12. Nut |
| 5. Lower shaft | 13. Spacer |
| 6. Air vents | 14. Shaft |
| 7. Guard | 15. Fixing screw |
| 8. Trimmer head | |

Sound Values

> Sound pressure level at operator's position L_{pA} :	80 dB(A)
> Uncertainty K_{pA} :	3.0 dB(A)
> Measured sound power level L_{WA} :	87.2 dB(A)
> Uncertainty K_{WA} :	2.01 dB(A)
> Guaranteed sound power level L_{WA} (according to 2000/14/EC amended by 2005/88/EC):	90 dB(A)
> Hand arm vibration values:	4.421 m/s ²
> Uncertainty $K_{h,w}$:	1.5 m/s ²

The sound values have been determined according to noise test code given in EN 50636-2-91, using the basic standards EN ISO 3744 and EN ISO 11094. The sound intensity level for the operator may exceed 80 dB(A) and ear protection measures are necessary.

The declared vibration value has been measured in accordance with a standard test method (according to EN 50636-2-91) and may be used for comparing one product with another. The declared vibration value may also be used in a preliminary assessment of exposure.



WARNING! Depending on the actual use of the product the vibration values can differ from the declared total. Adopt proper measures to protect yourself against vibration exposures. Take the whole work process including times the product is running under no load or switched off into consideration.

Proper measures include among others regular maintenance and care of the product and accessories, keeping hands warm, periodical breaks and proper planning of work processes.

Unpacking

1. Unpack all parts and lay them on a flat, stable surface.
2. Remove all packing materials and shipping devices, if applicable.
3. Make sure the delivery contents are complete and free of any damage.
Using an incomplete or damaged product represents hazard to people and property.
4. Ensure that you have all the accessories and tools needed for assembly and operation. This also includes suitable personal protective equipment.



WARNING! The product and the packaging are not children's toys! Children must not play with plastic bags, sheets and small parts! There is a danger of choking and suffocation.

Before you Start

You will need

(items not supplied)

- > Suitable personal protective equipment
- > Suitable extension cord for outdoor use
- > Suitable crosshead screwdriver

(items supplied)



NOTE: The needed accessories depends on the intended application. Ask your dealer for advice.

Assembly



WARNING! The product must be fully assembled before operation! Do not use a product that is only partly assembled or assembled with damaged parts!



Follow the assembly instructions step by step and use the pictures provided as a visual guide to easily assemble the product. Do not connect the product to power supply before it is completely assembled.




NOTE: Take care of small parts that are removed during assembly or when making adjustments. Keep them secure to avoid loss.

Shaft Assembly

1. Align the shaft ends with each other and assemble the lower shaft (5) into the upper shaft (4).
2. Secure the connection with the bolt.

Guard


1. Align and place the guard (7) onto the trimmer head (8).
2. Secure the connection with the screw (15).

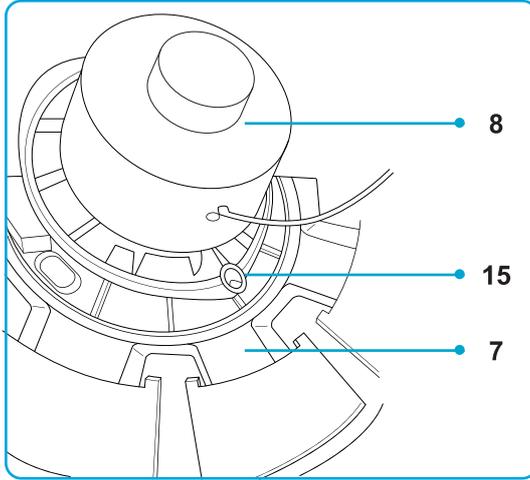

WARNING! Never use the product without the guard properly fit.

In more detail...

Product functions	15
Operation	17
Care and maintenance	19
Troubleshooting	23
Recycling and disposal	24
Guarantee	24
EC declaration of conformity	25

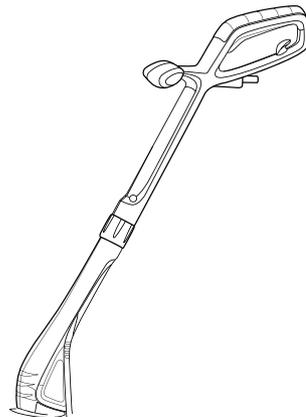

Intended Use

This electric grass trimmer PSLWEWCKR22 is designated with a rated power input of 250 Watts.

1. The product is intended for cutting weed, grass or similar soft vegetation in areas that are hard to reach, e. g. under bushes, on slopes and edges. It may not be used to work on unusual thick or wet grass, e.g. pasture grass, or to shred leaves.
2. For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein.
3. This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.

Guard

The guard protects the operator against thrown objects during operation.

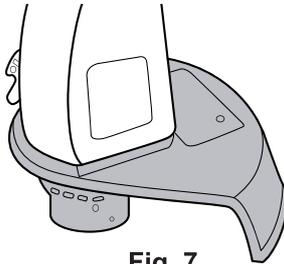


Fig. 7



NOTE: Always remove knife protection before use.

Switching ON/OFF

1. Squeeze the **ON/OFF** switch (2) to switch the product **ON**.
2. Release the on/off switch (2) to switch the product off.

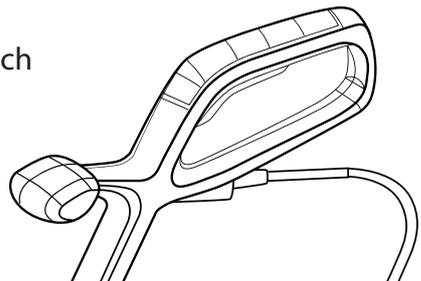


Fig. 8

Product Functions



WARNING! The product will continue to rotate for some time even after the motor has been switched off! Wait until it comes to a complete stop before you put the product down!

General Operation

1. Check the product, its power cord and plug as well as accessories for damage before each use. Do not use the product if it is damaged or shows wear.
2. Double check that the accessories and attachments are properly fixed.
3. Always hold the product by its handles. Keep the handles dry to ensure safe support.
4. Ensure that the air vents are always unobstructed and clear. Clean them if necessary with a soft brush. Blocked air vents may lead to overheating and damage the product.
5. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before putting it down.
6. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.



WARNING! Ensure the extension cord will not touch the trimmer head and the trimming line during operating! Danger of electric shock!

Line Feeding

During use, the tip of the trimming line will get shorter due to wear. Regularly check the condition of the trimming line and adjust if necessary. The trimming spool is equipped with a bumper helping to feed the trimming line while operating.

NOTE: The line feeding system works only when the product is switched **ON**.

1. Tap the bumper on solid ground and the spool will release trimming line.
2. Excess line will be cut by the knife and should always remain inside the radius of the guard

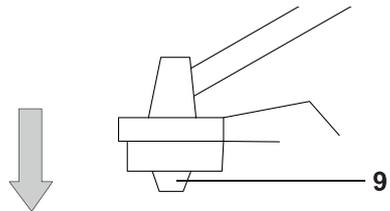


Fig. 9

Intended Use

This electric grass trimmer PSLWEWCKR22 is designated with a rated power input of 250 Watts.

1. The product is intended for cutting weed, grass or similar soft vegetation in areas that are hard to reach, e. g. under bushes, on slopes and edges. It may not be used to work on unusual thick or wet grass, e.g. pasture grass, or to shred leaves.
2. For safety reasons it is essential to read the entire instruction manual before first operation and to observe all the instructions therein.
3. This product is intended for private domestic use only, not for any commercial trade use. It must not be used for any purposes other than those described.



WARNING! The trimming line will be thrown out!




Danger of injury especially for bystanders!





NOTE: The trimming line will wear faster and require more feeding if cutting is done along sidewalks or other abrasive surfaces or heavier weeds are being cut.

Trimming

1. Hold the product firmly with a gap between the product and your right side.
2. Stand upright, do not lean forward and pay attention to posture. Keep both feet apart to help retain your balance.
3. Hold the cutting head just above the ground at an angle of approximately 30°.
4. Move the product with a slow regular arc from left to right before moving it back to the starting position before trimming the next area

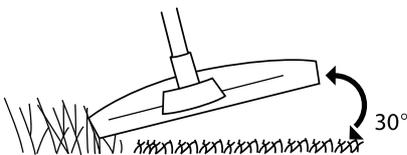

5. Ensure the cutting attachment remains clean and free from off-cuts that may cause it to jam. Check regularly. Release the **ON/OFF** switch (2) and disconnect the product from the power supply before checking.
6. Trim longer grass in stages; do not cut long grass in one cut.
For the best results, cut longer grass in steps

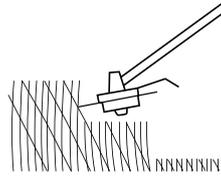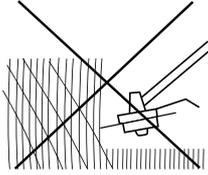

Operation



WARNING! The trimming line will be thrown out!



Danger of injury especially for bystanders!

Tips

1. For best results, do not cut wet grass because it tends to stick to the cutting head and guard, prevents proper discharge of grass trimmings, and could cause you to slip and fall.
2. Pay special attention when performing the work close to trees and bushes. The cutting head could damage sensitive bark, and damage fence posts.

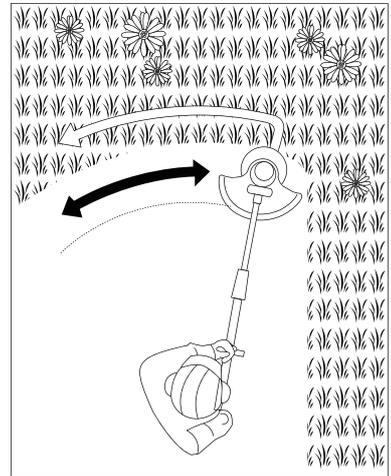


Fig. 9



NOTE: The trimming line will wear faster and require more feeding if cutting is done along sidewalks or other abrasive surfaces or heavier weeds are being cut.

After Use

1. Switch the product off, disconnect it from the power supply and let it cool down.
2. Check, clean and store the product as described below.

Care and Maintenance

The golden rules for care



WARNING! Always switch the product off, disconnect the product from the power supply and let the product cool down before performing inspection, maintenance and cleaning work!



1. Keep the product clean. Remove debris from it after each use and before storage.
2. Regular and proper cleaning will help ensure safe use and prolong the life of the product.
3. Inspect the product before each use for worn and damaged parts.
Do not operate it if you find broken and worn parts.



WARNING! Only perform repairs and maintenance work according to these instructions! All further works must be performed by a qualified specialist!

General Cleaning

1. Clean the product with a dry cloth. Use a brush for areas that are hard to reach.
2. In particular clean the air vents after every use with a cloth and brush.
3. Remove stubborn dirt with high pressure air.



NOTE: Do not use chemical, alkaline, abrasive or other aggressive detergents or disinfectants to clean this product as they might be harmful to its surfaces.

4. Check for worn or damaged parts. Replace worn parts as necessary or contact an authorised service centre for repair before using the product again.


Guard

1. Keep the guard clean and free of debris. Remove trimmings.
2. Replace the guard with one of the same type when it is worn or shows damage.

Care and Maintenance

Trimmer Spool

1. Replace the trimming spool when it is empty or worn.
2. Turn the product over to access the trimming line.
3. Hold the trimmer head steady with one hand. Press the latches on both side of spool cover by another hand then rotate the cover anti-clockwise to disengage the latches from the housing
4. Remove the cover together with the trimming spool
5. Discard all trimming line on the spool
6. Clean the housing before inserting a new spool of the same type.
7. Lead the trimming line endings through the eyelets of the cover.
8. Refit the cover onto the housing and rotate it clockwise to secure it. Make sure the latches snap into its position to secure the cover.
9. Ensure the cover is correctly fitted before releasing it. Otherwise, due to spring action it may be ejected injuries.

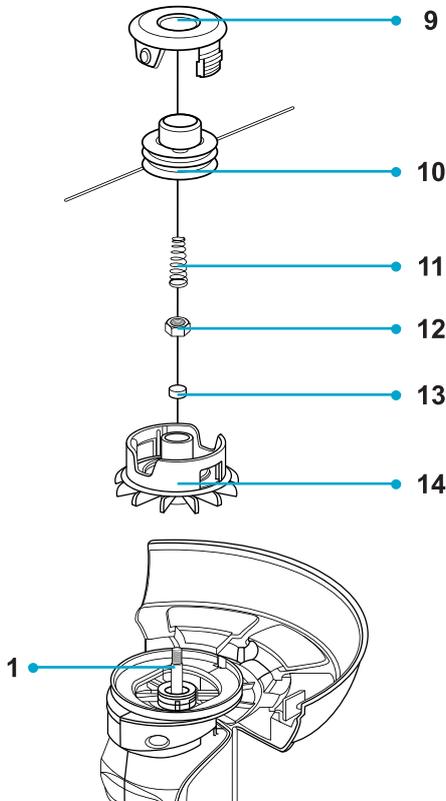

Maintenance

Before and after each use, check the product and accessories or attachments for wear and damage. If required, exchange them for new ones as described in this instruction manual. Observe the technical requirements.

Power Cord

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.


UK Plug

If you need to replace the fitted plug, then follow the instructions below.

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue — Neutral Brown — Live

As the colors of the wire in the mains lead of this product may not correspond with the colored marking identifying the terminals in your plug, proceed as follows. The wire, which is colored blue, must be connected to the terminal, which is marked with **N** or colored black. The wire, which is colored brown, must be connected to the terminal, which is marked **L** or colored red.

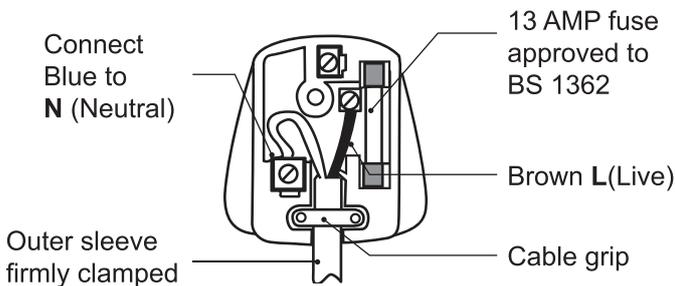

WARNING! Never connect live or neutral wires to the earth terminal of the plug.

Only fit an approved BS 1363 or BS 1363/A plug and correctly rated BS 1363 Amp fuse. If in doubt, consult a qualified electrician.



NOTE: If a moulded plug is fitted and has to be removed take great care in disposing of the plug and severed cable, it must be destroyed to prevent engaging into a socket.

Spare Parts/Replacement parts

The following parts of this product may be replaced by the consumer. Spare parts are available at an authorised dealer or through our customer service.

Trimming line	Model no. or Specification
"Spool line"	Ø 1.2 mm, 2 x 3 m, nylon

Repair

This product does not contain any parts that can be repaired by the consumer. Contact an authorised service centre or a similarly qualified person to have it checked and repaired.

Storage

1. Switch the product off and disconnect it from the power supply.
2. Clean the product as described above.
3. Store the product and its accessories in a dark, dry, frost-free, well-ventilated place.
4. Always store the product in a place that is inaccessible to children. The ideal storage temperature is between 10 oc and 30 °C.
5. We recommend using the original package for storage or covering the product with a suitable cloth or enclosure to protect it against dust.

Transportation

1. Switch the product off and disconnect it from the power supply.
2. Attach transportation guards, if applicable.
3. Always carry the product by its handles I shafts
4. Protect the product from any heavy impact or strong vibrations which may occur during transportation in vehicles.
5. Secure the product to prevent it from slipping or falling over.

Troubleshooting

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore check the product using this section. In most cases the problem can be solved quickly.

Problem	Possible Cause	Solution
1. Product does not start	1.1. Not connected to power supply 1.2. Power cord or plug is defective 1.3. Other electrical defect to the product	1.1. Connect to power supply 1.2. Check by a specialist electrician 1.3. Check by a specialist electrician
2. Product does not reach full power	2.1. Extension cord not suitable for operation with this product 2.2. Power source (e.g. generator) has too low voltage 2.3. Air vents are blocked	2.4. Use a proper extension cord 2.5. Connect to another power source 2.6. Clean the air vents
3. Unsatisfactory result	3.1. Cutting attachment is worn	3.1. Replace with a new one
4. Excessive vibration or noise	4.1. Cutting attachment is dull/ damaged 4.2. Bolts/nuts are loose	4.3. Have it replaced with new one 4.4. Tighten bolts/nuts

Recycling and Disposal



The product comes in a package that protects it against damage during shipping. Keep the package until you are sure that all parts have been delivered and the product is working properly. Recycle the package afterwards.

WEEE symbol. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.

PSLWEWCKR22

Corded Grass Trimmer Edger

Handheld Electric Home Garden Grass Cutter

Features:

- Electric Grass Trimmer Edger
- Landscaping Made Easy: Hassle-Free & Easy-to-Use
- High-Powered Cutting Motor
- Simple Electric, Corded Plug-in Operation
- Easy-to-Use, Hassle-Free Control
- Comfortable Handheld Grips
- Integrated 'Cutting-Guard' for Precision & Control
- Quick Replacement Cutting String
- Perfect for Lawns, Gardens, Back Yards, Walkways, Landscapes

What's in the Box:

- Electric Trimmer Edger
- Cutting String

Technical Specs:

- Power Output: 2.3Amp
- Operation Speed: 11,000 RPM
- Cutting String Size: 8.7" -inches
- Cutting String Material: Reinforced Nylon
- Sound Level: 90dBa
- Construction Material: Engineered ABS
- Power Cord Length: 10.0' ft
- Power: 120V
- Dimensions (L x W x H):21.3" x7.1" x3.6"-inches
- Sold as: 1



SereneLife

