

PYLE[®]
www.PyleAudio.com

Pure Clean*



PSTM50
Steam Floor Mop & Sweeper

USER MANUAL

SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This product is for household use only. Any commercial use will void the manufacturer's warranty. Basic precautions should be used when using an electrical appliance, including the following listed warnings.

READ ALL INSTRUCTIONS BEFORE USING YOUR PSTM50 STEAM MOP & SWEEPER.



Intended use

- This device is suitable for cleaning heat-resistant surfaces. It is also suitable for cleaning laminate flooring if you following the instructions below:
 1. The laminate should be properly laid and have no gaps or cracks into which moisture can penetrate.
 2. First test the steam mop at an inconspicuous spot and then check the laminate for waves or penetrated moisture.
 3. If the surface is unblemished, the device can be used to clean the entire laminate floor.
- The device is not suitable for unsealed wooden flooring, soft plastic, wooden furniture, leather and sensitive fabric covers.
- Only ever use the device on the floor and not, for example, on sofas, car seats etc.
- The device should not be used on glass as the hot steam can lead to glass breakage.
- Ask a specialist whether your flooring is suitable for being cleaned with the device. Always first test the cleaning with steam on a small spot.
- The device sweeps dust and loose, light dirt into the collecting container. Larger/heavier objects are not removed.
- On no account should the device be used to sweep up the following:
 1. glowing ash, cigarette ends, matches, etc.
 2. inflammable or explosive substances
 3. toxic substances, e.g. bleach
- The device is designed for private use and not for commercial use. The device should only be used as described in these instructions. Any other use is deemed to be improper.



Danger of injury

- Keep the article out of the reach of children! Improper use can lead to injuries and electric shock.
- Keep children and pets away from the packaging. There is a danger of suffocation, as well as other hazards!
- This device is not designed to be used by individuals (including children) with limited physical, sensory or mental abilities or those without sufficient experience and/or knowledge, unless they are supervised by someone responsible for their safety or have received instructions from them on how to use the device.
- Children must be supervised in order to ensure that they do not play with the device.
- Keep small children and pets away from the device while it is in operation.
- Keep hair, clothing, jewellery, fingers, or other body parts away from the openings or rotating parts of the device when it is in operation.
- CAUTION DANGER OF BURNS! Improper use can lead to injuries, burns, and electric shock.
- Never direct the steam at people, animals, plants or sensitive objects.
- Lay the cable in such a way that it does not pose a risk of tripping!
- Please take care when cleaning stairs that you do not stumble and fall.



Electricity-risk of electric shocks / risk of fire!

- Never immerse the device in water or other liquids to avoid the risk of electric shock. Do not use the device if it falls in water.
- Do not touch the device with wet hands.
- Do not operate it outdoors or in rooms with high humidity.
- Store the device only in dry indoor rooms. Do not use the device if it has been outdoors for a long period of time. In this case, contact our Customer Service department.
- In the event of damage/interference, disconnect the device from the mains immediately.
- PLEASE NOTE: Acute danger to life from electrocution! Never try to repair an electrical article yourself; contact your nearest customer service centre/specialist dealer to ensure your own safety. The same applies to the mains lead. In case of damage, contact our Customer Service department.
- Do not use the device if the cable, plug or any other part of the device is damaged.
- Never carry or pull the device with the mains lead; always treat the mains lead with care. Avoid pinching the cable in doors or pulling it over sharp edges or corners. Keep the cable away from hot surfaces.
- Connect the device only to a plug socket whose mains voltage corresponds to the data on the rating plate of the device. The mains socket must still be accessible after the connection has been made.
- The device must be switched off when inserting or removing the mains plug.
- Remove the mains plug from the mains socket,
 1. when the device is not in use,
 2. before refilling it with water,
 3. before changing the floor cloth,
 4. when there is a thunderstorm,
 5. before you clean it.
- Always pull the plug, never the mains cable, to remove the plug from the mains socket.
- Touch the mains plug only with dry hands.
- Use only the appropriate plug.
- Do not use any extension cables.
- Do not use the device if highly flammable gases are present in the air.



Equipment and device damage

- Use the device only when it is completely assembled and the mains cable is completely unwound. The water reservoir and the filter must be inserted.
- In the interests of your own safety, inspect the device for damage every time before use.

In the event of defects, the device must not be used until it has been repaired by qualified personnel.

If the mains lead is damaged, it must be replaced in an authorised workshop in order to avoid danger.


- Always use the floor cloth and check it for signs of wear each time you use it. Do not use it if it shows any signs of wear or if it is damaged! It could damage your flooring!
- Use only the accessories included in the scope of supply or recommended by the manufacturer. Use only original manufacturer's spare parts.
- In the case of surfaces treated with wax, the heat and steam may remove the wax!
- Never pour any cleaning agent or other additives into the water reservoir. This could destroy the device and safe working is no longer guaranteed.
- Only fill it with normal or distilled water. Using any other liquids can damage the device.
- Never operate the device with the steam function if the water reservoir is empty.
- Never direct the steam at one spot for too long.
- Do not insert anything into the openings/nozzles of the device and take care that these do not become clogged.
- Ensure that the device does not roll over the mains cable.
- Always work with sufficient lighting.
- Do not drop the device or allow it to be knocked violently.
- Do not expose the device to extreme temperatures, wide temperature variations, or direct sunlight.

What is supplied

- 1 central piece
- 1 handle assembly
- 1 cleaning foot
- 1 long screw
- 1 short screw
- 1 water tank
- 1 carpet glider
- 2 floor cloths
- These operating instructions

Device Overview

1. Steam release button
2. Cable mount
3. Top handle
4. Water tank
5. Water filter
6. Central piece
7. Carpet glider
8. Floor cloth
9. Lower hook for cable reel
10. Mains cable
11. Upper hook for cable reel
12. Control lamp
13. On/Off switch for the rotating brush
14. Cleaning foot
15. Collecting container
16. Carrying handle

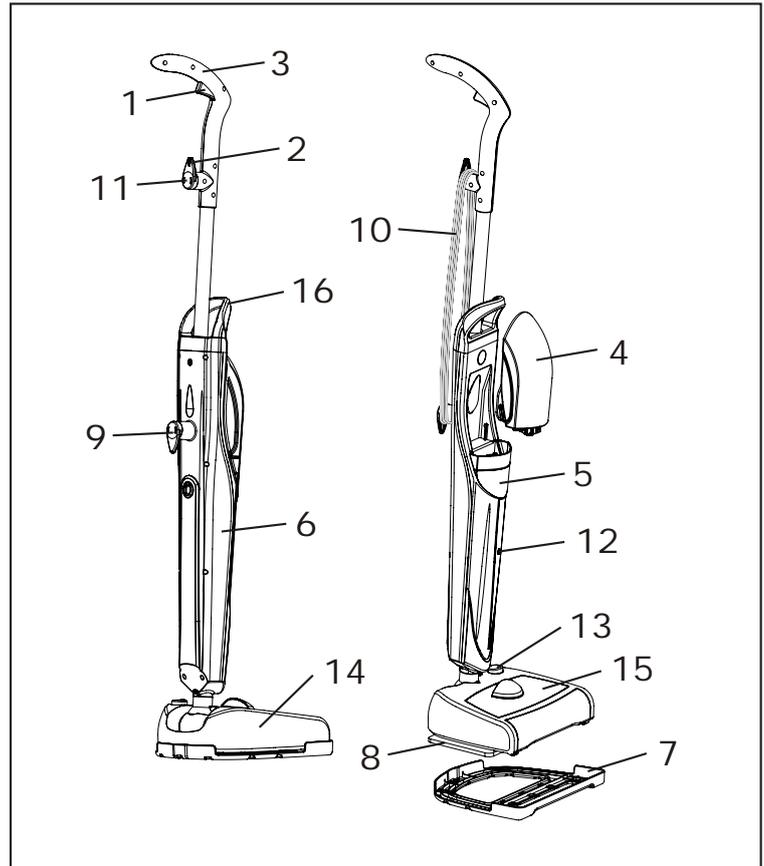

Before Initial Use

Before you can use the device, you must:

- unpack the items supplied,
- assemble the device.

A. Unpacking




PLEASE NOTE!

- Keep children and animals away from the packaging material. There is a danger of suffocation!

Unpack all parts and check the scope of supply for completeness (see "What is supplied" section); also check for transport damage. If you find any damage to the components, DO not use them.

B. Assembly

1. Place the central piece (6) onto the cleaning foot (14).
2. Screw the two parts together on the back using the screw which is also supplied.
3. Insert the water tank (4) into the central piece and press it down until it engages audibly.
4. Slide handle assembly down into central piece (6) until it will go no further.
5. Screw the handle assembly and the central piece together by using the supplied long Screw.
6. Turn the upper hook of the cable reel (11) so that it points upwards and wrap the Mains cable (10) around the two hooks of the cable reel.

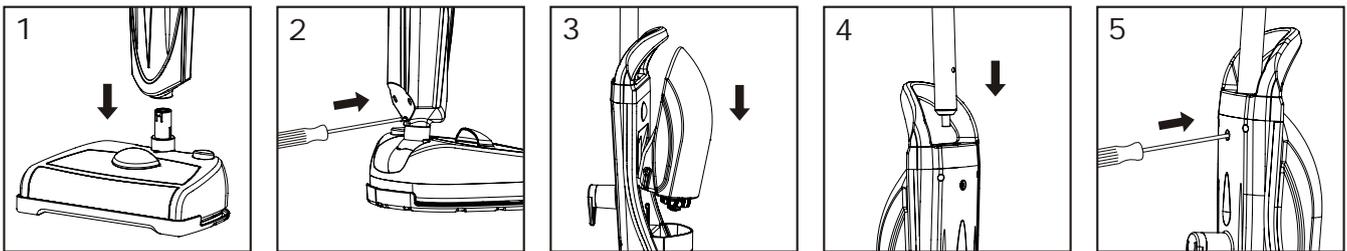

Use

This device sweeps up dust and loose dirt into the collecting container and then cleans the floor with hot steam immediately after this. However, you can also activate the sweep function and steam function individually.

We recommend that you first sweep a very dirty floor with the device and then clean it with steam in a second step.

The water tank can be filled with tap water. However, in areas which have hard water, we recommend that you use distilled water in order to prevent calcification.


A. Preparing the device/filling water tank



PLEASE NOTE!

- Never pour any cleaning agent or other additives into the water tank. These may damage the device.
- Before using the device, always check the floor cloth for signs of wear. Do not use it if it shows any signs of wear or if it is damaged! It could damage your flooring!

1. If not pre-fitted, attach one of the floor cloths supplied (8) to the bottom of the cleaning foot using the Velcro fasteners.
2. If the water tank (4) is inserted in the device, remove the water tank by pulling it in A vertical direction, up and away from the appliance, as show in the illustrations.
3. Unscrew the closure of the water tank, fill the water tank preferably with distilled water at room temperature and then close it again. Firmly turn the closure shut.
4. Place the water tank into the central piece (6) and press it down until it engages audibly.
5. To quickly unwind the cable (10), turn the upper hook of the cable reel (11) so that it points downwards. Then press the mains cable into the cable mount (2) so that you are better able to handle the device while cleaning the floor and do not stumble over the cable.
6. Now insert the plug into a suitable, easily accessible plug socket (120 V, 60 Hz). The red control lamp (12) lights up as soon as the operating voltage is present.
7. To clean carpets, attach the carpet glider (7) with the flat side towards the floor and place the cleaning foot into the carpet glider.
PLEASE NOTE! Only use the carpet glider on carpets and not on hard floors in order To prevent damage to the floor!

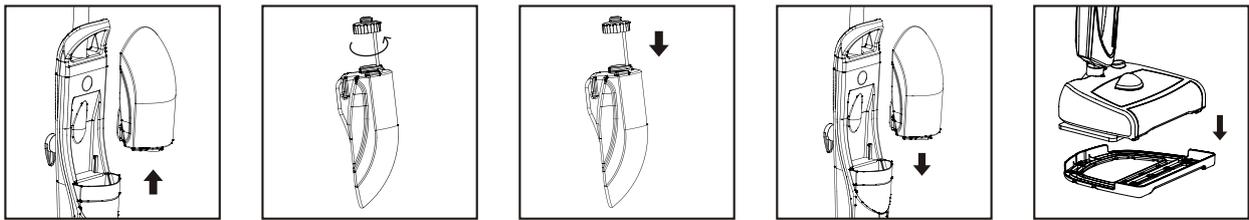

B. Cleaning the floor



CAUTION:

- Keep children and animals away from the device during use.
- Make sure during use that dirt particles do not accumulate beneath the cleaning foot as they could damage sensitive surfaces.
- Never operate the device with the steam function if the water tank is empty.
- During cleaning, make sure the floor cloth is firmly attached to the cleaning foot to prevent damage to the device or flooring.
- Always first test the cleaning with steam on a small spot.

- Never clean the same spot for longer than 10 seconds.
- Never direct the steam at people, animals, or items containing electrical components (e.g. inside ovens, fridges, at switches and lights, microwave ovens etc.).
- Never touch the bottom of the device during operation!
- While the device is in operation, the cleaning foot must not be held at a slanted angle or be inverted as hot spray water may emerge!
- After use the floor cloth may still be very hot. If you wish to remove it, wait about 5 minutes for it to cool down.

NOTE: Water residues in the filter or tank are due to this device having been tested. When you first use the device or if you have not used it for a lengthy period of time, you must hold the steam release button down for approx. 30 seconds after connecting it to the mains to get the device ready for operation. During this time, you will hear a pumping noise because the corresponding parts of the device need to fill up with water.

1. To ensure that the device can be put down easily, the joint in the cleaning foot (14) latches in when the central piece is in the vertical position. To use the device, grab hold of the top handle and tilt the handle to a position which is comfortable for you, and if necessary place your foot on the cleaning foot as you do so.
2. Using your foot, press the On/Off switch (13) on the cleaning foot to switch on the device.
3. Slide the cleaning foot forwards over the surface which is to be cleaned. The loose dirt is taken up by the rotating brush and collected in the collecting container (15) of the device.
4. Press the steam release button (1) to expel steam and clean the floor more thoroughly.
5. If there are any more stubborn areas of dirt or you want to kill germs (e.g. in the vicinity of toilets), hold the cleaning foot on one spot for a number of seconds (but not longer than 10 seconds!).
6. If you want to replace or wash the floor cloth, let go of the steam release button, switch off the device and pull the mains plug out of the plug socket. Wait for 5 minutes so that the device can cool down. Now you can change the floor cloth.
7. If steam stops being produced, the water tank is empty. Let go of the steam release button, switch off the device and pull the mains plug out of the plug socket. refill the tank in the manner described in the "Preparing the device/filling water tank" section.
8. Once the cleaning procedure is complete and the device has completely cooled down, please empty the water tank (see below).

After use



PLEASE NOTE!

- Remove the plug from the mains socket before cleaning the device.
- Do not immerse the device in water and do not rinse it off under running water.
- Allow the device to cool down completely before storing it.
- Store the device in a cool, dry location which is out of the reach of children and animals.

1. Switch off the device, pull out the plug and allow the device to cool down completely (approx. 5 minutes).
2. Remove the water tank from the device and empty it.
3. Carefully pull the collecting container out of the cleaning foot and empty the waste into a rubbish bin. Then place the container back into the device.
4. Remove the floor cloth from the cleaning foot and wash it. You can wash the floor cloths at a maximum of 140°F in the washing machine. Although they can be tumble-dried, you should allow the floor cloths to dry naturally in the air so that they last longer.
5. Over the course of time, hairs, threads and other particles accumulate on the rotatable cleaning brush. We recommend that from time to time you remove any contamination from the brush.
6. As required, wipe down the housing of the device with a soft, dry cloth.
7. Turn the upper hook of the cable reel so that it points upwards and wrap the mains cable around the two hooks of the cable reel.
8. Let all of the parts of the device dry completely before you put it away.

Technical data

Model: PSTM50

Device: Pure Clean Steam Floor Mop & Sweeper

Voltage supply: 120, 60 Hz

Output: 1500 W

Capacity of the water tank: max. 28.15 oz.

Protection class: 2

Troubleshooting

If the device should stop working properly, first check whether you are able to correct the problem yourself. If you are not, contact the Customer Service (1-888-318-PYLE / 718-535-1800).

Do not try to repair a faulty device yourself!

NOTE: If you use normal tap water in the Pure Clean Steam Floor Mop & Sweeper and you have hard water, it may be necessary to replace the filter when it is no longer effective. Mineral deposits can build up in the heating element causing damage and/or diminished performance. Contact Customer Service (1-888-318-PYLE / 718-535-1800) for information about replacement parts. If replacement of the filter is determined to be necessary, you can purchase this through Customer Service. To remove the filter, first remove the water tank then pull the filter up and out of the steamer body. Replace with a new filter. Using distilled water will extend the life of the unit.

Problem	Possible cause/solution
The device does not work. The red control lamp does not light up.	<ul style="list-style-type: none">• Is the plug inserted in the mains socket correctly?• Is the mains socket defective? Try another mains socket.• Check the fuse of your mains connection.
The brush rotates but no steam comes out.	<ul style="list-style-type: none">• Have you pressed the steam release button correctly?• The device is not yet ready to operate. Hold the steam release button down for approx. 30 seconds until you no longer hear any pumping noises, and the device begins to emit steam.• The water tank is empty. Fill it up (see "Preparing the device/filling water tank" section).
Water emerges instead of steam.	<ul style="list-style-type: none">• The water is forming condensation in the tube. Press the steam release button until steam emerges. If necessary, place a cloth beneath the attachment as water can emerge. If water should unexpectedly continue to emerge instead of steam, let go of the steam release button, pull the plug out of the plug socket, let the device cool down for approx. 5 minutes and then try again.
Only a very small amount of steam emerges.	<ul style="list-style-type: none">• The nozzle is blocked. Unscrew the central piece from the cleaning foot and carefully rinse the tube of the cleaning foot with a descaler solution. Use a funnel. Please follow the instructions for using the descaler.



Limited Warranty Policy

All Pyle products are carefully constructed and thoroughly tested before shipment. Products purchased in the USA are warranted to be free of defects in material and workmanship for one (1) year from the date of purchase. This warranty is limited to the original retail purchaser.

Should the product fall due to factory defect in material or workmanship, your unit will be repaired or replaced at the solo discretion of Sound Around Inc. You can contact our customer service department at (718) 535-1800.

To obtain warranty service, the unit must be carefully packed and shipped prepaid to:

Sound Around Service Center
1600 63rd Street
Brooklyn, NY 11204

- You must also include the following items:
- A copy of your sales receipt or other proof of purchase.
- A brief letter indicating the problem you are experiencing.
- Include in your letter your return address, daytime phone number
- Must include a money order for \$25.00 for return shipping, handling and insurance or provide your Visa/ MC number with expiration date.

Our Obligation under this warranty is limited to the repair or replacement of the defective unit when it is returned to us prepaid. This warranty will be considered void if the unit was tampered with, improperly serviced or subject to misuse, neglect or accidental damage.

Register Your Product Online www.PyleAudio.com

How would you like to extend the warranty on your product for three months? Simply write and post a review of the product online. Then, register your product online at pyleaudio.com or send an e-mail to warranty@soundaroundusa.com including your name, address, and phone number, as well as a link to the review.

We want you listening for a lifetime



Introducing Pyle Rewards!

- Get points for registering your Pyle product, posting text or video reviews online
- Redeem your points for cool items like Pyle-branded t-shirts, pens, and Pyle products, including mini speakers, sports watches, guitar pedals, iPod clock radios, and more!
- Connect your Pyle Rewards account to your Facebook and Twitter accounts to show off all the cool stuff you earned!

For more information, visit PyleAudio.com/rewards

Check us out on Facebook & Twitter:
www.facebook.com/pyleaudio
Twitter: @pyleaudio

