



PSTMH10
Handheld Steam Birdie

USER MANUAL

INTRODUCTION

Thank you for choosing Pyle for your household cleaning needs. Our steamer products use the active power of steam without the use of chemicals; making it a green product that is safe for the ecosystem. You have begun the first step into transforming your house into a green, environmentally safe home. Our Pyle steam products are a modern way of cleaning that is efficient and far more sanitary than conventional methods.

With the power of germ killing steam, dirt and grime can be eliminated in a matter of seconds. The tiny hot vapor molecules penetrate porous surfaces being cleaned, expanding and forcing dirt, debris, and bacteria to the surface. When used correctly, our steamers can kill dust mites and certain types of bacteria pathogens such as salmonella and E-coli on contact.

Since you do not need chemicals in order to use our products, not only will you see the savings in your wallet, but you have provided a safer place for you and your family to live in. We encourage you to improve your way of life, better the environment, and spend time enjoying your clean chemical free floor.

Birdie

The Birdie Handheld Steamer is an innovative product that cleans and sanitizes your home by harnessing the natural cleaning power of hot steam vapor. This unique steamer is well-suited to clean a variety of surfaces that lift dirt and debris from stubborn areas. The Birdie heats water up to 212° F and produces steam by pumping the handle. It can be refilled swiftly for up to 10 minutes of steam time. The user-friendly design and energy saving feature is intended to tackle the toughest dirt and debris. The Birdie requires no assembly, just attach the tools and go. It features a 1500-watt heating element, a 200ml/6.8 fl oz water tank, 8 piece accessory kit, and much more.

SAFETY GUIDELINES

Pure Clean Handheld Steam Birdie is for indoor domestic use only. Any commercial use will void warranty. It is designed for sanitizing and cleaning an array of surfaces such as windows, ceramic tile, carpet, grout and more.

Safety Instructions:



 
 
 
 
 
WARNING: BE SURE TO READ AND FOLLOW ALL SAFETY INSTRUCTIONS BEFORE USING YOUR STEAMER. PROPER CARE AND MAINTENANCE WILL HELP TO EXPAND THE LIFE OF YOUR STEAMER.

When using an electrical appliance, basic precautions should always be followed. To reduce the risk of fire, electric shock, or injury:

- Be sure to unplug the electrical cord when appliance is not in use and while servicing.
- Do not leave the steamer unattended while young children, pets or infirm persons are around.
- Children should be supervised and cautioned that the steamer is not a toy and should not be played with.
- Do not direct steam towards people, pets, electrical appliances, or electrical outlets.
- Do not immerse the steamer in water or other liquids.
- Do not handle steamer with wet hands.
- Do not pull power cord to disconnect appliance from socket or use cord as a handle. Be sure to keep cord away from heat, water, and sharp edges.
- Do not use if cord or plug is damaged.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not use steamer on any steam sensitive material such as velvet, leather, wax polished furniture or floors, synthetic and other delicate fabrics.
- Do not use on unsealed hardwood floors. By doing so, you may remove the sheen from the steam. It is recommended to test an isolated area with the steam mop before proceeding. As a precaution, you should check the manual made by the floor manufacturer for proper care instructions.
- Never put cleaning detergents or chemicals into the steamer as it will make the product unsafe and damage the unit.
- Use only manufacturer's recommended accessories.
- Stop using steamer if circuit breaker activates. Beware of risk of shock.
- Wear proper shoes when operating your steamer. Open-toed shoes, slippers or bare feet may cause you to slip and fall or cause hot steam on your feet.
- Allow your steamer to cool down before storing in a cool, dry place.

KEY FEATURES



- A. JET NOZZLE
- B. STEAM NOZZLE
- C. WATER TANK CAP
- D. STEAM TRIGGER
- E. HANDLE
- F. STEAMER BODY
- G. HEATING INDICATOR LIGHT
- H. NYLON UTILITY BRUSH
- I. ANGLED NOZZLE
- J. WIDE NOZZLE HEAD
- K. MEASURING CUP
- L. EXTENDED JET NOZZLE
- M. SQUEEGEE
- N. CLOTH COVER

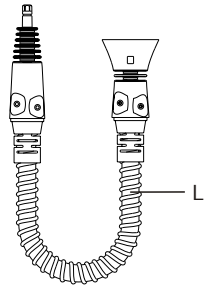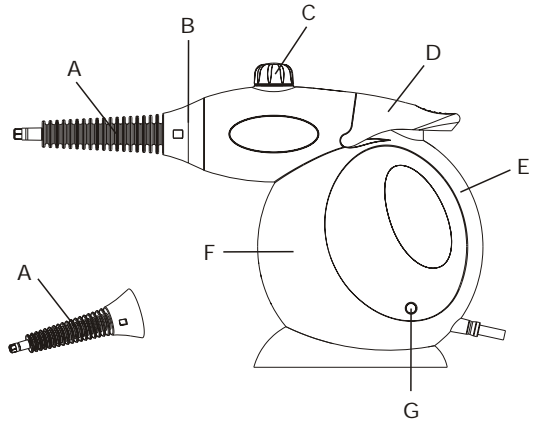

ASSEMBLY AND USE


Connecting Jet Nozzle:

  - 1) Insert jet nozzle to steam nozzle and align tabs.
- 2) Rotate jet nozzle clockwise until it locks into place with the steam nozzle.

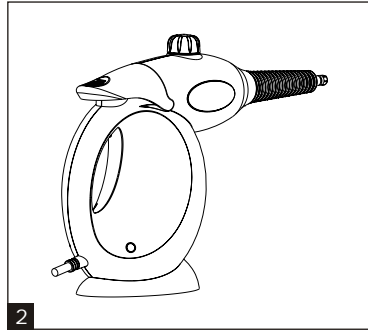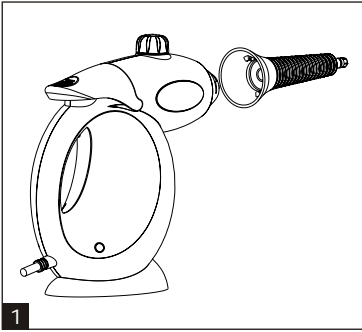

Connecting Utility Brush(s)/Wide Nozzle Head:

 - 3) Begin by aligning hexagonal shaped hole on back of the utility brush with hexagonal tip of the jet nozzle and press firmly.


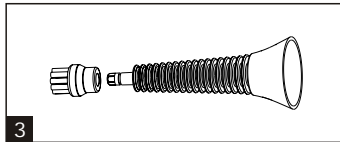


IMPORTANT: Make sure the accessory is pushed as far as possible onto tip to ensure the fit is sealed. This will prevent steam from seeping out unwanted areas and prevent injury.

- 4) To remove utility brush, make sure the unit is unplugged and has cooled down. Firmly pull on brush until it detaches itself from the nozzle head.

Connecting Squeegee:

  - 5) Connect the squeegee to the wide nozzle head by snapping the tabs located at the bottom of the squeegee with the bottom of the wide steam nozzle head.
- 6) Connect the wide nozzle to the jet nozzle.

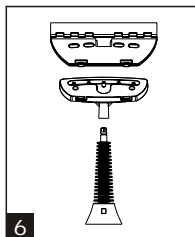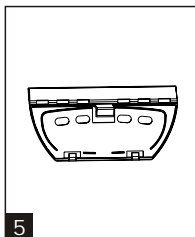


NOTE: The steamer does not require distilled water. Residents in areas with hard water should use distilled water for better performance.

USE:

- 7) Fill steamer by unscrewing water tank cap and filling the unit with water by using measuring cup provided.
- 8) When red indicator light illuminates, steamer is ready for use. Be sure to have desired attachments in place before plugging in the unit.


NOTE: It is recommended that another high wattage appliance is not operated on the same circuit to avoid a circuit overload.

 **WARNING: ON SURFACES THAT HAVE BEEN TREATED WITH WAX, THE WAX MAY BE REMOVED BY THE HEAT AND STEAM ACTION. DO NOT USE ON UNSEALED WOOD FLOORS OR LET UNIT STAND ON ANY WOOD FLOOR FOR AN EXTENDED PERIOD OF TIME. THIS MAY CAUSE THE WOOD GRAIN TO RISE. IT IS RECOMMENDED THAT A SECTION BE TESTED IN AN ISOLATED AREA OF THE FLOOR. IT IS ALSO RECOMMENDED THAT YOU CHECK THE USE AND CARE INSTRUCTIONS FOR CLEANING FROM THE FLOOR MANUFACTURER TO ENSURE STEAM CLEANING IS ACCEPTABLE FOR YOUR WAXED SURFACE.**

- 9) When steamer stops emitting steam simply refill the water tank and continue cleaning.

 **WARNING: NEVER RUN THE STEAMER WITHOUT WATER.**

- 10) When you finish cleaning, unplug power cord from outlet. Be sure to empty water tank and carefully remove any accessories for drying.

 **CAUTION: The cloth pad may be very hot.**

CLEANING AND MAINTENANCE



CAUTION: Prior to cleaning or maintaining your steamer, isolate the unit by removing the cord from the power socket and avoid immersing the unit in water.

- 1) The microfiber cloth cover can be machine washed in hot water and tumble dry. Do not use bleach or fabric softener. Allow to dry fully before use.
- 2) Wipe steamer with soft cloth when/if necessary.

Product Specs:

Voltage supply: 120, 60 Hz

Output: 1500 W

Water tank capacity: max. 6.8 fl oz.

Cord: 16.4 ft.

Weight: 5lbs.

Protection class: 2

TROUBLESHOOTING



CAUTION: Prior to cleaning or maintaining your steamer, isolate the unit by removing the cord from the power socket.

PROBLEM	SOLUTION
LED is not on	<ul style="list-style-type: none">• Ensure auto shutoff feature has not been engaged. Simply turn power button back on and proceed.• Ensure steamer power cord is correctly plugged into a 120V AC power outlet only.• Ensure circuit breaker is operational.• Try operating steamer from another power outlet.• If unit is still not working, call customer service at 1-888-318-PYLE / 718-535-1800.
No steam	<ul style="list-style-type: none">• Ensure water tank is full.• Calcium and mineral deposits can build up and impact the performance of your steamer, use distilled water if necessary.
Pale residue left on floor	<ul style="list-style-type: none">• This can be caused by leaving the steamer in the same spot for too long. Residue can be removed with household white vinegar or a decalcifying product.• Alternatively, reheat the area for one minute to remove residue (do not overheat area.)
Steamer is leaking water	<ul style="list-style-type: none">• The microfiber cloth pad may be overused and needs to be changed out with additional cloth pad(s) provided. Cloth pads can be cleaned in washer/dryer. Over time, however, the cloth pads can start to wear.• Be sure microfiber cloth pad is attached properly.• If the unit should continue to leak water, unplug and wait 5 minutes before trying again.

ONE YEAR LIMITED WARRANTY

Our Sienna product warranty extends only to the original customer purchaser of the product. It is warranted by the manufacturer to be free from all defects in materials or workmanship for a period of one year from the date of original purchase. This warranty is subject to the following conditions, exclusions and exceptions.

Exclusions:

This warranty does not cover normal wear and tear of parts and does not apply to any product that has been tampered with or used for commercial purposes. This warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to mishandling in transit or shipping. This warranty does not cover damage or defects caused by or resulting from repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by the manufacturer. This warranty is effective only if the product is purchased and operated in the USA or Canada, and does not extend to any units which have been used in violation of written instructions furnished by the manufacturer, or to units which have had the serial number removed, altered, defaced or rendered illegible.

Performance:

During the limited warranty period, the manufacturer will, at its option, repair or replace free of charge a defective product or part that is covered by this warranty. As a matter of warranty policy, the manufacturer will not refund the purchase price. A repaired or replacement product will be covered by this warranty for the balance of the initial one year warranty period and an additional one month period.

To contact Customer Service:

Write: Anvid Products, Inc.
1401-1499 Greenville Road
Livermore, CA 94550

E-mail: customerservice@anvidproducts.com

Or call : 1-888-5SIENNA (1-888-574-3662)

Please refer to your product name and model number when contacting Customer Service.

Customer Service will give you further instructions for returning a defective product for repair or replacement. When returning a defective product, carefully pack the item to avoid damage in shipping, the manufacturer cannot assume responsibility for loss or damage during incoming shipment. We recommend that you insure the package, as damage in shipping including the shipping cost is not covered under our warranty. Be sure to include the following items with your product: any accessories related to the product, your name, complete address and phone number, a note describing the problem you experienced; and a copy of your sales slip or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

Limitation of Remedies: No representative or person is authorized to assume for the manufacturer any other liability in connection with the sale of our products. This limited warranty is not transferable and any sale, transfer or other disposition of the product voids this limited warranty. There shall be no claims for defects or failure of performance or product failure under any theory of tort, contract or commercial law including, but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE PURCHASER UNDER THIS LIMITED WARRANTY, AND IN NO EVENT SHALL THE MANUFACTURER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSSES OR EXPENSES YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF THE PRODUCT OR FOR ANY BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Limited Warranty Policy

All Pyle products are carefully constructed and thoroughly tested before shipment. Products purchased in the USA are warranted to be free of defects in material and workmanship for one (1) year from the date of purchase. This warranty is limited to the original retail purchaser.

Should the product fall due to factory defect in material or workmanship, your unit will be repaired or replaced at the solo discretion of Sound Around Inc. You can contact our customer service department at (718) 535-1800.

To obtain warranty service, the unit must be carefully packed and shipped prepaid to:

Sound Around Service Center
1600 63rd Street
Brooklyn, NY 11204

- You must also include the following items:
- A copy of your sales receipt or other proof of purchase.
- A brief letter indicating the problem you are experiencing.
- Include in your letter your return address, daytime phone number
- Must include a money order for \$25.00 for return shipping, handling and insurance or provide your Visa/ MC number with expiration date.

Our Obligation under this warranty is limited to the repair or replacement of the defective unit when it is returned to us prepaid. This warranty will be considered void if the unit was tampered with, improperly serviced or subject to misuse, neglect or accidental damage.

Register Your Product Online

www.PyleAudio.com

How would you like to extend the warranty on your product for three months? Simply write and post a review of the product online. Then, register your product online at pyleaudio.com or send an e-mail to warranty@soundaroundusa.com including your name, address, and phone number, as well as a link to the review.

We want you listening for a lifetime



Introducing Pyle Rewards!

- Get points for registering your Pyle product, posting text or video reviews online
- Redeem your points for cool items like Pyle-branded t-shirts, pens, and Pyle products, including mini speakers, sports watches, guitar pedals, iPod clock radios, and more!
- Connect your Pyle Rewards account to your Facebook and Twitter accounts to show off all the cool stuff you earned!

For more information, visit PyleAudio.com/rewards

Check us out on Facebook & Twitter:

www.facebook.com/pyleaudio

Twitter: @pyleaudio

