

Fig 3c


**Warning:** Some TV require two people to lift, as we are not responsible for any personal injury or product damage due to mishandling.

Thank you for choosing our products

Pyle Audio  
 1600 63rd st , Brooklyn, NY, 11204  
 (718)236-8000



**Fixed Flat Panel TV Bracket**  
 Multifunctional double deck wall mount  
 INSTALLATION GUIDE  
 Item No.:PSW578UT

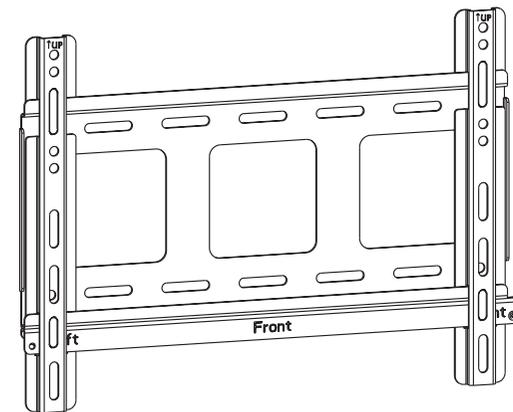


- Easy installing: Just hang up the display
- Safety: locking by locking bar on the bottom
- Max load capacity:35kg/77lbs
- TV size range: 23" ~37"

www.pyleaudio.com  
 MADE IN CHINA

**IMPORTANT:** If don't understand about right install ways, please consult to normal installing specialist.

**Hardware List:** Actual parts appearance and the quantity may different with illustrated.

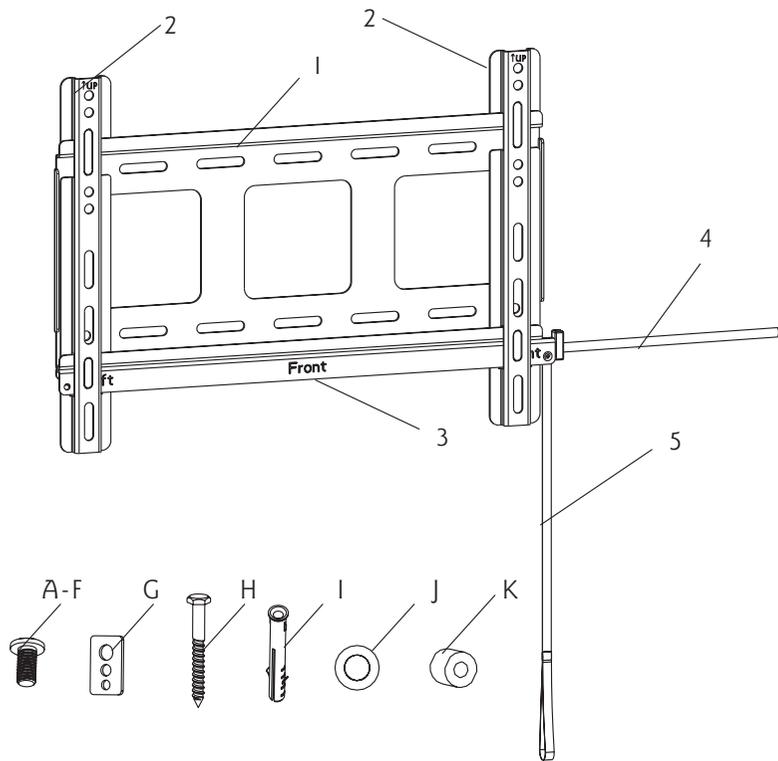

ID	Qty	Description
1	1	Wall plate
2	2	Bracket
3	1	Locking bar
4	1	Rotating rod
5	1	Ribbon
A	4	M4×12mm bolt
B	4	M4×16mm bolt
C	4	M5×16mm bolt

ID	Qty	Description
D	4	M6×16mm bolt
E	4	M5×36mm bolt
F	4	M6×36mm bolt
G	4	Square washer
H	4	Long bolt
I	4	Wall anchor
J	4	Long bolt washer
K	4	Spacer

### Step 3: Hanging display

Firstly lift the bracket mounted display over the wall mount. And then hook the brackets over the top of the wall mount. Rotate the display let the bottom of the brackets hook over the bottom of wall mount, as shown in Fig. 3a. Then use the Locking bar(3) to prevent the display from being removed or accidentally knocked off of the wall plate. When the locking bar half inserts into the wall plate, you can use the rotating rod(4) to make it fully inserted. screw out the locking rod(4), then the TV is settled, As shown in Fig.3b and Fig 3c. if you think the ribbon(5) is too long, You could hide it at the back of the television, once you want to uninstall the TV, it could help you to take out the locking bar(3).

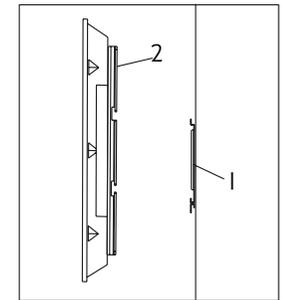


Fig 3a

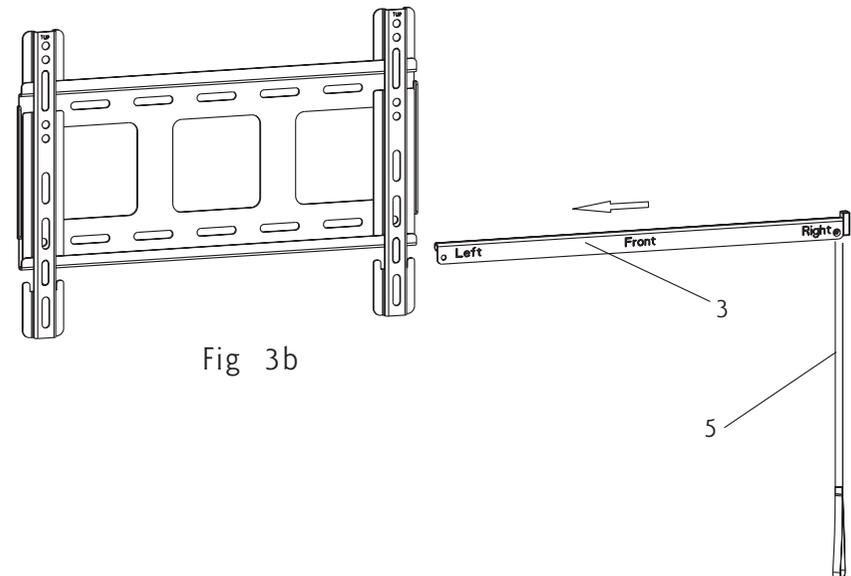


Fig 3b

After determining the height of stand, follow the installation instructions in below to install wall mount to different kinds of wall -wooden, brick, concrete and stone.

**Wooden wall:**

Using a awl or nail to make where the nails are located, as shown as fig.2b. Pre-drill these holes with a 5mm drill bit to at least 40mm in deep hole. Please make sure these holes are level and located at center. Use wall mount as a template to mark the location of other three holes and drill the same holes. Fix the wall mount to the wall with 4 long bolts(H) and washers(J).

**Brick, Concrete and Stone wall:**

Using the wall mount as template to mark 4 holes location on the wall. Two holes are located at the top row of the slots and two more are located at the bottom row. Please make sure these holes are level. Pre-drill these holes with a 10mm drill bit to at least 50mm deep hole. Insert wall anchors(I) into each of these holes. Attach the wall mount to the wall using 4 long bolts(H) and washers(J).

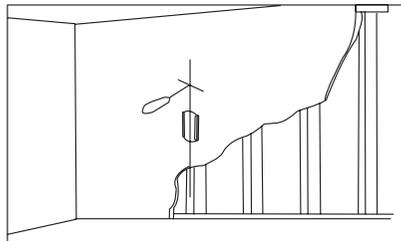


Fig 2b

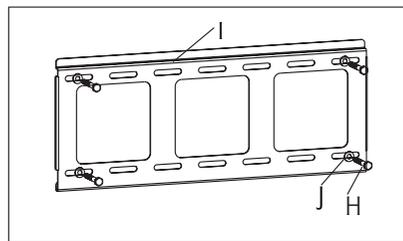


Fig 2c



We are not responsible for any personal injury or product damage due to mishandling, incorrect mounting, incorrect assembly or incorrect use of this product.

**Note:** The supplied wall mounting hardware is not for use on steel stud walls or cold cinder block walls. If you are uncertain about the nature of your wall, please consult a qualified contractor. If the hardware you required is not included please contact your local hardware store.

**Caution:** This Product LCD /Plasma Wall Mount Bracket is intended for use only with the maximum weights indicated .See apparatus instructions .Use with products heavier than the maximum weights indicated may result in instability causing possible injury .

**Step 1: Attach bracket to TV**

Check your TV manual to confirm the diameter of bolt to be used or choose an appropriate bolt according to size, height and position of the holes on your TV. See pages 4 of these instructions for examples.

For correct installing, make sure that hook of every bracket must facing down. Use selected bolts and washers for installing bracket at the back of display. Adjust two brackets to equal heights and level. Once aligned, tightly secure the bolts. **Note:** the "↑UP" side on the top. As shown in Fig. 1a.

**IMPORTANT:** Don't force the bolt into the hole, which will cause a damage of equipments and injure of person. Don't use electric drill to fasten any bolts.


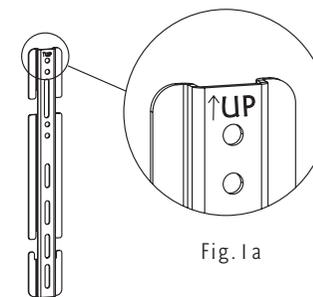


Fig. 1a

Following examples shows how to use bolts and square washers.

Install the bracket directly to the back of display by using bolts and square washers provided. As shown in Fig. 1 b.

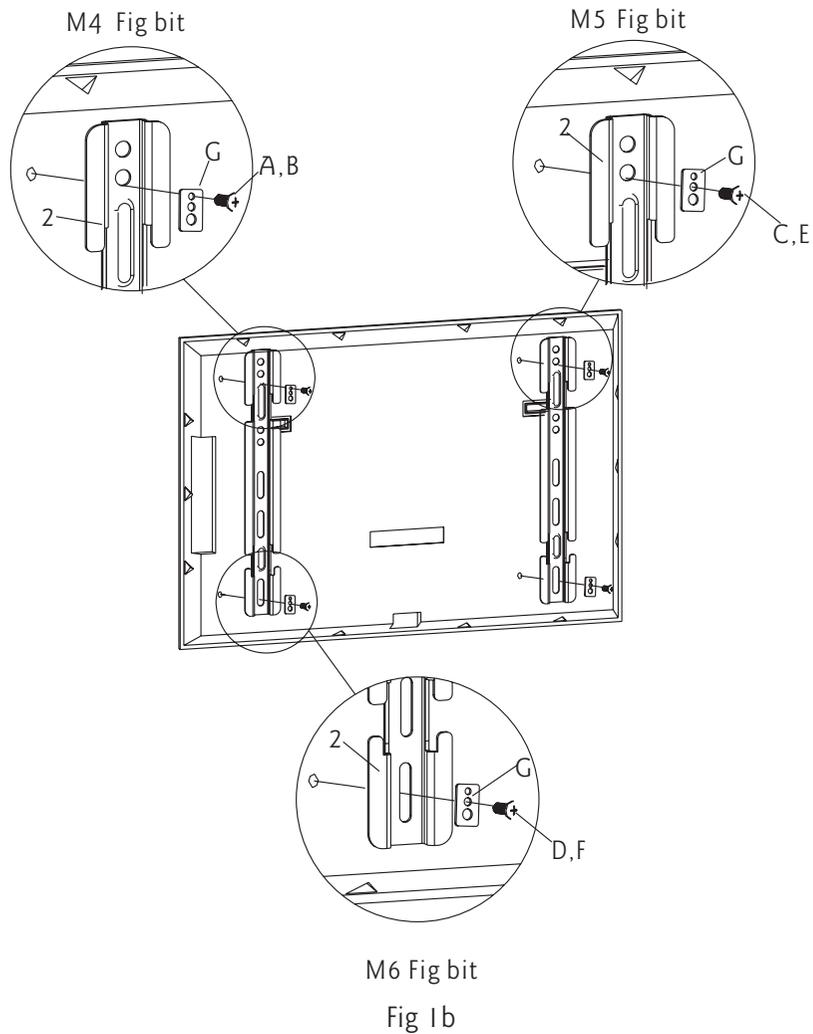

M6 Fig bit  
Fig 1 b

## Step 2: Attach mount to wall

First, determine the height of stand

The best height of stand is parallel to eyelevel of a person who sitting on a couch.

Normally, the horizontal distance of eyelevel is about 4' from ground level.

The following two conditions are for determining the perfect height of stand:

- 1) the distance between wall and couch (Fig 2a).
- 2) the distance of eyelevel from ground level plus the distance measured from eyelevel of a person sitting on couch with viewing angle of  $15^\circ$  (Fig 2a).

For example:

- 1) the distance of 'a' is 5' - 7', the distance of 'b' is about 1'
- 2) the distance of 'a' is 8' - 13', the distance of 'b' is about 3'
- 3) the distance of 'a' is 14' - 17', the distance of 'b' is about 4'

The perfect height of stand centre will be anywhere within b, where you feel comfortable for viewing.

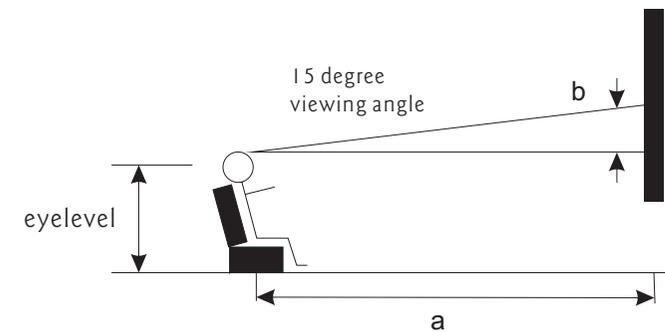


Fig 2a