

Thank you for choosing our product

**Warning**


This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!

1. Make sure these instructions are read and completely understood before attempting installation. If you are unsure of any part of this installation, contact a professional installer for assistance.
2. The wall or mounting surface must be capable of supporting the combined weight of the mount and the display; otherwise the structure must be reinforced.
3. Safety gear and proper tools must be used. A minimum of two people are required for this installation. Failure to use safety gear can result in property damage, serious injury or death.



**LCD WALL MOUNT  
Installation Instructions**

Item No.:PSW710S

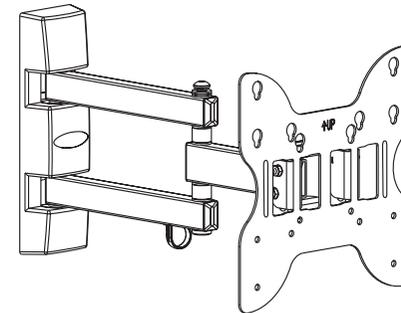

- TV Size Range: 14" ~ 37"
- Maximum Weight Capacity: 25kg/55lbs
- Adjustable angle: -5° ~ 15°
- Mounting Pattern: VESA 75 , VESA 100 , VESA 200x100  
or VESA200X200


[www.pyleaudio.com](http://www.pyleaudio.com)

MADE IN CHINA

**CAUTION**

This product was designed to be installed on wood stud walls and solid concrete walls. Before installing make sure the supporting surface will support the combined load of the equipment and hardware. Never exceed the Maximum Load Capacity. This product is intended for indoor use only. Use of this product outdoors could lead to product failure or personal injury.

Hardware Kit:

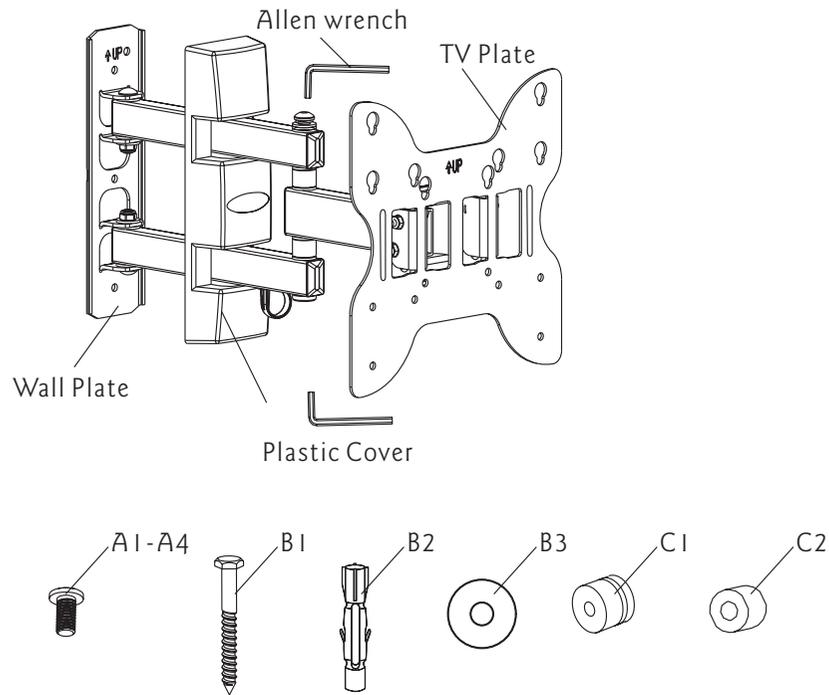


ID	Qty	Description
A1	4	M4×25mm Bolt
A2	4	M5×25mm Bolt
A3	4	M6×25mm Bolt
A4	4	M8×16mm Bolt
B1	4	Drywall bolt
B2	4	Concrete Anchor
B3	4	Washer
C1	2	Fastener
C2	2	Spacer


If your TV's mounting holes can't match bolt (A1,A1,A3), you can use bolt (A4)

Attaching TV plate To Screen

Attach TV plate to screen using four screws(A4). Tighten bolts firmly. Do not overtighten.

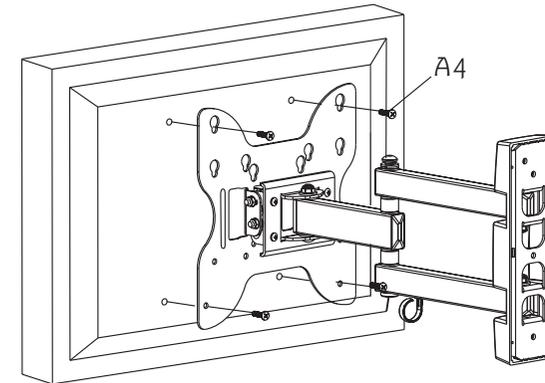


Lift the screen and hook spacers(C1) on to the wall plate. Fasten the bottom of the screen to wall plate using two selected bolts(A1 ,A2,A3) and two spacers(C2). Tighten bolts firmly. Do not overtighten.

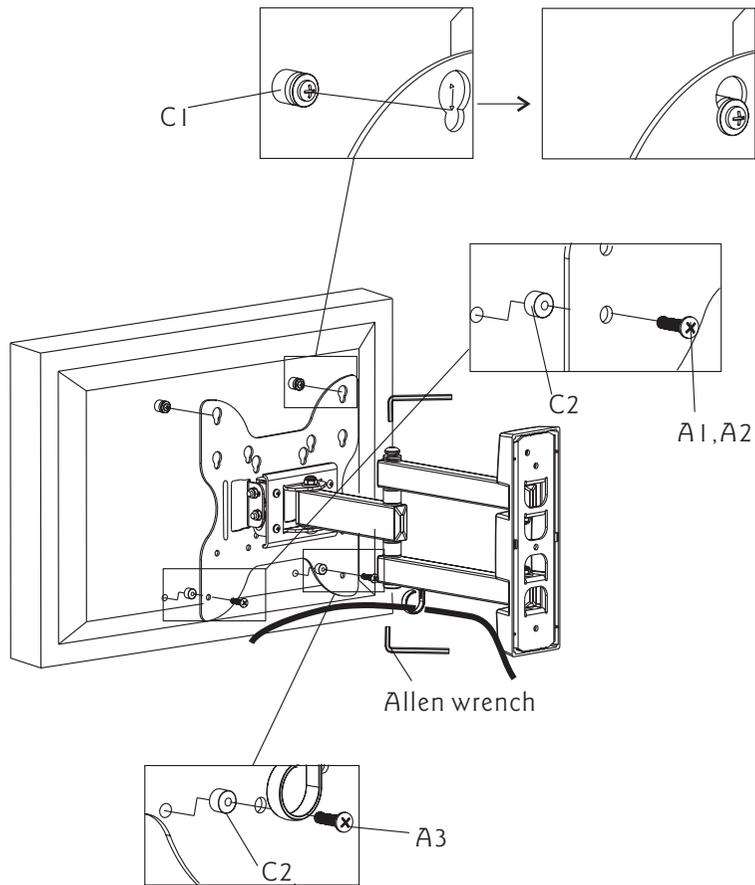


### Part 1a-Wood Stud Mounting

Use wall plate as a template, make sure it is level, and mark four mounting holes along the center line of the wood studs. Drill four 3/16" (4.5mm) dia. holes 60mm deep. Level wall plate and attach to wall with four long bolts(B1) and four washers(B3). Tighten bolts firmly. Do not overtighten.

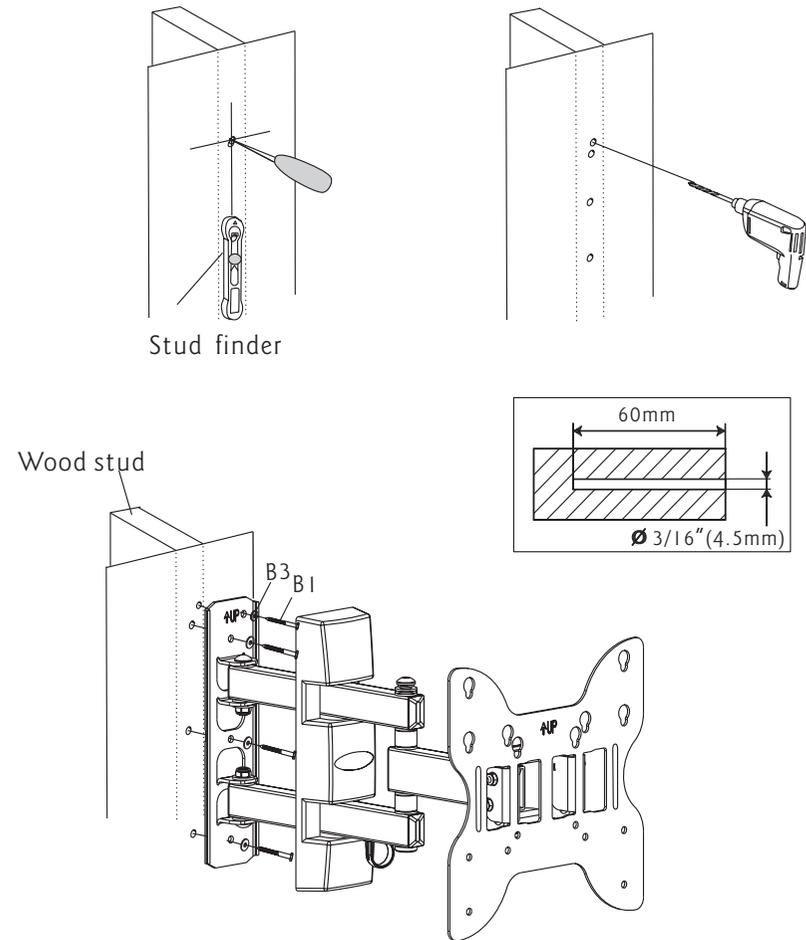

## Part 1b-Concrete Wall Mounting

Level wall plate and use wall as a template to mark four holes. Drill four 7/16" (10.5mm) dia. holes 60mm deep. Insert four anchors(B2) into holes and secure wall plate with four long bolts(B1) and four washers(B3). Tighten bolts firmly. Do not overtighten.

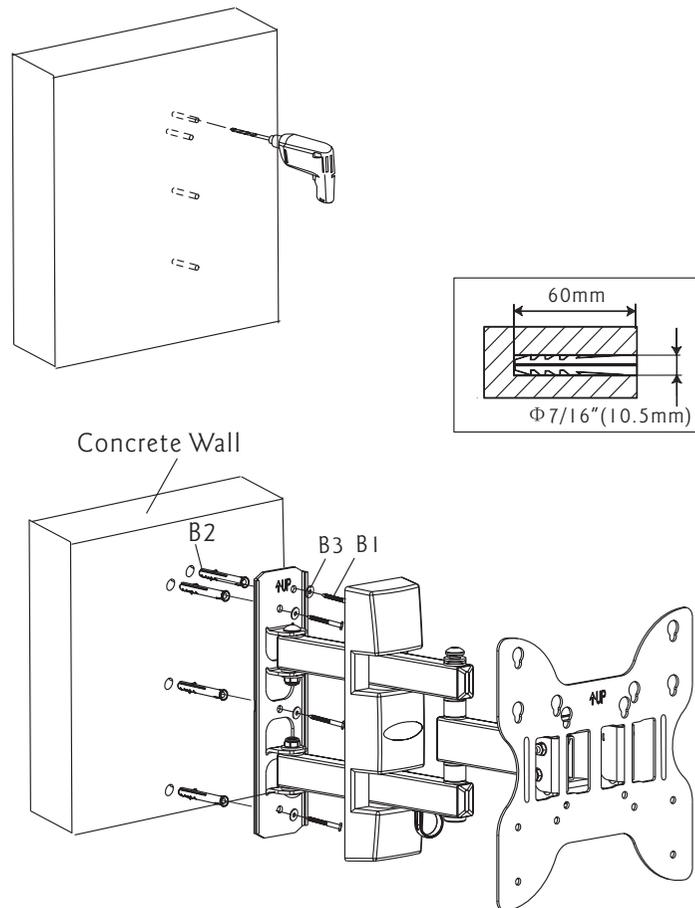

## Part 2-Attaching Screen to TV plate

Select the small(A1), medium(A2) or large(A3) bolts. Attach two spacers (C1) to the top two mounting holes on the back of the screen using two of the selected bolts. Tighten bolts firmly. Do not overtighten.

- A: VESA 75 (75mm x 75mm)
- B: VESA 100 (100mm x 100mm)
- C: VESA 200 (100mm x 200mm)
- D: VESA 200 (200mm x 200mm)

