

**PYLE**

PyleUSA.com

**PUNP37BT**

CLASSICAL USB PLAYER WITH AM/FM  
RADIO, BLUETOOTH, AUX-IN

*Vintage*



**INSTRUCTIONS MANUAL**

## CAUTION

**TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

 <p>The lightning flash with arrow head symbol, within an equipment triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	--	---

## IMPORTANT SAFETY INSTRUCTIONS

- 1) Please read these instructions and keep them for future reference.
- 2) Pay attention to all warnings.
- 3) Follow all instructions.
- 4) Do not use this apparatus near water.
- 5) Clean only with a dry cloth.
- 6) Do not block any ventilation openings.
- 7) Install in accordance with the manufacturer's instructions. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

- 8) Protect the power cord from being walked on or kinked, in particular where the plug is fitted and at the point where it exits from the apparatus.
- 9) Only use attachments I accessories specified by the manufacturer.
- 10) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 11) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 12) This appliance should not be exposed to dripping or splashing water and no object filled with liquids, such as vases, should be placed on the apparatus.
- 13) Do not overload the wall power outlet. Use only power source as indicated - i.e.120V AC mains.


## **IMPORTANT NOTES**

Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas. Do not attempt to clean this unit with chemical solvents as this might damage the finish. Use a clean dry cloth. Operate controls and switches as described in the manual Before turning On the power, make certain the AC power cord is plugged in. When moving the set, be sure to first disconnect the power cord.



## POWER SOURCE

This product is designed to operate on 120V 60Hz AC Mains only. Attempting to operate this system from any other power source may cause damage to the system, and such damage is not covered by your warranty.

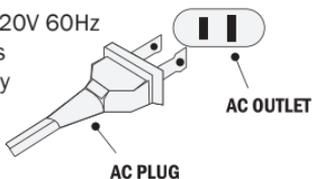

## NOTE:


You will note that this system is equipped with domestic standard AC power 2-pin plug. If this plug does not fit into your existing.

## PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from nonmigrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.


# LOCATION OF CONTROLS AND INDICATORS

## FRONT PANEL

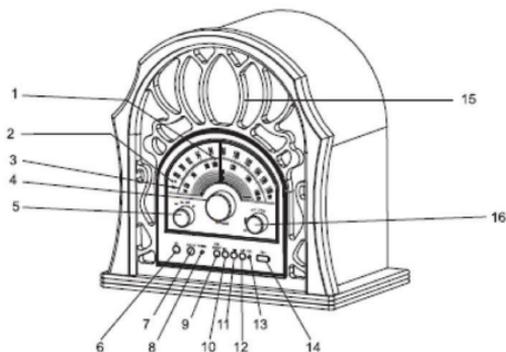

- |                                   |                          |
|-----------------------------------|--------------------------|
| 1. Pointer                        | 9. USB/ON/OFF Button     |
| 2. BLUETOOTH Indicator            | 10. Backward Skip Button |
| 3. Tuning Knob                    | 11. Play/Pause Button    |
| 4. AM/FM Dial Scale               | 12. Forward Skip Button  |
| 5. Functions Knob (AM/FM/AUX/ BT) | 13. USB Indicator Light  |
| 6. Headphone Jack                 | 14. USB Socket           |
| 7. AUX IN Jack                    | 15. Speakers             |
| 8. Power Indicator Light          | 16. Volume/Off Knob      |

## BACK PANEL

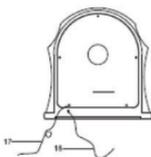

- 17. FM Wire Antenna
- 18. AC Power Cord

## **OPERATING INSTRUCTIONS**

### **Radio Operation**

1. Turn the unit on by rotating the VOLUME/ON/OFF Knob located of the front panel to the on position.
2. Rotate the functions knob to select AM or FM mode.
3. Select the desired station by rotating the TUNING knob.
4. Adjust the VOLUME knob to the desired sound level.

### **Antenna Information**

The AM antenna is inside the cabinet. If AM reception is unsatisfactory, Try repositioning the cabinet slightly until the internal antenna is picking up the strongest signal. The FM wire antenna is located on the back of the cabinet. If necessary, adjust the position and direction of this antenna until you find the position that provides the best reception.

### **USB Operation**

1. Insert the USB into the USB socket.
2. Press the USB ON/OFF button to set the USB function on.
3. Playback will start automatically, and the USB indicator will remain on.
4. Adjust the VOLUME knob to the desired sound level.
5. To pause playback, press the PLAY/PAUSE button.
6. Press the Forward Skip button or Backward Skip button to select the desired track.
7. To stop playback, Press the USB ON/OFF button again .

### **BLUETOOTH FUNCTION OPERATION:**

1. Rotate the FUNCTIONS KNOB to select BLUETOOTH mode.
2. Turn on your Bluetooth device and scan.It will be displayed as “Pyle Radio” when discovered by your Bluetooth device. Enter password “0000” during pairing if necessary.



3. When the unit is paired with your Bluetooth device, you can hear a short tone from the speakers. Play your Bluetooth device as you normally do and the sound will be played from this unit. Then you may enjoy the music.


**Note:**

1. Make sure your Bluetooth device and this unit is within 10 meters
2. Check and see if there are other Bluetooth devices nearby interfering the signal and connection.
3. This unit is could be paired by multiple different Bluetooth devices, but could only be connected and played by one of them at a time. Make sure no others device is actively connected to it already when you are trying to connect the one you are wording on.

**AUXIN OPERATION**

1. Rotate the FUNCTIONS KNOB to select AUX mode.
2. Plug the auxiliary cable into AUX IN JACK on the front panel of the unit.
3. Plug the other end of auxiliary cable into the external devices.
4. Play the external devices as you normally do and the playback will be played from the unit.



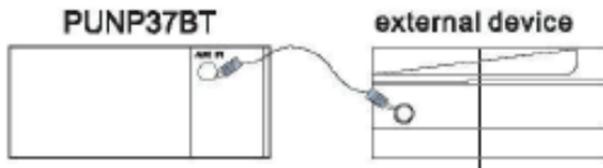

### HEADPHONE OPERATION

1. Connect a headphone to the HEADPHONE JACK.
2. Adjust VOLUME KNOB to the desired level

**NOTE:** When using headphone, the sound of the unit speakers will be cut off.

\* *Headphones is not included with unit.*

### Technical Specs:

Digital Audio File Compatibility: MP3 / WMA

Maximum USB Flash/SD Card Support: 32GB

Power: 120V, AC

Dimensions (L x W x H): 10.6" x 7.1" x 11.0"

**PYLE**

PyleUSA.com