

FURNITURE COVER

MODELS: PVCBN72, PVCCH20, PVCCH24, PVCFP94, PVCLG85, PVCTBL60, PVCTBLCH40, PVCTBLCH46, PVCTBLCH50, PVCTBLCH52

PYLE[®]
PyleUSA.com

WARNING

Do not operate an outdoor appliance or machine with the cover on. Fabric is NOT fire resistant. Keep away from open flames or burning logs.

CAUTION!

When covering an outdoor appliance, let it cool before you put the cover on it.
Drain water from water fountains before installing the cover.

INSTALLATION


Check your patio furniture, appliance or machine to make sure there are no sharp objects or corners that could stress your cover as you pull it on.

Click-Close Straps:



If your cover has clickclose straps, wrap them around your furniture legs and snap shut.

Handles:

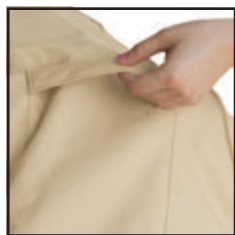

If your cover has handles, use them to help pull the cover over your item.

Toggle with Stretch Cord:



If your cover has the toggle with stretch cord hem, you can adjust the length of the cord. Cinch the heavyduty fabric closed by holding the cord in onehand and smooth the hem of your cover back away from you to expose more cord to pull out. Repeat as necessary to adjust the cover.

CLEANING AND CARE

Clean your cover with a soft brush and lukewarm water.

DO NOT USE SOAP as it may remove the protective coatings added by the factory.

DO NOT PACK WET.

Air dry.

