

PYLE®

PyleAudio.com



Model:

PVRCM500

IMPORTANT SAFETY INSTRUCTIONS

Read this manual before use and keep it handy for future reference.

Precautions

To maintain optimum performance:

Do not use the unit in extreme hot , cold, dusty or high humid places.

Do not use or keep the unit in following places.

- In a high humid area, such as a bathroom or hypogeum.
- In an area exposed to direct sunlight (e.g. inside car where it becomes extreme hot).
- Near sources with strong magnetism, such as television, speaker or magnet.
- In trembly places, such as on the car dashboard or shaky shelf.


For safety

- Do not attempt to disassemble this unit.
- Avoid pins or else objects getting inside the Unit.
- Take care of it , do not throw the unit .


Attention : Do not listen with the earphones as following circs .

- listen at moderate volume in case of hearing harm.
- Do not wear the earphones while driving or cycling. It may cause traffic accident.
- You should use it with extreme caution or temporary pause in latent accident situation while walking, Jogging, etc.
- If you hear soundless, do not turn the volume up too high because the music may suddenly begin at high volume in case of hurting your ears or damaging the headphone, turn the volume control to the lowest level before starting playing back and turn it up slowly to the desired level.


LOCATION OF INDICATORS

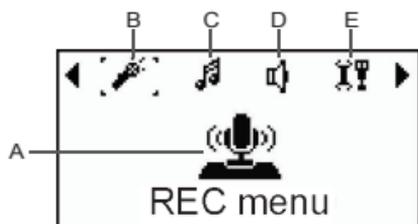


Standby mode

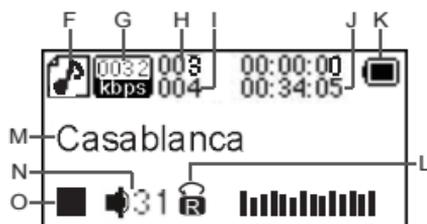

Music mode

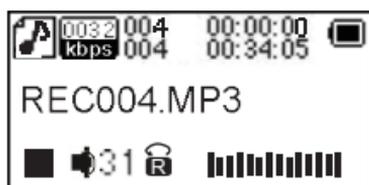

Voice mode

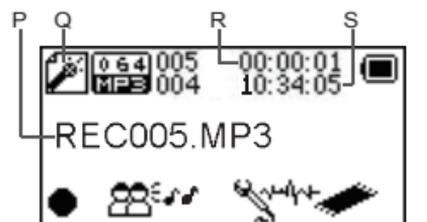


Rec mode

- A. Rec menu indicator
- B. Rec menu selector
- C. Music mode selector
- D. Voice mode selector
- E. System setting selector

- F. Voice indicator
- G. Bite rate
- H. Current file number
- I. Total files
- J. Duration indicator
- K. Battery indicator
- L. Repeat mode indicator
 View repeat repeat one
- M. Music file name
- N. Volume indicator
- O. Stop/Play/Pause/REC indicator
 / / /
- P. Recording file name
- Q. Sound source indicator
 Microphone/Tel record
 Line In
- R. Elapsing recording time
- S. Remaining recording time

LOCATION OF KEYS

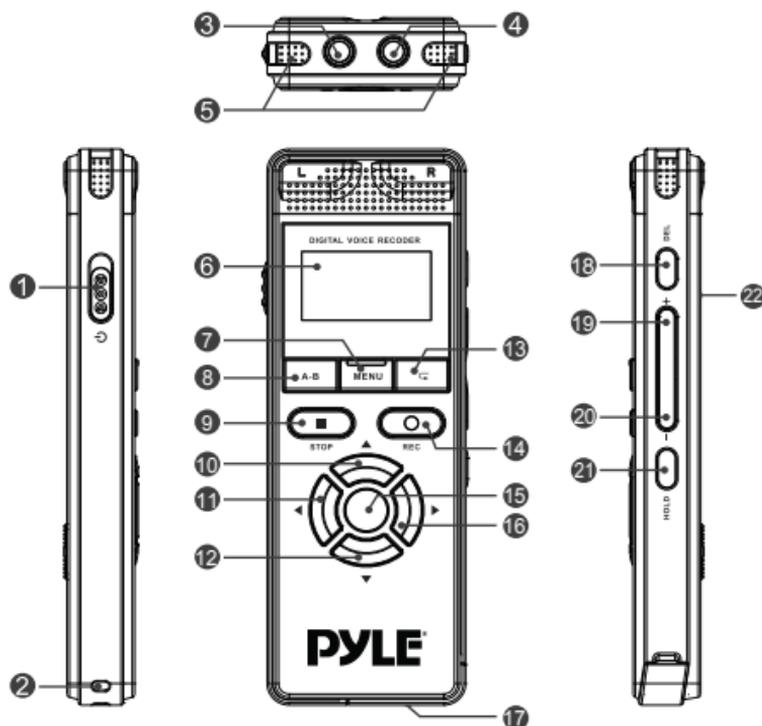


- | | |
|-----------------------|----------------|
| ① Power switch | ⑫ Down ▼ |
| ② The rope hole | ⑬ Return ↶ |
| ③ Microphone Jack | ⑭ Recording |
| ④ Earphone Jack | ⑮ PLAY/PAUSE |
| ⑤ Built-in microphone | ⑯ Next file ▶ |
| ⑥ LCD display | ⑰ USB jack |
| ⑦ MENU | ⑱ DELETE |
| ⑧ A-B replay A-B | ⑲ Volume + |
| ⑨ STOP ■ | ⑳ Volume - |
| ⑩ Up ▲ | ㉑ HOLD |
| ⑪ Previous file ◀ | ㉒ Loud speaker |

Basic Operation

To turn on/off the unit

 - 1 Push the Power switch up to open the unit, then it'll go to Standby mode, and push it down to turn it off.
* It'll be auto power off if there is no button operation for 2 mins.. (except for recording, playing status.)
- 2 When the Power switch is on up position, you may press and hold DELETE button for power on or off.



HOLD function

 
- 1 Press and hold HOLD button for 2secs. to lock this unit, the "🔒" shows on LCD when any key is pressed.
* It's very useful function to avoid error operation while recording or playing.
- 2 Press and hold it again to set it off, and it will recover all buttons' function.

REC menu settings





Turn this unit on, it'll turn to Standby mode, then press ◀ or ▶ button to select REC menu selector, and press PLAY/PAUSE button to enter into, and then press ⏪ button to return.

In record menu, select item by ▲ or ▼ button, then press PLAY/PAUSE button to set or confirm.


- * Start voice recording: select it to go to Rec mode and start a recording.
- * Recordings library: select it to enter into recording file list, and you may press PLAY/PAUSE button to play it. You may press MENU button to delete current file or all recording files.



Standby mode

    

 - * Record Format: to select record format for MP3 or WAV.





- * Record Setting: select it to enter into record setting.

Basic Operation

Record setting

- * Set rec bitrate: select it to set the recording bitrate as below:
MP3: 192kbps, 128kbps, 64kbps, 32kbps
WAV: 1536kbps, 1024kbps, 768kbps, 512kbps
- * Set AVR mode: select it to set the Normal I or AVR mode.
Normal: for normal recording.
AVR mode: It'll pause recording if there is no eligible volume, and once the detected volume is eligible, it'll continue recording automatically.

  The eligible volume value is set by system, and related to AGC set.



- * Record from: set the recording way for Microphone, Line In, Tel Record according to your demand.
- * AGC Set: set the AGC level from level 1 to level 7. When the sound is near this unit or volume is very high you may set this value low and vice versa.

System setting

 
 
In Standby mode, press ◀ or ▶ button to select System setting selector, and press PLAY/PAUSE button to enter into.

In System setting, select item by ▲ or ▼ button, then press PLAY/PAUSE button to set or confirm, press ⏪ button to return.






Standby mode

- * Sleep timer: to set the automatic shutdown time.



- * Backlight timer: to set the backlight time for 10s, 20s, 30s or always on.

   - * Date and time: to set the date time and format.






- * Language: to set the language for English or Spanish.

- * Information: to check the disk space informations.

- * Format device: select to format this unit.

   
- * Factory settings: select to restore factory settings.



Operation

Start a recording

 - 1 Before start a recording, you may preset the parameters as your demands following previous pages.
- 2 It'll goto Rec mode and start to record, if you press Recording button in any status.
- 3 You may press PLAY/PAUSE button for a pause, and press it again to continue, then press STOP button to stop and save this recording.
 - * While recording, you may press \leftarrow button to save or cancel this recording, then goto "recording library" .



Rec mode

Playing voice file

- 1 In Standby mode, you may select Voice mode selector and enter into.
- 2 Press \leftarrow or \rightarrow button to select desired voice file, then press PLAY/PAUSE key to play, and press it again for a pause, then press STOP button to stop playback.
 - * While playing, you may press Volume + or Volume - to adjust the playing volume from 1(low) to 30(high). And, press and hold \leftarrow or \rightarrow button for fast rewind or fast forward.
- 3 While playing, press \leftarrow or \rightarrow button, it'll goto previous or next file for playback.



Standby mode

 


Voice mode

A-B replay


If you wanna replay a section in a file, you may use the A-B replay function.

- 1 While playing, press A-B button, the "A-B" shows on LCD, and the "A" blinks, then press it to set desired start point, then the "B" blinks, and then press it again to set end point, it'll replay this section.
 - * for the replay times and replay interval settings, please refer to page 7.



Delete file


 
- 1 Select desired file by \leftarrow or \rightarrow button, press DELETE button to operate, then press \uparrow or \downarrow button to select, and press PLAY/PAUSE button to delete it or not.
 - * While playing, you may also press DELETE button to delete current playing file.
 - * For another way to delete one or all files, please refer to page 4.



Operation

Play setting

  - 1** While playing or be in Voice/Music mode, press MENU to set the play setting.






- 2** Select *Play mode* item to enter into.

* Repeat: to set the play mode for repeat off, repeat one, repeat all or view playing (play each file for 10s.).

* Shuffle: to set the shuffle playing on or off.

   * Repeat settings: to set the replay times and interval for A-B function




+ Replay Times: to set the A-B section replay times, press ▲ or ▼ button to adjust, and press PLAY/PAUSE to confirm.

+ Replay Interval: to set the A-B section replay interval.

- 3** Select *Sound settings* item and enter into.


* Equalizer: to set the playing equalizer off or for rock, funk, hip hop, jazz, classical, techno.

 * Variable Speed Playback: set the play speed from -8 to +8, the "0" is normal speed.



- 4** Select *Sleep timer* item to set as your demand.

 - 5** Select *Bookmarks* item to enter into, set it as your demands, and you can set 10 bookmarks for one file at most. After setting, you can also delete them as your demand.




Operation

Music mode

Connect the unit to your computer by USB cable, then you may copy music files into the disk directory of this unit .

 - 1 In standby mode, select the Music mode selector, then press PLAY/PAUSE button to enter into.
- 2 You may have all playing operations and play settings as your demands by the same way in Voice mode.
* referring to page 6~7.
- 3 In Music mode, you may press  button to goto music file list, then select one to play or press  button again to return to Standby mode.



Music mode

Last played

- 1 In standby mode, press  or  button to goto "Last played" item, then press PLAY/PAUSE button to goto last played file.



* For last played file caught, it's just available for current time, so it'll has no this item if you just open it or no file played.

Battery charge

This unit is with built-in Li-ion battery, you may charge it by USB connecting to your PC or 5.0V adapter.

Download and upload files

- 1 Connect the unit to a computer by USB cable .



- 2 Copy recording files to the removable disk (in "Record" directory) or computer, or copy music files to your recorder (in disk directory) as your demand.
- 3 After finishing your operation, disconnect the unit with your PC by the Safety Remove Hardware procedure.

Specifications

SPECIFICATIONS

Recording time (MP3) 8GB	32kbps	64kbps	128kbps	192kbps
	583h	285h	142h	101h
Recording time (WAV) 8GB	512kbps	768kbps	1024kbps	1536kbps
	36h	24h	18h	12h
Recording	Format	WAV, MP3		
Playing	Format	MP3, WMA, MAV, APE, FLAC, OGG, M4A		
SINR	>=90dB			
Frequency Response		20Hz - 20KHz		
Memory (SD or FLASH)		Build-in memory 8GB		
USB		USB V2.0 Socket		
Jacks	MICROPHONE	Ext. Mic (D3.5mm ,Stereo)		
	EARPHONE	Earphone (D3.5mm, Stereo)		
	USB JACK	MINI 5Pin		
Loud speaker		8 ohms dynamic speaker		
Output power		Speaker	100 mW(8ohm)	
		Earphone	10 mW(32ohm)	
Power supply		Built-in Li-ion battery		
Power life	Recording	WAV:512kbps 20h	MP3:32kbps 27h	
	Playing	4h (Loudspeaker with volume 31)		
Size		100.6 X 36 X 13 MM		
Weight		57 g		

* Specifications are subject to change without notice.