

nutrichef

PWIRBBQ40


Smart Wireless BBQ Thermometer

USER MANUAL



This thermometer is not a standard bluetooth device, please do not try to connect it in the bluetooth device list of the smart phone OS. If a PIN code is required, just cancel it and pair it in the app of the thermometer.

Get to know the device

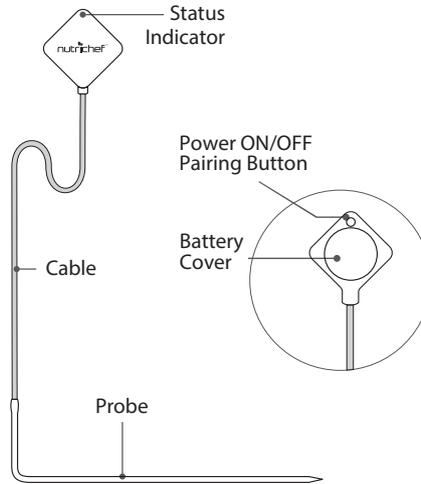

Put in the Battery

1. Twist the battery cover counterclockwise to unlock.
2. Put in batteries, make sure the side with an icon of + is facing outside.
3. Twist the battery cover clockwise to lock.



Download the APP

Search the keyword 'easybbq' in Appstore or Google Play, or scan the following QR code with your phone. Download and install it for free.



EasyBBQ app



Do not place the plastic thermometer on the side of hot surfaces. It is not designed to withstand heat from a grill or smoker. Only the thermometer probes can come into contact with hot surfaces.

www.NutriChefKitchen.com

www.NutriChefKitchen.com

Pair with your phone

1. Press and hold the power button on the device for 3 seconds to power on.
2. Keep the bluetooth switch of your phone on.
3. Launch the app, and follow the instructions in the app to pair and activate the device:
Press the Pairing Button (in the back of the device); or, scan the bar code on the package or on the device.
4. Connected successfully.

Status Indicator

Blinking Green

Solid White

Blinking Blue

Once paired the device with your phone, you don't need to do it again, unless you change to other phones.

Insert the device

Insert the probe into the food, make sure the front tip of the probe is in the center of the food to get accurate temperature.

DO NOT put the device directly in fire flame. Keep the main unit as far as possible to fire.



Enjoy your barbecue time

Choose food type and preference for the food where each probe is inserted, the app will display its current and target temperature.

When the food is ready, the app and the device will alarm.



The user interface of the app may be changed when update. Please follow the instructions in the app.

Power ON/OFF

Power ON:


Press and hold the power button for 3 seconds.

Power OFF:

- Press and hold the power button for 3 seconds, with the LED turning into white for 1 second.
- Auto-off after 8 hours out of connection with phone.

WARNING

DO NOT put the probes directly in the fire flame. The device has limited water resistance, **DO NOT** wash the main unit in water! Please clean it with a wet cloth instead.

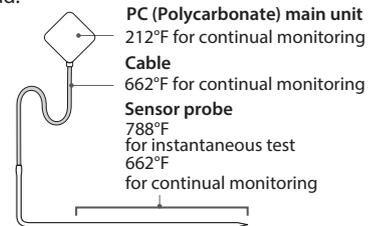

Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept an interference that may cause undesired operation of this device.



App Store is a service mark of Apple Inc.
Google Play is a service mark of Google Inc.

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

www.NutriChefKitchen.com

www.NutriChefKitchen.com

www.NutriChefKitchen.com