

BLUETOOTH TROLLEY SPEAKER

USER MANUAL



Read this manual before use

PWMA1225BT

Feature


1. Stylish, Fashionable and Elegant Appearance
2. Strong bass , Clear and Rich Vocal
3. Designed with Patented Soft Metal Technology , Anti-scratch outer shell and Wooden inner box
4. Music playing through BT , USB , Micro SD and Line in connection

Display Description :



1. : Stop lighting when reading USB or Micro SD data; muting when line in or FM mode.
2. USB/Micro SD: Lighting when playing in USB or Micro SD.
3. : Single Repeat.
4. 88 : 88 : " LINE IN" when operating in Line in mode; " FM Frequency "when operating in FM mode; " Time" when operating in USB & Micro SD mode . " BT" when operating in BT mode .
5. : Flashing when the power is low , charging is needed .

Panel Function



- | | |
|---|-----------------------------|
| 1. Speaker Volume Control Dial | 10.5 Band Equalizer Sliders |
| 2. Guitar Volume Control Dial | 11.Rec Mic |
| 3. Microphone Volume Control Dial | 12.Battery Indicator Light |
| 4. Echo Function Control Dial (Microphone Only) | 13.Mode Button |
| 5. Micro SD Card Slot | 14.Mic Volume Control Dial |
| 6. USB Input Port | 15.Rec |
| 7. Line-in Aux.Port | 16.Repeat Button |
| 8. Microphone Input Jack | 17.Skip - Button |
| 9. Guitar Input Jaka | 18.Play/Pause Button |
| | 19.Skip + Button |


- 1. Master Volume: Turning to adjust master volume.
- 2. Treble Volume : Turning to adjust volume.
- 3. Echo Effect Volume : Turning to adjust volume.
- 4. Mic Volume : Turning to adjust volume.
- 5. Mode : Change to other mode when operating ,sequence:
LINE IN-USB-Micro SD-BT-FM . Priority to play in USB or Micro SD mode when insert the USB or Micro SD.

- 1.USB: Playing when insert the USB which save with MP3 music.
- 2. Micro SD: Playing when insert the Micro SD which save with MP3 music.
- 3.Line in: Playing when plug in the Line in cable and connected with music device.
- 4.Play/Pause Button: In USB or Micro SD mode, press to play or pause,in Line in mode ,press to mute.
- 5.Skip -&+ Button: While playing music in USB or Micro SD mode, short press to go back or forward music

- 1. Press "Record " Button 2S to get into the recording mode after insert USB or Micro SD, the speaker is build in mic receiver , press "Record" button again to play the records after recorded .

- 1. Pairing : Press mode button to Bluetooth mode , speaker will be under automatic pairing mode, LED display shows "BT" , pair the Bluetooth compatible device by selecting "PWMA1225BT" from the listed devices, speaker will call out "Connected" after paired successful,Bluetooth pairing system will be off if there is no device connecting after 5 minutes .
- 2. Music Playing : Press Play/Pause , Skip + / - Button to play music .

- 1. Microphone VIP : While music playing and plugged microphone , it will enlarge the voice received from mic and lower the music volume after pressed Microphone VIP button . Music volume will go back orginally if there is voice received from microphone , press Microphone VIP button again to cancel the function .



This product matched with external 12V storage battery connecting clamp, pls accroding to red(+),black(-)to connect the external storage battery 's (+) 、 (-) . normal working after opening the power supply.

Battery Volume And Charging Indication

- 1.There are four green lights as battery level indicator : The first green light from right to left shows the power lower to 20%;The second green light shows the power lower to 40%,and the third green light shows the power lower to 80%, the fourth green light shows full power.
- 2. When the last green light flashing in battery level indicator , it need to be charged,

Remarks : Please charging the speaker when power off or lower the volume to avoid sound distortion .

Warning

- 1. Don't put this product under high temperature and wet environment and it will be worse when it is in the rain or crashed strongly.
- 2. Please don't feel free to open the back cover, in case suffering from electric shock or any other accidents.
- 3. If it needs to be fixed, please contact with our professional maintenance staff and ask them to deal with it
- 4. If fragments or liquids fall into device box, please cut off the power right away. And it can be used after professional staff checks it
- 5. When the device is not used, please turn the power off and pull out power plug.
- 6. Device cannot get wet, and the things filled with liquids such as flower vase s hould not be put on the top of it
- 7. If the battery is incorrectly replaced then explosion would happen, so please replace it with the same type or equivalent type of battery.

Power Output	60W
Speaker Size	12"4Ω*1+3"4Ω*1
R. Frequency	90HZ-20KHz
S/N Ratio	≥ 60 dB
Power Supply	AC120V 60Hz
Dimension	W380xH690xD280 mm

Packing:

PWMA1225BT Speaker	*1
Power Line	*1
User Manual	*1
Wireless Microphone	*1
Wireless Headmic	*1