

# PYLE

PyleUSA.com



## PWMA68

Sing Along Portable Karaoke Radio  
and PA Speaker System

Compact Headset Microphone Amplifier,  
Digital Lyrics Display

***User Manual***

## FUNCTION

 
- **[Digital song]** input numbers to select songs, supports 1-9999 preferred song.
- **[MP3 player]** direct Micro SD Memory Card broadcast and U disk MP3 files, supports MP3, WMA, WAV music formats.
- **[Digital recording]** built-in microphone, recording function.
- **[Lyrics]** support the display of song lyrics, synchronized display playback.
- **[FM Radio]** FM digital stereo radio, clock radios, radio broadcast memory, you can store 40 radio stations.
- **[Reader]** to connect the USB cable, copy and delete files on Micro SD Memory card.
- **[Audio Input]** stereo audio input interface, easily connects to computers, digital music players, cellphones and other audio-visual products of various types of sources.
- **[Break-point memory]** plays the last track automatically.
- **[Alarm clock]** clock, alarm clock, calendar.
- **[Rechargeable lithium battery]** built-in rechargeable lithium battery, environmental protection, energy saving, practical.

*Buttons, jacks function (subject to availability)*

## POWER ROTARY SWITCH/VOLUME CONTROL

1. **Switch:** counterclockwise rotation switch clicks, the display lights on, clockwise rotation switch again and clicks to shutdown.
2. **Volume adjustment:** counter-clockwise to increase the volume, clockwise to decrease the volume.
3. **ECHO Volume adjustment:** When using a microphone, clockwise to increase volume, counter-clockwise to decrease the volume.
4. **[MIC]:** microphone achieve access megaphone.
5. **[AUX]:** Audio input interface, connected to computers, digital music players, cell phones and other audio-visual products of various types of audio input
6. **[USB]:** insert USB to play MP3 music, supports up to 32G maximum.
7. **[MICRO SD]:** Insert Micro SD Memory Card to play MP3, supports up to 32G maximum.
8. **[DC 9V]:** power supply into the jack into the unit distribution 9V1A the charger, charging the battery icon flashing screen, after full battery icon does not flash
9. **[▶|]:** Play/Pause, enter the sub-menu state short press to return to the previous level.
10. **[◀◀]:** previous song, press and hold to rewind.

11. [▶▶]: Next song, press and hold to fast forward.
12. [M]: Short press to confirm function, press to return to the main menu.
13. [FM]: Short press to enter FM/play/pause, press and hold to search radio stations and save
14. [REC]: Press when entering the record, press enter to save and play back recording, playback recording press Delete Record
15. [1234567890]: Enter the selected song numbers, select the radio station, select the frequency.

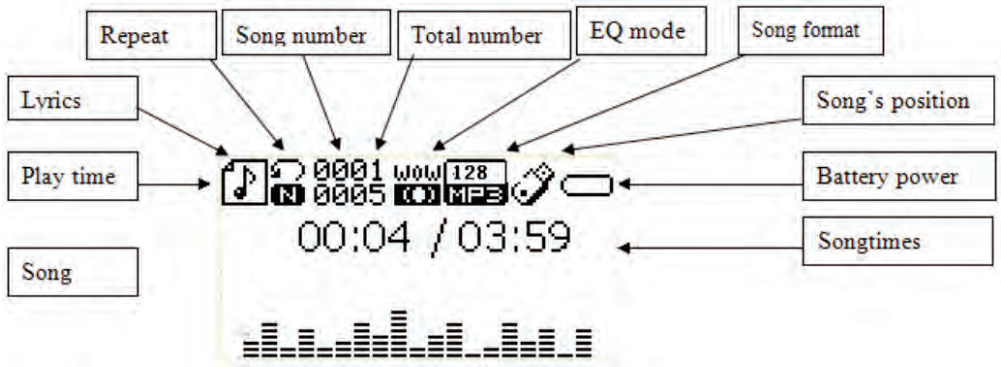

## DIRECTORY PLAYER

As shown below "New Folder" to store songs:

Select the file to play steps: Insert Micro SD Memory, enter the music playback mode, pause the playback mode, press "M" key to enter sub menu, following figure:

Insert Micro SD Memory card →


- Catalog
- Delete
- Delete All
- Return to the main screen
- Exit

Insert USB →

- Catalog
- Delete
- Delete All
- Return to the main screen
- Exit

Press the "M" key to enter the card catalog or USB directory as shown below:

- Songs stored in "Removable Disk" root directory →
- Songs stored in "Removable Disk" root directory →
- "Removable Disk" root of the file list →
- New "folder" to store songs →
- New "folder" to store songs →
- Songs stored in "Removable Disk" root directory
- Songs stored in "Removable Disk" root directory
- Press the "next track" button to select "New Folder", press "M" key to enter, as shown below:

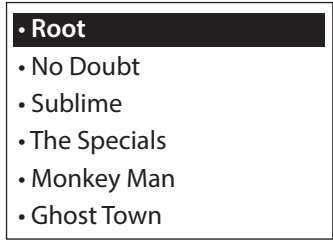


**Exit:**

- "New Folder" songs
  - "New Folder" songs
  - "New Folder" songs
  - "New Folder" songs
- 
- A screenshot of a menu interface. The top item is "• 1.". Below it are four other items: "• Monkey Man", "• Funky Kingston", "• The harder they come", and "• Redemption song".

Press the "next track" button to select "Song", press "M" button to confirm to play. Exit to return to the root directory of songs to play, as shown below actions:

- "Removable Disk" root of the file list →
- Songs stored in "Removable Disk" root directory →
- Back to "Removable Disk" root folder lists,
- Press the "next track" button down to select a song, press "M".
- Recognize return to the root directory of songs to play

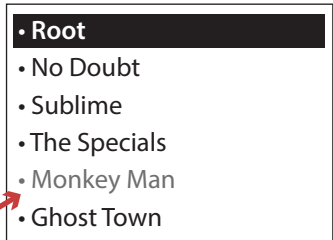

## MUSIC MODE SETTINGS

In music mode, press M key to enter the setup menu, following figure:




Cycle Mode






 

- Cycle mode
- EQ settings
- Repeat mode
- Lyrics (open)
- Return to main screen
- Exit


## EQ SETTINGS

Natural, rock, pop, soft, jazz, heavy bass and other sound options.

Repeat mode A-B Repeat

1. While playback, press M key to enter the play sub-menu button to select "Repeat Mode" menu, press the M key to enter the "repeat mode."
2. **Repeat mode:** repeat icon  "A" flashes, waiting to determine the starting point A,  at this time, press the button to confirm the starting point A, repeat icon  "B" flashes.

	ICON	INDICATE
Normal mode		Play all files sequentially, not recycled.
Single cycle		Repeats the current file.
Directory player		In order to play files in the current directory, not the cycle.
Catalog circulation		Repeats the current file directory.
Full cycle		Loop all files.
Random play		Random files.
Browse Play		Order of play all the songs in the current directory before 10 seconds.

waiting for a starting point to determine the starting point B repeat, this time, press to , determine the end point is B, repeat icon fixed. Start repeat playback between points A-B 5 times.

3. In the three states above, press M key to exit Repeat mode.

## Lyrics (open)

Playing the "open" lyrics, select "Off" to play music without the lyrics, display playback time.

## RECORDING

The machine does not contain storage memory chips, recording, external Micro SD or insert U disk recording device to store files, if the external memory storage device is not inserted, the machine will be prompted to "disk error", please insert the external storage memory device further recording.

In the main menu, select "Record" menu, press M key to enter the recording mode, press the key ► again to start recording, press & hold "M" key to save the audio file, the file is saved to the VOICE folder in the "Music mode" pause music playback state, press the M key to enter the sub-menu, select the "card catalog" VOICE folder can be found in the audio file playback.

## FM RADIO

In the main menu, select "FM Radio" mode, press the "M" key to enter, following figure:



1. Save Radio
2. Radio recording
3. Delete radio
4. Delete All
5. Automatic scan
6. Normal frequency channel
7. Campus frequency channel

- **Automatic scan:** Enter radio mode, press the "M" key to pop up on the icon sub-menu button to select "Auto Tuning", and press "M" key to start automatic station search, the search will be displayed when a station CH01-CH40, and save the station.
- **Memory selection:** Automatic station search has been completed, press ◀◀ or ▶▶ select the memory has been saved station.
- **Manual Installation:** Manual selection, press ◀◀ or ▶▶ semi-automatic selection.
- **Digital selection:** Direct input frequency of the station you want to hear, such as the sound of the radio station FM87.8 CCTV China, enter the number 878 can press the M key to confirm.

## FM RADIO SUB-MENU FUNCTION DESCRIPTION

- **Select Save station:** save current station;
- **Select radio recording:** save current station being broadcast content; (need to insert Micro SD card to store audio files)
- **Select Delete radio:** Delete the current radio station;
- **Select Delete All:** delete all stored station;
- **Select automatic station search:** effective automatic search for radio stations in the band;
- **Select Normal frequency channel:** namely 87.5 ~ 108.0MHZ;
- **Select campus frequency channel:** the 76.0 ~ 90.0MHZ;


## SYSTEM SETTINGS

<b>System time</b>	Press "M" to select date & time, press "◀◀", "▶▶" keys to adjust the numbers.
<b>Back-light time</b>	0-30 seconds to turn off the display back-light, 0 for the long bright back-light.
<b>Language selection</b>	Set different national language main menu.
<b>Tool</b>	<p><b>Shutdown Settings:</b> (Sleep Timer)(unit: minutes), both in any state, there is no key operation from the beginning of the calculation, the time to automatically shut down, use before sleep songs.</p> <p><b>Note:</b> Sleep mode setting only take effect once, it will automatically clear a set of off time after shutdown, please set it again to use this function.</p> <p><b>Alarm:</b> The next section of the specification is described in detail.</p> <p><b>FM timer setting:</b> The next section of the specification is described in detail.</p>
<b>Contrast adjustment</b>	Setting the display do not degrees.
<b>Firmware version</b>	Display the player's firmware version.
<b>Exit</b>	Exit this screen.

In the main menu, press the key, select "System Settings" mode, press the "M" key to enter.

## ALARM SETTINGS



Enter the "System Settings" option, following figure:

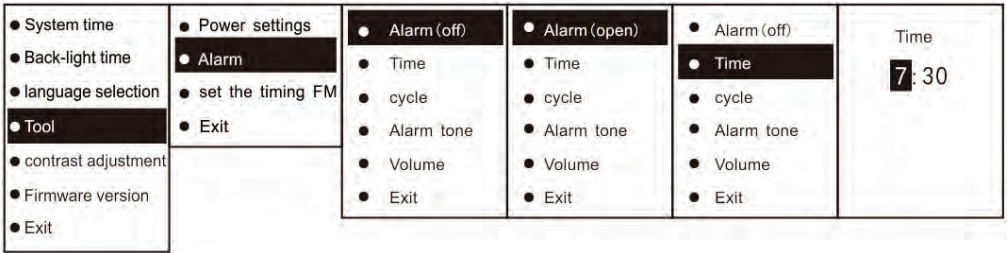

Select "Tools" option, press "M" key to enter the "Tools", view as above picture  
 Press the "M" key hit (open) alarm clock, then select "Time" item to set the alarm time.

## TIME FM SETTINGS (CLOCK RADIO)

Press the icon to open the time FM radio function, first set the "regular FM (open)", then set the "FM Time", the last set, "radio frequency", for example: 7:00 am tomorrow, I want to listen to 30 minutes F93.9MHZ "Radio Gaga music station," simply press the last icon "normal band". Digital is set to FM93.9, tomorrow morning on time 7:30 minutes automatic turns ON the radio broadcast.  
**(Note: The time of the machine must be set the same as GMT).**

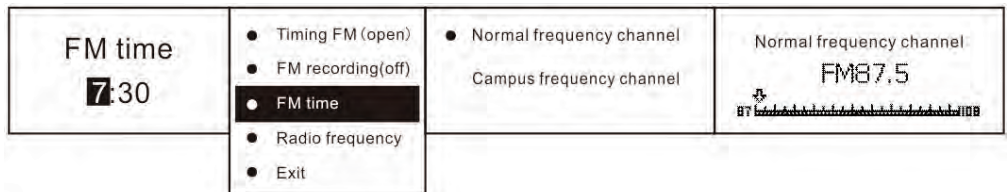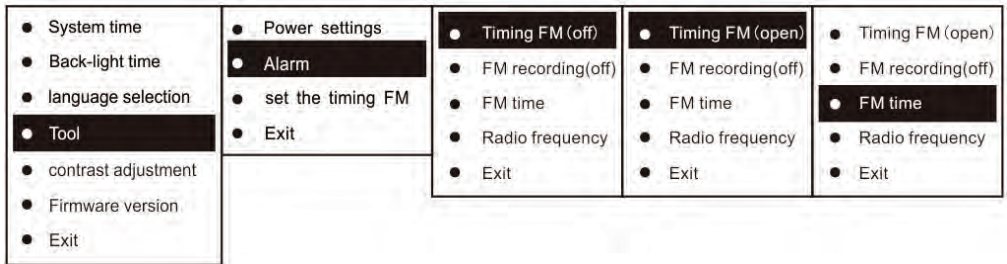



The AUX audio input interface, the distribution of the "audio signal line" end into the machine "AUX" jack and the other end into the computer's "Ω symbol" audio output jack, and computer speaker function.

## **CHARGING**

Insert distribution of 9V1A charger to DC 9V jack of machine's for charging, the battery icon will not flashing as full charge on. It can use too long connected by charger as machine built overcharge protection circuit. About 4-6 hours to charge full with battery, and support charging by shutdown. Different volume will influence the battery life and battery indicator also will be biased

## **LOW BATTERY**

When the battery is low voltage occurs, the system will automatically shut down, this time please charge, if the machine is not used for a long time, at least once a month charge, can protect the battery and prolong life.

## **SOLUTIONS TO COMMON PROBLEMS**

1. **Playback Display format error:** USB (or Micro SD) format compatibility problems with the computer form a USB (or Micro SD) and then re-copy songs to play.
2. **Only 700MB computer prompts can be downloaded:** "Removable Disk" for the FAT format, can be "Removable Disk" with the FAT32 format can be solved once and then download, or the number of "Removable Disk" in the root directory of the storage files do not more than 180, may be in the "Removable disk" root directory "New folder" download. You cannot play music: a USB formatted with a computer (or Micro SD), and then re-copy songs to play.
3. **Automatically shuts down:** the battery is low, please charge two hours before use. Automatic shutdown or restart while playing: the battery is low, please charge two hours before use.
4. **No speaker sound:** volume is turned on.
5. **No sound connected to the computer:** PC interface connection errors, check the correct computer's audio output connector.
6. **Key non-functional or functional fault:** Power-cycle.

## **FEATURES:**

- 3-in-1: Karaoke Speaker + Radio + Music Streaming
- Fun for Performers of All Ages!
- Use it Like a Megaphone & Project Your Voice
- Lightweight, Compact & Handheld Design
- Lyrics (Text) Display Ability to Sing Along
- FM Radio and Clock with Digital LCD Display
- Built-in Rechargeable Battery
- Headset Microphone Included
- Aux (3.5mm) Input
- Ability to Connect & Stream External Devices
- MP3 Digital Audio File Compatibility
- USB & Micro SD Memory Card Readers
- Front Panel Button Control Center
- EQ Sound Configuration
- Repeat & Random Song Ability
- Multi-Language Support

## **RECORDING ABILITY:**

- Create Your Own Songs
- Ability to Record Your Voice & Music
- Easily Save & Share Your Music
- Save Files via USB Flash or Micro SD
- Digital Audio File Created: WAV

## **WHAT'S IN THE BOX:**

- Headset Microphone
- Remote Control
- 9V Power Adapter Cable
- Convenient Carry Strap



## **TECHNICAL SPECS:**

- Output Power: 10 Watt
- Lyric (Text) File-Type Compatibility: .LRC
- \*Download Your Own Lyric Files
- Full Battery Provides up to 6 Hours Operation
- Loudspeaker Driver: 3"
- Impedance: 4 Ohm
- S/N Ratio: >80dB
- Power Supply: 110/220V
- Digital Audio File Support: MP3, WMA, WAV
- MAX Flash Memory Support: 32GB
- Size: 5.5" x 4.7" x 5.2"



# PYLE

PyleUSA.com



**VISIT US ONLINE:**

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

**PYLE**

***Questions? Issues?***

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)