

SereneLife

SLGCFLW

Golf Flat Fold
3 Wheel Golf Cart

New Deluxe Scorecard Holder,
Upper & Lower Brackets
with Elastic Strap,
Includes Umbrella Holder,
Without Carrying Bag

USER MANUAL



WARNING:

- For your own safety, please read and understand these warnings and keep this user guide for future reference.
- Always make sure the cart is fully extended and locked before use. Always make sure the cart is folded and locked properly before lifting or transporting.
- Do not run while using this product.
- Do not use accessories other than those designed for use with this trolley.
- Keep all packing materials away from children and recycle where possible or where required by law.

MAINTENANCE

To clean the cart, wipe with a soft, dry cloth.


Car polish may be used to maintain finish.

Lubricate moving parts every 6 months.




PARTS LIST

- A** PVC handle grip
- B** Umbrella holder base
- C** Scorecard holder
- D** Upper bag holder bracket
- E** Main upper frame tube
- F** Main wheel
- G** Left foot brake
- G1** Right foot brake
- H** Stabilizer tube
- I** Main lower frame tube
- J** Lower bag holder bracket
- K** Front wheel assembly
- L** Handle buckle
- M** Handle tube
- N** Folding buckle
- O** Slide steel part

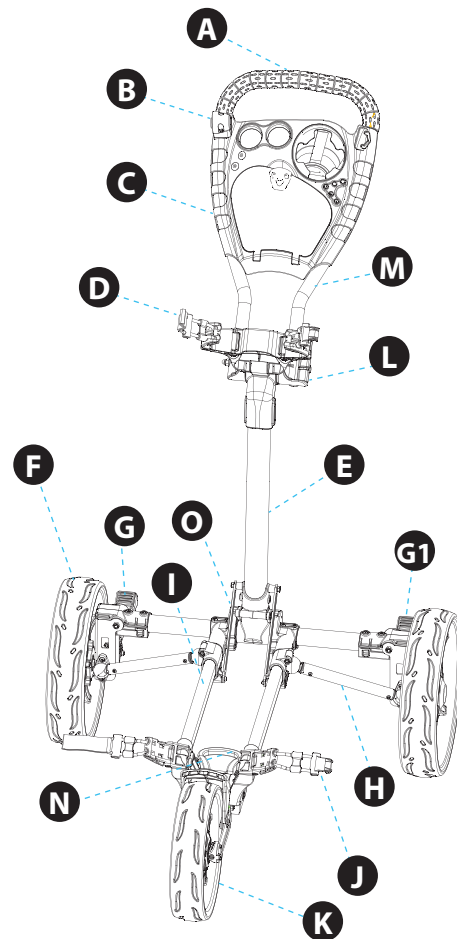


UNFOLDING STEPS

Fig.1

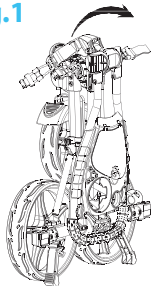

Open the top bracket as Fig.1

Fig.2

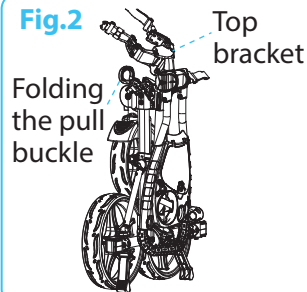

Hold the top bracket to pull the folding pull buckle as Fig.2 to open the lower frame as Fig.3, and then click the upper frame into the fixed bolt as Fig.4.

Fig.3

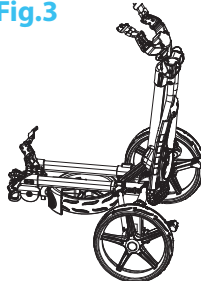


Fig.3


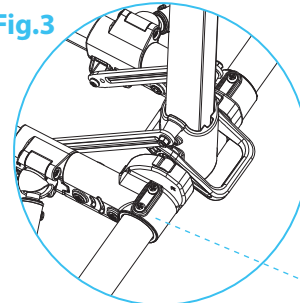


Fig.5




Pull the folding pull buckle and rotate the front wheel clockwise as Fig.5

Fig.6


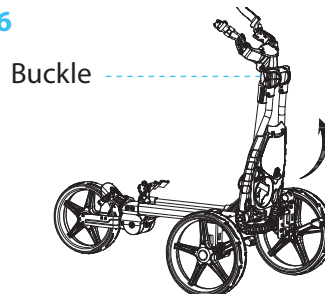


Open the buckle and adjust to your comfortable handle height, then fix the buckle as Fig.6


FOLDING STEPS

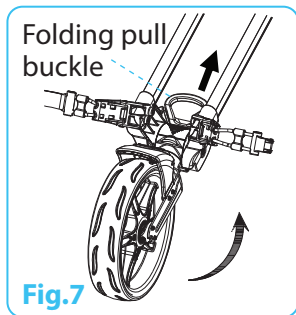



Pull the folding puller buckle and rotate it by counterclockwise as Fig.7

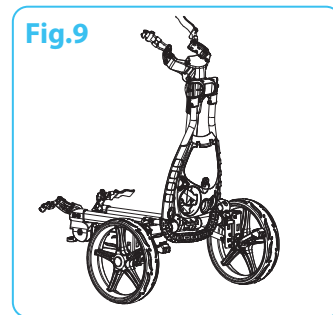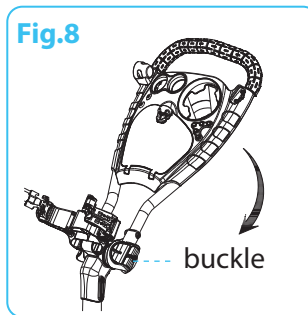

Open the buckle to fold the handle to touch the lower frame, then fixed the buckle as Fig.8 and 9.

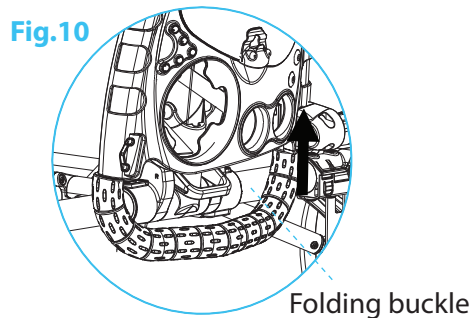

Pull the folding buckle to fold the lower frame as Fig.10 & 11.

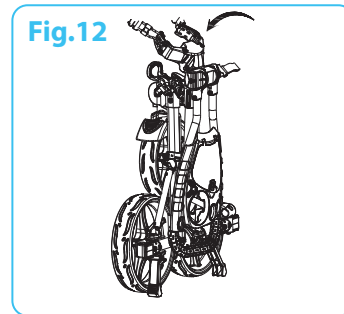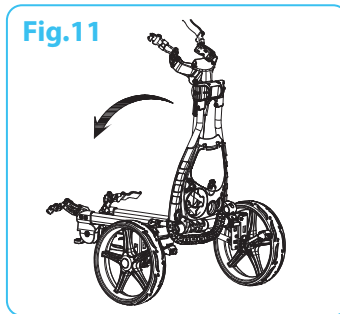


Fold the top bracket then lift the handle as Fig.12.

FOOT BRAKE

Press down the brake to hold the wheel, and pull up to release the wheel as Fig.13.

Fig.13

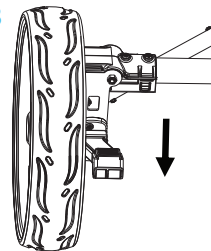


FRONT WHEEL ADJUSTMENT MECHANISM

1. If the cart veers to the left, face the front wheel of the cart and use the Allen wrench provided to adjust **A** point screw clockwise or the **B** point screw bolt counterclockwise until the front wheel is centered between the front fork. (Fig.14)




Allen wrench

Fig.14

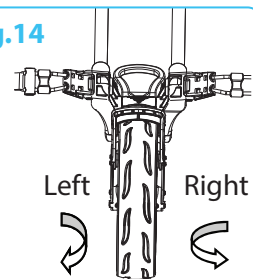

2. If the cart veers to the right, face the front wheel of the cart and use the Allen wrench provided to adjust A point screw counterclockwise or the B point bolt clockwise until the front wheel is centered between the front fork. (Fig.15)

Fig.15

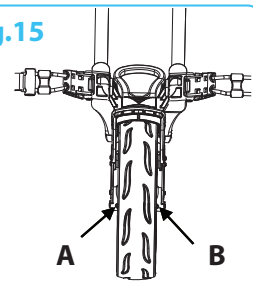

FEATURES:

- Incredible Flat Fold Design
- New Deluxe Scorecard Holder
- Upper and Lower Bracket with Elastic Strap
- TPR Handle Grip
- Ergonomic Padded Adjustable Handle
- Simple Quick Braking System
- Convenient Storage and Cooler
- Ball Bearing Wheels for a Smooth Roll
- Durable and Compact Size for Easy Storage and Transportation
- Easy to Fold and Unfold
- Designed for Multiple Pushing Positions
- Includes Score Card & Umbrella Holder Storage Compartment

WHAT'S IN THE BOX:

- (1) 3-Wheel Golf Push Cart

TECHNICAL SPECS:

- Construction Material: Aluminum Frame
- Max. Load Capacity: 33 lbs.
- Front Wheel Size: 9.5" -inches
- Rear Wheels Size: 11.5" -inches
- Folded Product Dimension (L x W x H): 23.2" x 7.3" x 27.8" -inches
- Unfolded Product Dimension (L x W x H): 46.1" x 28" x 45.3" -inches



Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com