

### Safety Precautions And Care Instructions

- Do not use your canopy as a permanent cover. It is designed for temporary use only. Damages due to weather conditions are not warranted.
- Do not set up on a steep incline. Do not leave unattended.
- Never leave the canopy alone in windy, rainy, or snowy conditions.
- Do not let snow or rain accumulate on top, it will collapse.
- Use tie-downs, stakes or weight bags to secure your Pop Up Tent in windy conditions. Commercial stake kits and weight bags can be purchased as accessories directly from [www.SereneLifeHome.com](http://www.SereneLifeHome.com).
- Do not machine wash your top. Wash with mild soap and water with a brush while the Pop Up Tent is open without the legs extended. Do not use harsh detergents, abrasives or bleach.
- Do not put your Pop Up Tent away while wet or damp. This promotes mildew and rust. Always store completely dry.
- For best results in keeping your top clean and to avoid small rips and tears, it is recommended that the top be removed from frame and stored in the carry bag after each use.

### Warranty

E-mail [support@pyleusa.com](mailto:support@pyleusa.com) before returning the product to our shop. All warranty claims require proof of purchase. **Pop Up Tent Commercial Instant Shelter** is not responsible for any damage due to wind, rain, snow or any act of nature. Under **NO** circumstances shall the manufacturer or authorized representative be liable for any personal loss, injury or direct consequential damage resulting from the use of this product.

We sell all kinds of parts on our website, you can buy it directly if your **Pop Up Tent** is damaged.

### Questions? Issues?

We are here to help!  
Phone: (1) 718-535-1800  
Email: [support@pyleusa.com](mailto:support@pyleusa.com)



### Features:

- Center Stable Protection
- Highly-Attached Velcro to Keep Canopy Stick on the Frame
- Heavy-Duty Fabric; Covers 4 Tables, 3 Beach Chairs, and 10 People at the Same Time
- Polyester provides Durable 500 PU coated, UV Blocker, and UPF 50+ from Sunshine
- 100% Waterproof and Weatherproof Roof
- Suitable for Sunny and Rainy Seasons
- Easy to Set Up, Portable and Lightweight for Transportation
- Sturdy Wheels for Easy Portability
- Heavy-Duty Wheels with 4 Sand Bags, 4 Stakes and Ropes for Stable Use
- Perfect Tent for Outdoor Sports, Events, Festivals and more

### Technical Specs:

- Push Button System: Yes
- Roof Tension: Spring
- Connectors: Nylon
- Strength: Commercial
- Valance Clearance: 78" - 86"
- Capacity: Up to 10 Persons

### SLGZ15SB - SLGZ15K - SLGZ15GY - SLGZ15FG:

- Frame Weight: Up to 55 lbs.
- Product Dimension (L x W x H): 120" x 180" x 133" –inches

### SLGZ20SB - SLGZ20K - SLGZ20GY - SLGZ20FG:

- Frame Weight: Up to 72 lbs.
- Product Dimension (L x W x H): 120" x 240" x 133" –inches

### What's in the Box:

- **SLGZ15SB - SLGZ15K - SLGZ15GY - SLGZ15FG**
  - (1) 10 x 15 ft. Pop Up Canopy
  - (2) Roller Carry Bag
  - (3) Sand Bag
  - (4) Stake & Ropes
- **SLGZ20SB - SLGZ20K - SLGZ20GY - SLGZ20FG**
  - (1) 10 x 20 ft. Pop Up Canopy
  - (2) Roller Carry Bag
  - (3) Sand Bag
  - (4) Stake & Ropes



**SLGZ15SB - SLGZ15K - SLGZ15GY - SLGZ15FG 10 x 15 ft.**  
**SLGZ20SB - SLGZ20K - SLGZ20GY - SLGZ20FG 10 x 20 ft.**

## Pop Up Tent Commercial Instant Shelter

Waterproof Polyester Tent with Portable Wheeled Carry Bag and Sand Bag

### USER MANUAL



### Construction Material:

- 1680D Fabric Roller Bag (Carry Bag); 500 Denier Waterproof Polyester with PU Coated (Top), Black Powder-Coated Rust Resistant Steel (Frame)

## Setup Installation

1. Remove frame from box and stand upright in the center of the desired setup location.
2. With one or two people, gently pull the outer legs until the frame is slightly expanded.
3. Place the canopy top over the partially open frame. Align the canopy top with the four corners of the frame and attach the canopy velcro strip to each frame corner securely.
4. Lift the frame into position by expanding the truss bars until frame is fully expanded. Lock each of the corner sliders into place by holding the leg of the frame with one hand and pushing the - slider upward until the thumblock clicks into place.
5. Adjust the frame legs to your desired height by placing one - foot on each corner of the footpad and slowly extending each leg into place until the thumb lock clicks. Repeat with other legs.
6. To raise the leg to the next level, press the thumbblock and slide the leg upward to the desired height.



## Pop Up Tent Accessories



WHEELED BAG



REPLACEMENT COVER



WEIGHT BAG



GUTTER



 
SOLID WALL



RAILSKIRTS WALL



FOOD BOOTH SIDEWALL

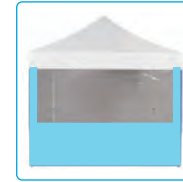


HALF PANORAMA WALL

All accessories or custom graphics can be ordered online visit us at [www.SereneLifeHome.com](http://www.SereneLifeHome.com)

## Replacement parts

 SLGZ15SB - SLGZ15K - SLGZ15GY - SLGZ15FG


Guide Part Name

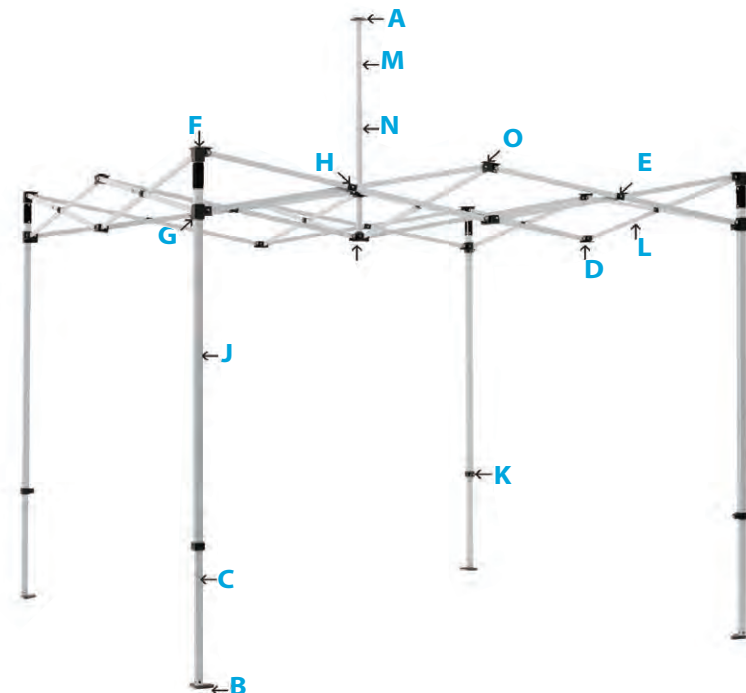

- |   |                                    |
|---|------------------------------------|
| <b>A</b> Dome cap                         | <b>I</b> Lower peak pole bracket   |
| <b>B</b> Foot pad                         | <b>J</b> Outer leg w/velcro        |
| <b>C</b> Inner leg                        | <b>K</b> Inner leg height adjuster |
| <b>D</b> Joint bolt/nut/washer            | <b>L</b> Truss bar                 |
| <b>E</b> Joint bolt/nut/washer & bolt cap | <b>M</b> Peak pole upper           |
| <b>F</b> 2 Way outer leg bracket          | <b>N</b> Peak pole lower           |
| <b>G</b> 2 Way outer leg slider bracket   | <b>O</b> Truss cap                 |
| <b>H</b> Upper peak pole bracket          |                                    |

SLGZ20SB - SLGZ20K - SLGZ20GY - SLGZ20FG

 Guide Part Name

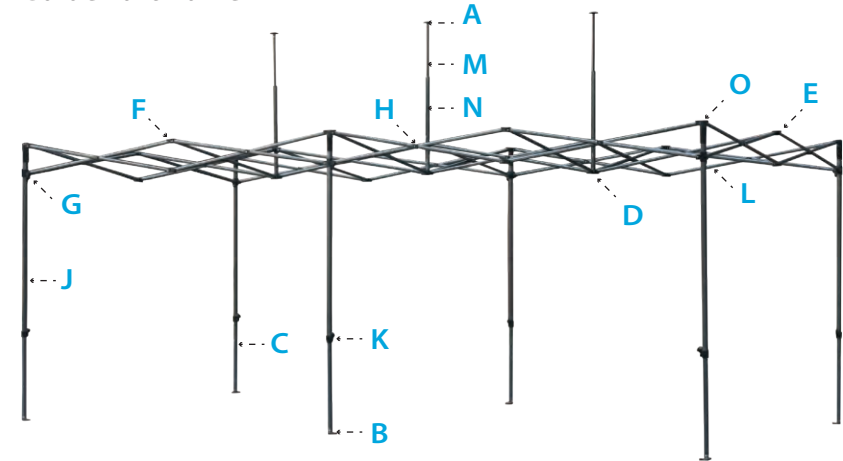

- |   |                                    |
|---|------------------------------------|
| <b>A</b> Dome cap                         | <b>I</b> Lower peak pole bracket   |
| <b>B</b> Foot pad                         | <b>J</b> Outer leg w/velcro        |
| <b>C</b> Inner leg                        | <b>K</b> Inner leg height adjuster |
| <b>D</b> Joint bolt/nut/washer            | <b>L</b> Truss bar                 |
| <b>E</b> Joint bolt/nut/washer & bolt cap | <b>M</b> Peak pole upper           |
| <b>F</b> 2 Way outer leg bracket          | <b>N</b> Peak pole lower           |
| <b>G</b> 2 Way outer leg slider bracket   | <b>O</b> Truss cap                 |
| <b>H</b> Upper peak pole bracket          |                                    |

Spare parts can be ordered online at [www.SereneLifeHome.com](http://www.SereneLifeHome.com)

## ⚠ Warning/Attention

Keep all flame and heat sources away from this tent fabric. This tent is made with fire retardant fabric. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.