



serenelife[∞]™



SLGZELEC

3-Wheel Electric Golf Cart

Foldable and Rechargeable Aluminum
Frame T Zendo Electric Trolley,
Includes Umbrella Holder
and Storage Compartment

USER MANUAL

WARNING:

- For your own safety, please read and understand these warnings and keep this user guide for future reference.
- Always make sure the trolley is fully extended and locked before use. Always make sure the trolley is folded and locked properly before lifting or transporting.
- Do not run while using this product.
- Do not use accessories other than those designed for use with this trolley.
- Keep all packing materials away from children and recycle where possible or where required by law.

MAINTENANCE

- To clean the trolley, wipe with a soft, dry cloth.
- Car polish may be used to maintain finish.
- Lubricate moving parts every 6 months.


WARNING:

- Keep hands and fingers away from moving or sliding parts!
- Always keep control of the buggy - Do not let it run down hills without full control.



PARTS LIST

- A** Potentiometer
- B** TPE Grip
- C** Umbrella holder base
- D** Umbrella holder
- E** Scorecard holder
- F** Handle
- G** Top bracket
- H** Handle joint
- I** Upper frame
- J** Slide frame
- K** Wheel axle
- L** Bottom frame
- M** Bottom bracket
- N** Front wheel
- O** Motor controller
- P** Motor cover
- Q** PCB box
- R** Left back wheel
- S** Right back wheel
- T** Battery case
- U** Net bag
- V** Charge
- W** Storage bag

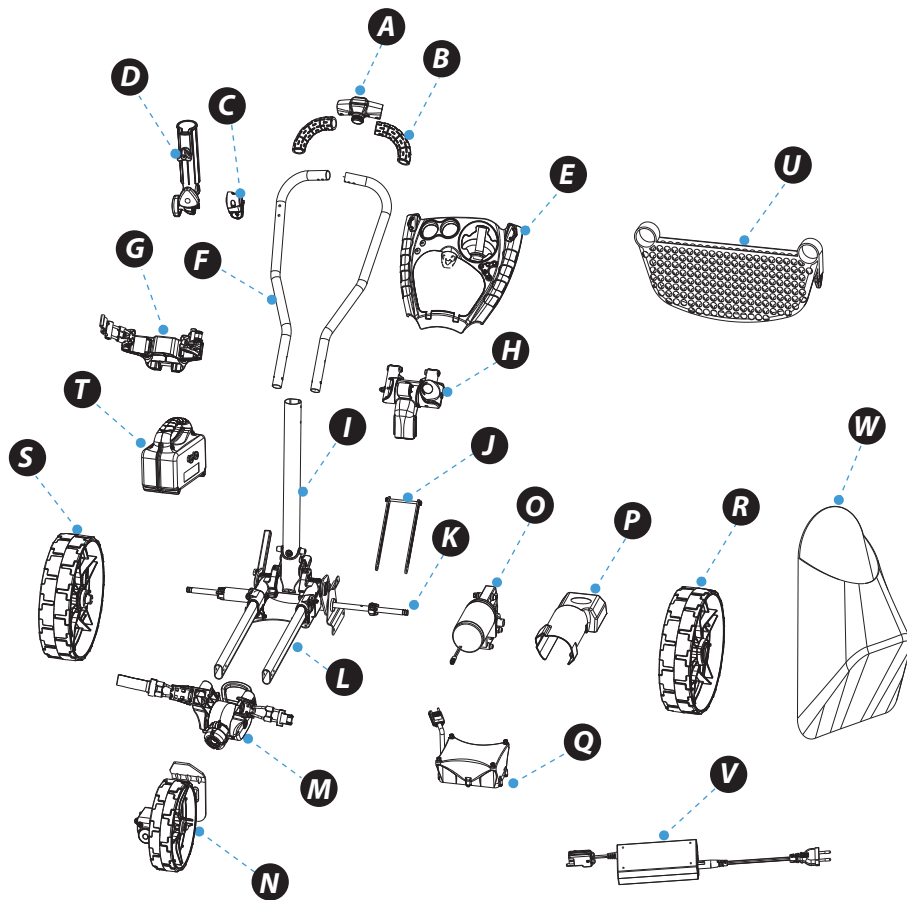


UNFOLDING TROLLEY STEPS

Fig.1




Unfold the upper bag bracket as Fig.1.

Fig.2

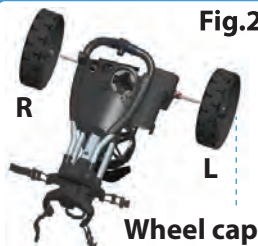

Press the wheel cap to insert into wheel axle, face the trolley, with R on the right side, and with L on the left side as Fig.2.

Fig.3

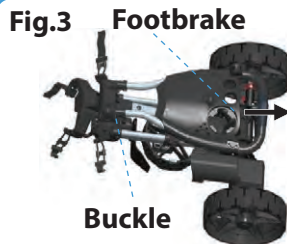

Release the buckle and press the footbrake as Fig.3.


Fig.4



Fig.5

Lift up the handle and then fix the buckle as Fig. 4/5.

Fig.6

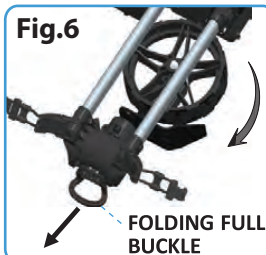

Pull the buckle and adjust the comfortable handle height as Fig.6.



Fig.7

Umbrella Holder Assembly



Fig.8

Assemble the holder on the umbrella holder base as Fig.8.



Fig.9

Hang up the battery as Fig.9.



Fig.10

Inset the plug as Fig.10.

FOLDING TROLLEY STEPS



Press the Potentiometer button to control the PCB system as Fig.11.



Pull the folding puller buckle and rotate counter-clockwise as Fig. 12/13/14.




Release the buckle and press the footbrake as Fig. 16 and 17, folding the trolley and fix the buckle as Fig.18.





Folding the upper bag bracket as Fig. 17.



The folding trolley can flat position as Fig.18 or stand position as Fig.19, need to open the support frame for stand folding.

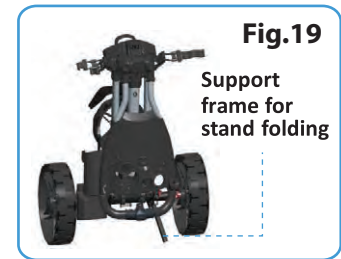


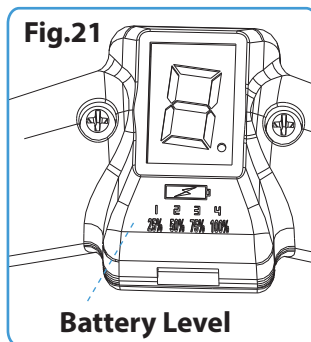
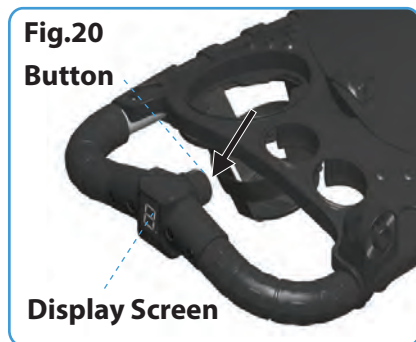


Press and hold this button for more than 3 seconds, and the display screen will light up any of the 1-4 digits, which represents the amount of battery power as shown in Fig. 21.

WARNING:

1. When the battery power is equal to or less than 50%, please charge it in time to ensure enough power to support the running of the trolley.
2. Please charge the battery between 0° and 45°.
3. If you will not use the battery for a long time, please pay attention to the maintenance of the battery. Keep the battery away from the fire and heat source with the ambient temperature between 0° to 45°. And every three months to charge the battery, maintain the battery power of 75% to 100%, so as not to damage the battery due to loss of power.

FRONT WHEEL ADJUSTMENT MECHANISM

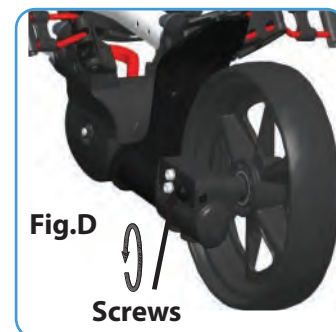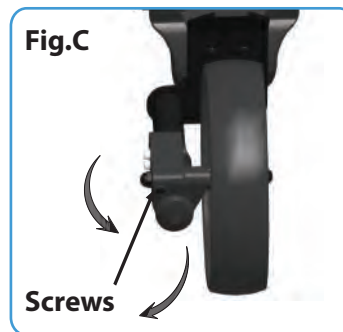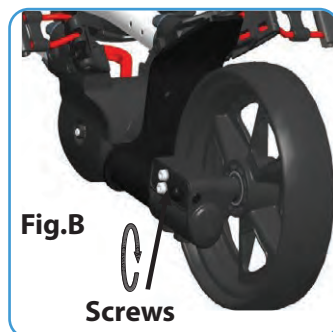

IF THE CART VEERS TO THE RIGHT:

Step 1: Face the front wheel of the cart and use the provided Allen wrench to loose the two side screws as in Fig.B.

Step 2: Then use the Allen wrench to adjust the front bolt clockwise until the front wheel is centered as in Fig.C. Then tighten the two side screws as in Fig.D.


IF THE CART VEERS TO THE LEFT:

Step1: The same as above.

Step 2: Adjust the front bolt counterclockwise until the front wheel is centered as in Fig.C. Then tighten the two side screws as in Fig.D.

WHAT'S IN THE BOX:

- 3-Wheel Golf Electric Trolley
- Power Adapter
- USB Cable
- Umbrella Holder
- Carrying Bag

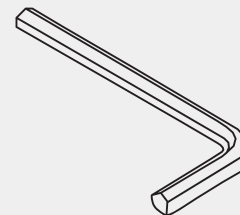

Allen wrench/key

FEATURES:

- New Deluxe 3-Wheel Electric Golf Cart
- Lightweight and Foldable Golf Trolley
- Includes Foot Brake for Rear Wheel
- Upper and Lower Bracket with Elastic Strap
- TPE Handle Grip
- Built-in Rechargeable Battery
- Push Button System
- Ergonomic Padded Adjustable Handle
- Simple Quick Braking System
- Durable and Compact Size for Easy Storage and Transportation
- Easy to Fold and Unfold
- Uniform PCB Board for Mountain Climbing and Downhill
- Designed for Multiple Pushing Positions
- Includes an Umbrella Holder Storage Compartment for Easy Travel, Fits in your Trunk
- *Assembly Needed



TECHNICAL SPECS:

- Construction Material: Aluminum Frame
- Max. Load Capacity: 33 lbs.
- Front Wheel Size: 8" -inches
- Rear Wheels Size: 11" -inches
- Power Supply: 12V
- Power Output: 150W
- Battery Charging Time: 5 hours
- Power Cable Length: 3.28 ft.
- Folded Product Dimension (L x W x H): 22.8" x 13.4" x 29" -inches
- Unfolded Product Dimension (L x W x H): 46" x 22.8" x 43.9" -inches

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com

serenelife™

