

AUTOMATIC SOAP DISPENSER

SLSPDIS05



QUICK GUIDE

SereneLife™

SETUP & INSTALLATION

1. Insert Batteries: 4“AAA”Size
2. Remove Cap, twist off the cap clockwise



4 “AAA” batteries required.
NOT INCLUDED

3. Fill the unit with soap (*hand, face, bath, dishwashing, etc.*)
 4. **Power:** Press the power button for 1.5 seconds to switch on/off
- INFRARED CONTROL:** Liquid soap automatically dispenses once you place your hand or sponge under the spout

**Note – some liquid soaps, dishwashing liquids, detergents, etc. may need to be diluted as the consistency may be too thick to be properly dispensed.*



4 CONVENIENT SETTINGS:

SETTING ONE: When first inserting 4 “AAA” batteries and turning on the soap dispenser, it is on **setting one** by default. The dispensing time is set at 0.6 seconds.

SETTING TWO: Press the power button shortly while in setting one; the blue indicator light will flash two times. The dispensing time is now set at 0.9 seconds.

SETTING THREE: Press the power button shortly when in setting two; the blue indicator light will flash three times. The dispensing time is now set at 1.3 seconds.



SETTING FOUR: Press the power button shortly when in setting three; the blue indicator light will flash four times. The dispensing time is now set at 1.6 seconds.

SPECIFICATIONS

SereneLife™

Housing Material: Chrome-Plated ABS
Container Liquid Capacity: 0.5 Liters
Battery Operated: Requires (4) x ‘AAA’, Not Included
Dimensions: 5.1” x 3.1” x 7.7”
Weight: 0.66 lbs.