



SETUP INSTRUCTIONS:

SereneLife

PYLE

- 1. Connect the pump to the water-pipe connector located at the bottom of the fountain .
- 2. Ensure the power switch on the pump is turned ON and position into the water fountain bowl.
- 3. Add water to the bowl and connect the power cable.







Be careful not to spill water onto the plug of the pump. **DO NOT** allow the pump to run dry!

TROUBLESHOOTING:

1. If your fountain pump fails to operate please check the following:

- Make sure the pump is plugged into the wall outlet/socket properly.
- Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- Check the power switch of the flow control on the pump. See picture 2 above.
- Check the pump outlet nozzle and the water tube for dirt and debris. Clean if necessary.
- Make sure the pump is connected to the water tube tightly. Check the fountain tubing for kinks and obstructions
- The pump may be "air locked", Power the pump ON & OFF several times to clear any air that may have been trapped.

2. If the water does not flow out of the fountain, it may be caused by a kinked or loose water tube, make sure the water tube is clear of any obstruction and fitted properly.