



BRAND X

MOBILE AUDIO

7" DOUBLE DIN TFT-LCD DISPLAY
XL72DV

OWNER'S MANUAL

CONTENTS

Welcome.....	3
Warning.....	3
Note.....	4
Features.....	5
Basic Operation.....	6
Panel Arrangement.....	7
Basic Functions.....	8
Main Menu Touch Operation.....	10
OSD Setup.....	11
Adjust Mode.....	12
Remote Control Function.....	13
Loading.....	15
Disc Play Touch Operation.....	16
DVD Mode.....	18
RDS Touch Operation.....	20
Radio Operation.....	22
DVD Basic Operation.....	23
VCD Basic Operation.....	33
CD/MP3 Basic Operation.....	36
MP3/USB/SD Operation.....	38
Other Play Mode.....	39
Trouble Shooting.....	40
Specifications.....	41
Wiring diagram.....	42
Brand X Warranty.....	43

WELCOME

Thank you for enjoying our series of digital car A/V product.
To properly use this product, please go through this instruction manual for installation and operation, put it in a safe place for future use!

WARNING

1. Please keep the disc slot clean, wipe it off when there is some dirt on it. You should wipe off any dirt on the disc before you place it into the unit. If the disc is dirty and you place it inside the unit, it will cause the unit to go into an error and will not play the disc. Please ask professional to clean the laser.
2. Playing the radio at higher volumes for a long period of time may cause hearing issues. You should play this unit at a moderate listen level.
3. This unit is set up by precision parts. If you open up this unit, you will void any and all of your warranty.
4. Please do not touch LCD display with any hard object so that you prevent it from getting scratched or damaged.
5. To avoid an accident caused by watching the LCD screen. This unit has a vehicle lock out wire so that you will not be allowed to watch a video while driving down the road.
6. This unit is meant for a 12V power and negative ground system from a vehicle.


NOTE:


We keep improving this product all the time. There may be some changes in it that are not in this manual.

NOTE

- This unit can play the following disc

MODE	ICON	CONTENT	DISC SIZE
DVD	DVD	Sound, image	12cm
VCD	VCD	Sound, image	12cm
MP3	MP3	Sound only	12cm
CD	CD	Sound only	12cm

Note: 1. This unit is compatible with MP4/DVD/VCD1.0/2.0/3.0 version, DVD, CD-R, CD-RW, MP3, WMA, JPEG.
2. When playing a DVD, VCD, MP3, CD disc the display will auto identify the disc and show corresponding word. When  appears on the display, that means that there is no function, please choose another mode.

- It may lead to accident if you are going to change unit.
- Playing disk during car run on bumpy road will damage laser. Playing substandard disc or damage disc will damage laser.
- The environment of inside car is not good, too much dirty, please clean the laser by laser cleanser timely.
- Do not work under terribly hot or cold environment, please ensure the temperature in car is in $-20^{\circ}\text{C} \sim 60^{\circ}\text{C}$.
- During operation, if  appear on LCD, that means unit do not support that function, operation is invalid.
- When unit is showing some abnormal, please refer to TROUBLE SHOOTING in this instruction manual, If you cannot find any solution, please press RESET to resume to initial status.

FEATURES

DVD PLAYER

1. International advanced MPEG-4 DECODE TECHNOLOGY
2. COMPATIBLE WITH MP4 (AVI/DIVX/5.X), DVD(DVD-R/DVD-RW), VCD, SVCD, CD-RW, WMA, MP3 JPG
3. Multiple subtitles, angles, languages supporting, Child lock function
4. 4 CHANNEL AUDIO OUTPUT MODE
5. PAUSE, PLAY, UP/DOWN, STOP, ZOOM, PBC FUNCTION
6. FM/AM RADIO TUNER
30 RADIO STATION (18FM, 12AM)

LCD DISPLAY

1. 7 inch, 16:9 TFT LCD display
2. Touch screen
3. Auto adotoried panel
4. Angle of turn adjustable

BASIC OPERATION

1. SOURCE ON/OFF

Press SRC button on panel or PWR button on remote control quickly to power on.
Press SRC button on panel or PWR button on remote control longer to power off.

2. PLAYING SOURCE CHOOSE

Press SOURCE button on remote control, unit will switch sources in the following sequence: RADIO → DVD → AUX

3. MUTE CONTROL

Press MUTE button on panel or MUTE button on remote control shortly to turn off sound output, press again to back to sound output.

4. VOLUME ADJUSTMENT

- 1) Press VOL+/VOL- button on panel, VOL+/VOL- button on remote control or touch button on display to adjust volume level.
- 2) The volume setting on this unit is 0 - 39.

TONE MODE ADJUSTING (SEL)

Press SEL button on remote control or SEL button on the panel to choose your desired

tune mode: VOL → BAS → TRE → L/R → F/R


NOTE:

- 1) DVD playing mode, MBP & User will be automatically activated.
- 2) After 5 seconds you choose desired mode, do not adjust volume button. The mode will automatically take you back to status before adjustment.

5. RESET

- 1) If unit is not working correctly, you should press the RES button. This will reset the radio and should start working correctly afterwards.
- 2) After reset, all settings will resume back to the factory default settings.

PANEL ARRANGEMENT

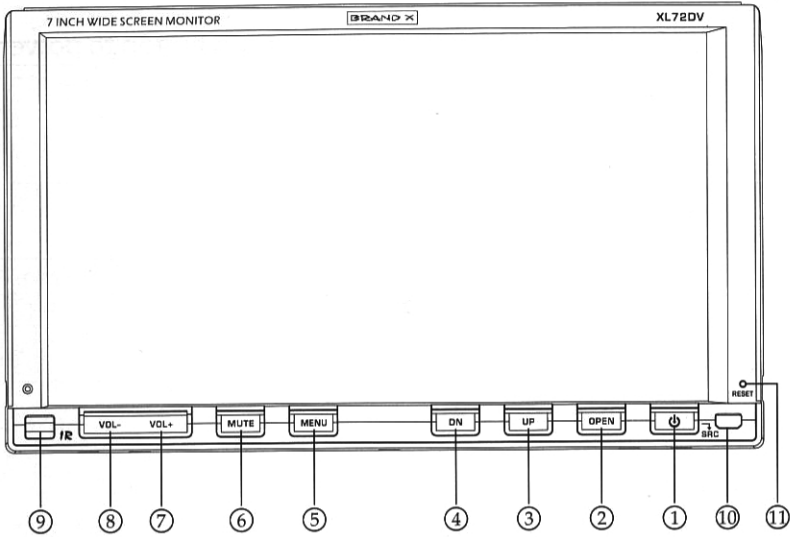

- 1.SOURCE Button
- 2.OPEN Button
- 3.UP Button
- 4.DN Button
- 5.MENU Button
- 6.MUTE Button
- 7.VOL + Button
- 8.VOL - Button
- 9.Remote Control Receiver
- 10.USB Slot
- 11.RESET Button

OUTLOOK AND BASIC FUNCTION

1.SRC Button

Short press this button to power on . Long press this button to power off .

2.OPEN Button

Press this button can eject the disc.

3. UP Button

Press this button to make the LCD monitor up.

4.DN Button

Press this button to make the LCD monitor down.

5.MENU Button

Press this button to back to the main menu.

6.MUTE / TFT on/off Button

Press this button to shut off the sound output, re-press this button can resume the sound output, long press this button can turn off the TFT LCD display.

7.VOL + Button

Press this button to increase the volume.

8.VOL- Button

Press this button to reduce the volume.

9.Remote control receiver

It can receive infrared message of remote control.


10.USB Slot

Connect the USB memory to this socket, and the unit can play music format files supported by this unit in the USB memory.

11.RESET Button

Press this button can back to default mode.

BASE

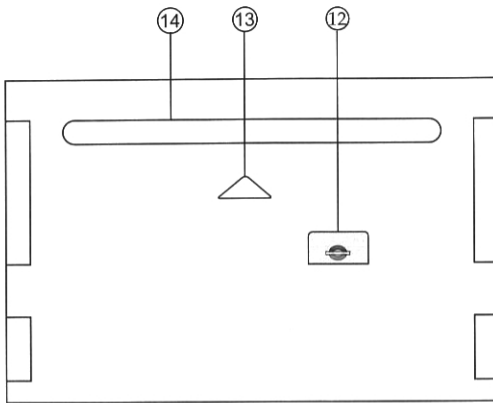


12.SD Slot

13.Slot indicator light


14.Disc Slot

BRAND X

MAIN MENU TOUCH OPERATION (PIC 1)

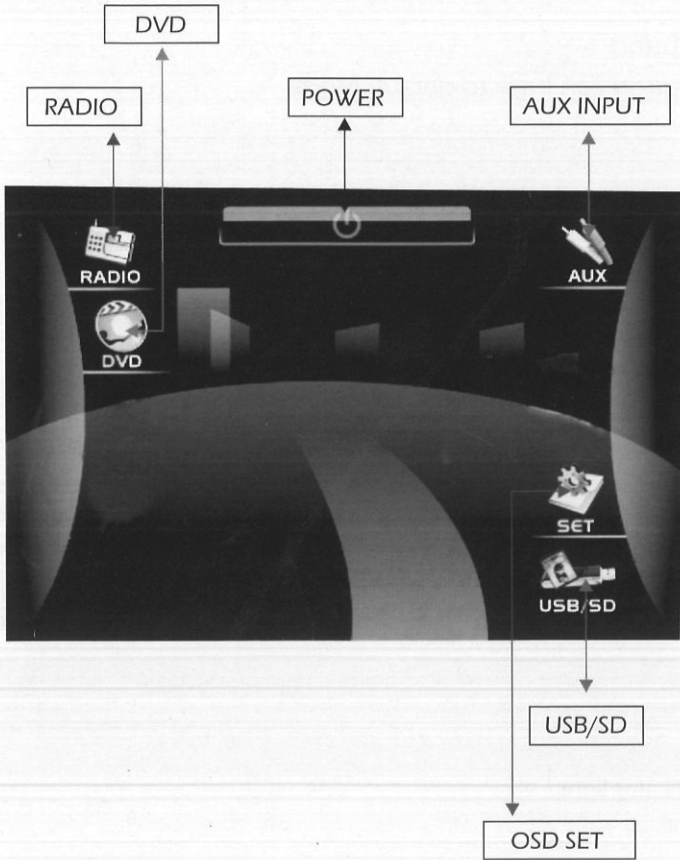

OSD SETUP (PIC 2)

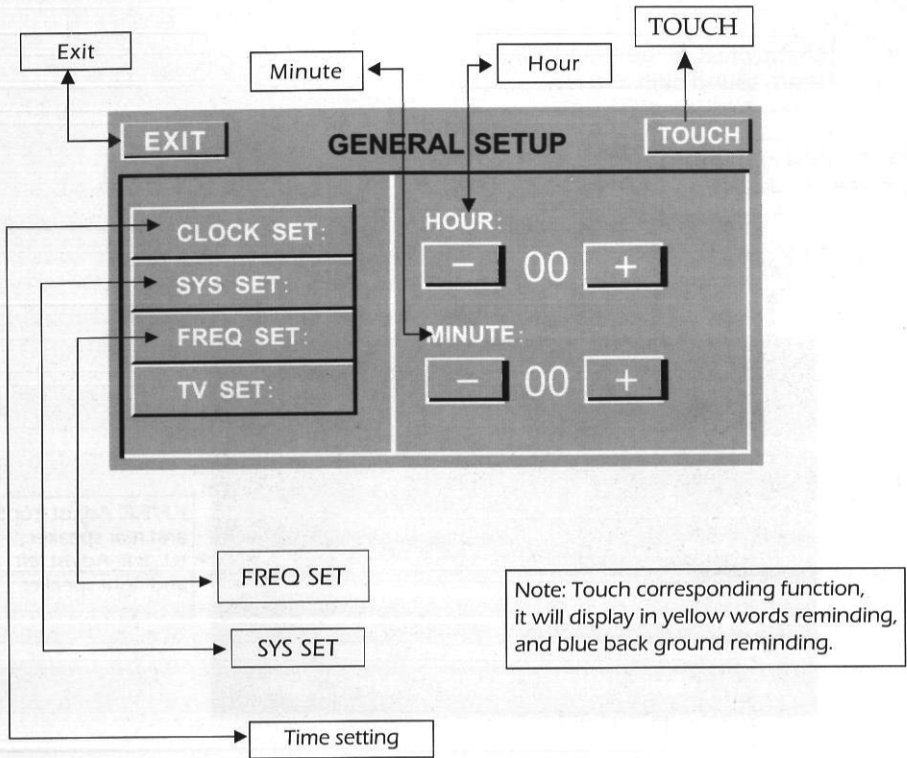

Note: There are 3 buttons automatically changed according to your setting change in radio state when you activate or exit RDS; Change are as following:
 PTY ↔ LOUD; TA ↔ EQ; AF ↔ ST;

TIME DISPLAY AND ADJUST


Time display: Touch main menu into adjust mode, press time setup button, the corresponding function will be display in yellow words.

- (1) Press "+" on hour to add hour, press "-" to reduce hour;
- (2) Press "+" on minute to add minute, press "-" to reduce minute.


NOTE: Touch the correspondence function, will be display in green background. The unit include two times system: Europe time (24 hour setup), America time (12 hour setup), when show the AM mark it indicate morning time, when appear the PM mark, it show the time of afternoon.

Remark: This unit is with RDS function, it will automatically adjust the time when you activate RDS function or have received RDS radio channels. At no received RDS radio channels or AM state, you should adjust the time.

ADJUST MODE (PIC 3)

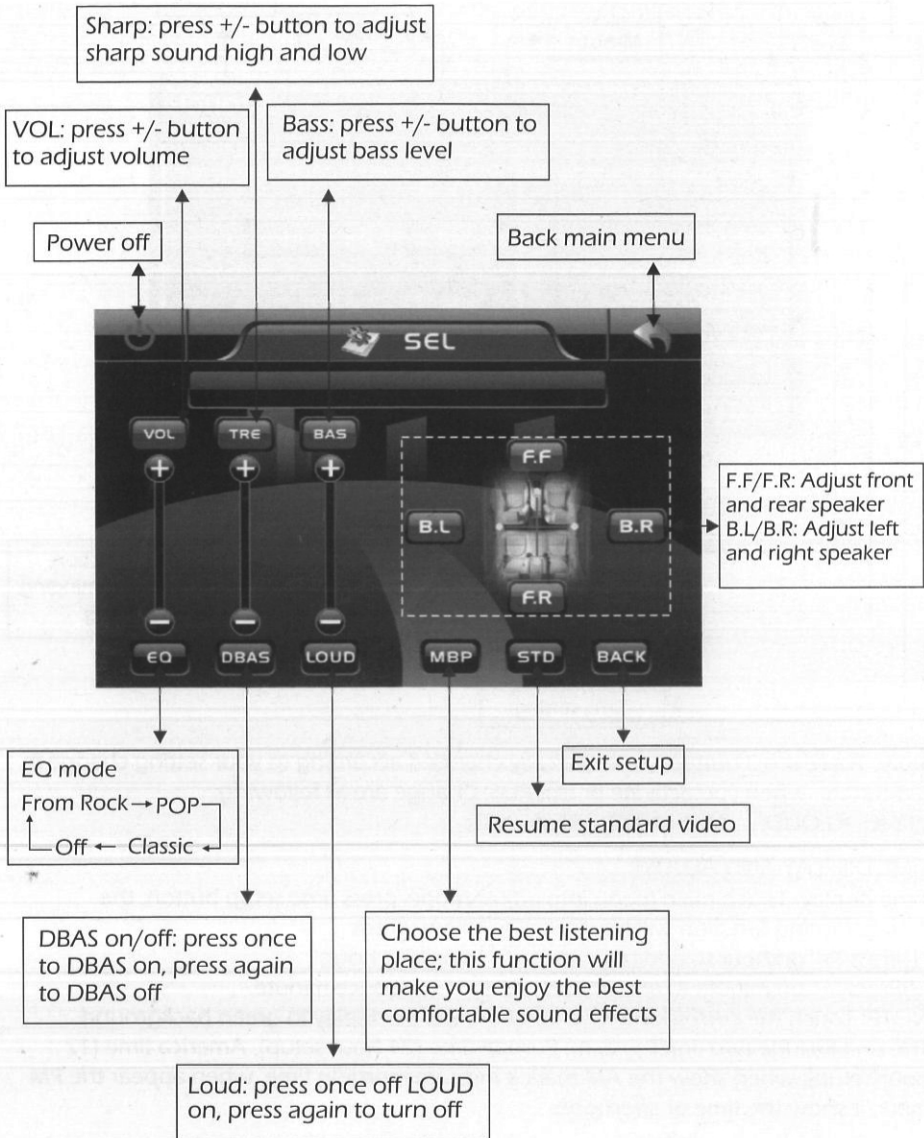

REMOTE CONTROL FUNCTION

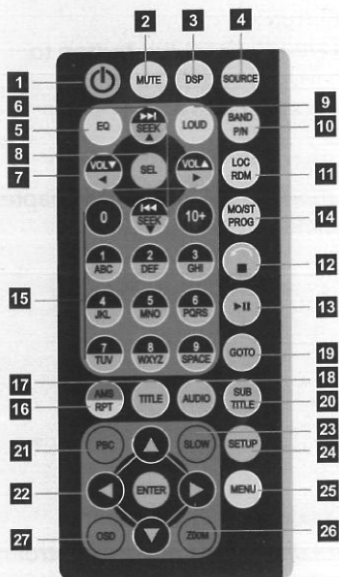

1. POWER

Press once to switch on, press again to switch off.

2. MUTE Button

Press once to turn off audio output, press again to resume volume level.

3. DSP

Press this button to show the time.

4. SOURCE Button

Press this button to choose audio sources.

5. EQ Button

Press this button to choose POP, ROCK, EQ off.

6. SEEK + (\blacktriangleright) / SEEK - (\blacktriangleleft) Button

Press this button to manual turning, speed or quick back, previous song and next song.

7. VOL + (\rightarrow) / VOL - (\leftarrow)

Press this button to increase or decrease volume level.

8. SEL Button

Press this button to choose sound feature.

9. LOUD Button

Press this button to startup LOUD function.

10. BAND - P/N Button

In radio mode, press this button to choose band. In VCD, DVD mode, press this button to choose AUTO, PAL or NTSC system.

11. LOC/RDM Button

In radio mode, press this button to switch between local and direction. In VCD, CD mode, press this key to randomly play.

12. STOP Button

Press this button to stop playing.

13. PLAY/PAUSE Button

Press this button to switch between play and pause. In stop mode, press this button to play.

14. ST/ PROG Button

In radio mode, press this button to choose stereo or mono station. In audio mode, it can help STOP button to programmed play.

15. 0 - 10 + Button

Press this button to choose desired song, section, preset stations.

* Decimal numbers, for example the 19th song, press 1,9 button;

* Centesimal numbers, for example, the 120th song, press 1,2,0 button.

16. AMS / RPT Button

In radio mode, press this button to browse stored stations. In audio mode, press this button to play repeatedly.

17. TITLE Button

In DVD mode, press this button to play back to the top menu of disc.

18. AUDIO Button

In DVD mode, press this button to switch language of dialogue. In VCD mode, press this button to choose left track, right track, and stereo.

19. SET Playing Time

In DVD mode, press this button, you can define playing time.

20. SUBTITLE Button

In DVD mode, press this button to switch language of subtitle.

21. PBC Button

In VCD mode, press this button to display all song menus, work with number button to choose songs.

22. UP, DOWN, LEFT, RIGHT, ENTER Button

In DVD mode, press this button to move cursor up, down, left, right to choose item in menu. Press the enter button to confirm choice.

23. SLOW Button

In audio mode, press this button to slow backward and slow forward.

24. SETUP Button

In audio mode, press this button to choose different set items.

25. MENU Button

Press button to back to the main menu.

26. ZOOM Button

In DVD/VCD mode, press this button to ZOOM in. In CD/MP3/USB/SD mode, press this button to choose EQ.


27. OSD Display

Press this button to display the title chapter and the left time.


BATTERY CHANGE

When control distance of remote control becomes shorter or no function, please change battery. Please confirm polarity before change.


One hand press stopper, then pull out battery.

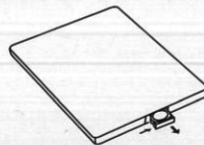

Put battery into controller.

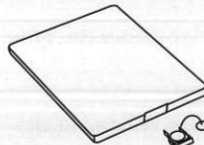

Insert battery holder into controller.

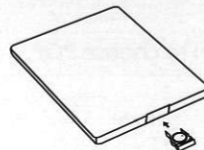

LOADING






This white bar shows the rate of process of loading a disc.

Note: when loading a disc, touch screen function can not be used.


DISC PLAY TOUCH OPERATION (PIC 4)

When playing disc, touch any position of the screen, it will display the function menu;

Note: When loading a disc, touch screen function can not be used.

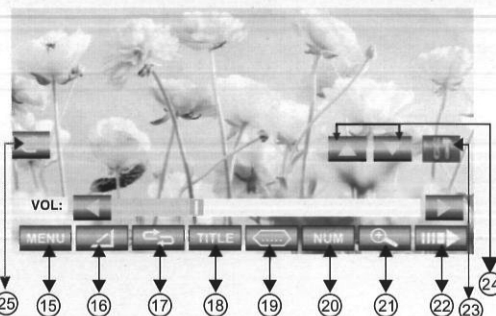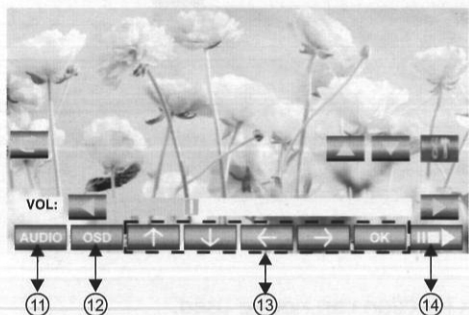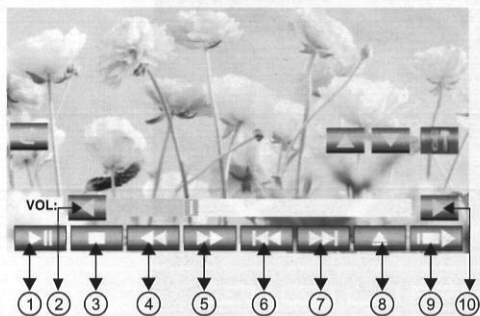

1. Click to choose play/pause
2. Click to reduce the volume
3. Click to stop playing
4. Click to choose the speed of quick back
5. Click to choose the speed speeding play
6. Click to leap backwards to play
7. Click to leap upwards to play
8. Click to exit
9. Click to enter the next page to setup the menu
10. Click to increase the volume
11. Audio
12. Click to display title, chapter, the time already played, the time left
13. At MP3 mode, press this button so you can move the cursor to left/right/up/down and select the songs which in the system menu. then press "OK" button to enter.
14. Click to enter next page set up menu
15. In DVD mode, touch this button to return the directory menu.
16. Click this button to switch to different angles of playing picture in the disc.
17. Repeat play
 DVD: Title Repeat → Chapter Repeat → Repeat play off
 VCD: Single song repeat → Full disc repeat → Repeat play off
 MP3: Single song repeat → Directory repeat → Repeat play off
18. Click on this button to enter title menu
19. Click this button to choose language,
20. click this button and the screen will display 0-10 button.
21. Click this button to Zoon in/ Zoon out the picture.
22. Click to enter the menu of operation for touching.
23. Color adjustment

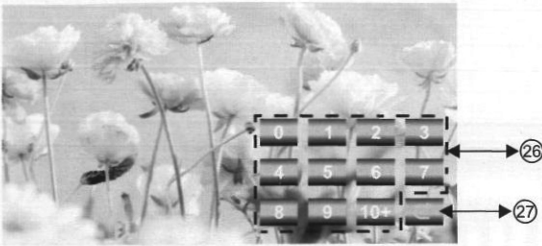

- 24. Press this button to adjust angles of the monitor
- 25. Back to main menu
- 26. Click to select your desired song or chapter
- 27. Return to the menu one level

Note:

- 1. When playing VCD, if PBC FUNCTION is on, repeat play is not available.
- 2. PBC is only suitable for VCD.
- 3. For VCD disc with play memory, you can use the PBC function;
- 4. Press PBC in the remote control, Play/Off PBC, press one time to play from the first song;
- 5. When PBC is on, you can choose speed forward or backward, leap forward or backward, but repeat play is not available.
- 6. When PBC is on, choose casual play, scan play or search play, PBC function will close automatically.

DVD MODE (PIC 5)

AUDIO SETTING ON TOUCH SCREEN



Audio selection:
VOL → BAS → TRE → BAL → FAD
When using this function, the position bar will be highlighted.

EQ mode: Touch the button to change settings:
ROCK → POP → CLASSIC → OFF


Change the listening position

Loud choosing: this function is defined open, when it is touched at the first time, the loud function will be closed, at the same time, yellow light disappear.

Bass choosing: when touched the button will be yellow, touch this button to exit, touch it again to resume.

VIDEO SETTING ON TOUCH SCREEN


You can choose: Brightness, Contrast, Color, Hue, adjust the image effect according to your sight. The blue bar will show your level.

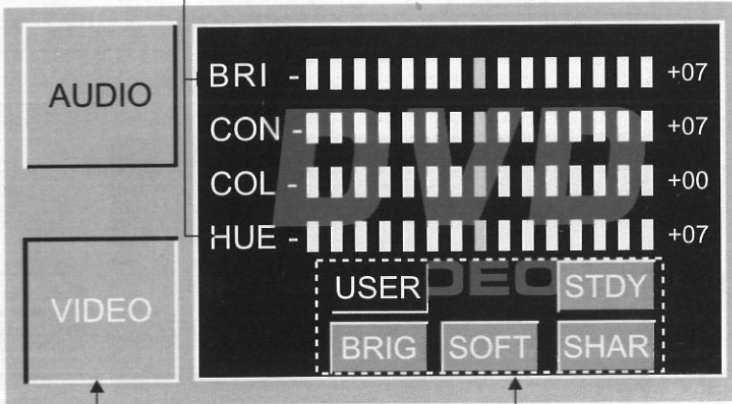

Video mode: When using this function, the position will be darker on the screen.

Image mode: You can choose the area in the broken line on the panel, standard, defined, soft, according what you need to choose, the blue back light will disappear.

RDS TOUCH OPERATION (PIC 6)

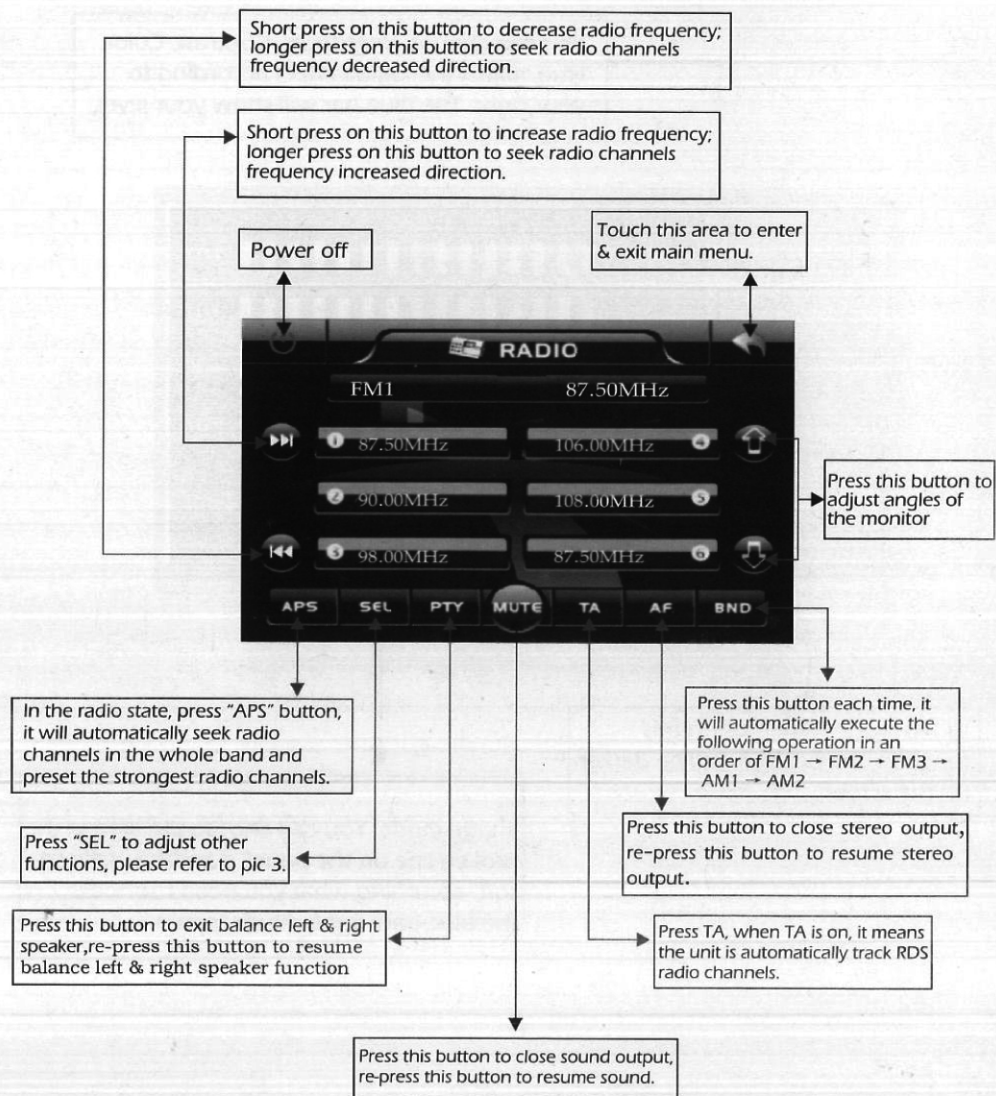

* For details of RDS operation, please refer to other instruction

RDS

1. EON (RDS Mark)

Indicate main unit is on auto tracking RDS mode.

2. AF (RDS Auto Tracking Mark)

Indicate radio is auto tracking RDS channel.

3. TA (RDS Signal Increasing Output)

Indicate RDS channel have signal increasing output.

4. TP (RDS Channel Stereo Mark)

Indicate RDS channel is on stereo playing mode.

5. POP.M (RDS Channel Mark)

Indicate RDS channel name.

I. RDS Tracking System

Press AF button in FM mode, and then press ◀▶ last 2 minutes, RDS will auto search channel up and down, it will stop searching when RDS channel be founded, but "AF" will keep remaining on the screen and waits for the next traffic emergency report.

II. RDS Tracking on Playing Mode

In playing mode, "AF" tracking system keeps on opening and waits for traffic emergency report.

1)PTY: RDS button, press once will show music mode POP, press 1-6 function memory button, every group have 2 channel.

POP M	ROCK M	EASY M
LIGHT M	CLASSICS M	OTHER M
JAZZ	COUNTRY	NATION

2)Press PTY button twice and then press 1-6 function memory button, every button have 3 channel.

NEWS	AFFAIRS	INFORMATION	SPORT
EDUCATION	DRAMA	CULTURE	SCIENCE
CHILDREN	SOCIETT	TELIGION	PHONING
TRAVEL			

Note: RDS channel in broken line is available.

 
AF: RDS auto search button, in radio mode also can press this button shortly auto tracking RDS channel, press this button shortly can cancel RDS function.

TA: In RDS mode, press this button can output TA signal, and check RDS channel is exist or not, if no RDS signal TFT will show "NO. TA. TP".

RADIO OPERATION (Please look at picture #6)

1. Band Selection

In radio mode, press BAND button, BAND/P/N button on remote control, or touch position on screen every time to choose band, the sequence is as follows:



2. Adjust Frequency

Manually Adjust Frequency:

Press SEEK + button on remote control, or **▶▶** touch button on display shortly every time, frequency will increase one step by one step till you get desired frequency. Press SEEK - button on remote control, or **◀◀** touch button on display shortly every time, frequency will decrease on step by step till you get desired frequency.

Search Station:

Press SEEK + / SEEK - button on remote control, or **▶▶** / **◀◀** touch button on display shortly every time to search station in up/down direction. When get one station, it will auto stop searching.

3. Browse / Auto Search and Store Station

1) In radio mode, press AMS/RPT button on remote control, or APS button on display shortly to browse preset station on 1-6;

2) In radio mode, press AMS/RPT button on remote control, or APS button on display longer to auto search in whole band from present frequency and store 6 most strong frequency on 1-6;

3) This unit has FM1, FM2, FM3, AM1, AM2 Bands. Each band can store 6 stations, so a total 30 preset stations.

Note: After preset station, unit will cancel the former preset stations.

4. Mono/Stereo Selection

In radio mode, press ST/PTOG button on remote control or ST touch position on display to choose mono/stereo program.

Note: In radio mode, start up the stereo function automatic, touch the ST button again on the display, the TFT display will show the ST OFF & MOMO mark, that is to turn off the stereo. When the right under foot appear the MONO mark, it show the MONO on.

5. Manual Preset and Store Station

In radio mode, press 1-6 button on remote control, or 1-6 position on display longer to store preset frequency into preset channel. For example, the present frequency is 89.8MHz, press 2 button longer, then 89.8MHz frequency is stored in 2 channel.

DVD BASIC OPERATION (Please link with touch operation at pic 4)

Slide in DVD disc, unit will play it automatically. If disc is in slot, press DVD touch button on main menu to play disc.

1. Pause Play

In playing mode, press **⏸** button on remote control, or **⏸** on the display to pause. Press again to go back to normal play.

2. Stop Play

In playing mode, 1) Press **⏸** button on remote control to enter the pause mode, the position will be stored in unit. At that time, press **⏸** button on remote control or touch button on display to resume playing at the stored position.

2) Press **⏸** button on remote control twice to enter into stop mode, here, press **⏸** button on remote control or touch button on display, unit will play from the first song.

3. Fast Forward/Fast Backward Play

In playing mode, press **⏩** button on remote control, or **⏩** touch button on display to speed play.

When you need quick back, press **⏪** button on remote control, or **⏪** touch button on display to quick back play.

Note: Hold above button a bit longer to operate.

4. Previous/Next Song Play

In playing mode, press **⏮** / **⏭** on remote control, or **⏮** / **⏭** touch button on display to choose previous/next song.

 
5. Switch System

In playing mode, short press the **BAND/P/N** button on remote control, to select PAL, AUTO, NTSC TV system.

Note: This function can only be worked by the remote control.

6. Slow Play


Press **SLOW** button on remote control to slow play. The level of slow playing is as follows. Sequence is :



Note: This function can only be worked by the remote control.

7. Zoom In/Zoom Out

 Press **ZOOM** button on remote control to zoom in / zoom out the picture. The levels are as follows:



Note:

1. This function can only be worked by the remote control.

2. Image which is zoomed in can be moved by up/down/left/right cursor to move.

 
3. Image which is zoomed out cannot be moved.

8. OSD

In playing mode, short press OSD on remote control to show all information of present disc.

9. Repeatedly Play

In play mode, press AMS/RPT button on remote control to start up follow repeat function.


 


10. Multi-Audio

There are different languages of dialogue and audio systems in DVD disc. If the DVD disc is recorded with multi-audio, you can switch the language of dialogue and the audio systems when playing.

Press the AUDIO button repeatedly to change the language of dialogue.

 
 
Note

1. It just can be worked by the remote control.
2. It is only for the DVD disc which has multi-language.
3. If there is a  sign on the cover of the DVD disc,  means that it was recorded by multi-language/audio system.
4. In VCD mode, press the AUDIO button to select the L/R or STEREO track.

11. Multi-Subtitle

If the DVD disc is recorded with multi-subtitle, you can switch the languages of subtitle. Press the sub-t button repeatedly to change the language.

Note:




1. It just can be worked by the remote control.
2. It only for the DVD disc which is recorded with multi-subtitle.
3. If there is a  sign on the cover of the DVD disc  means that it has several subtitle.

12. Title Select

In DVD mode, press TITLE button to back to the title menu. Display shows all the titles of the disc. You can select the chapter you want by the cursor, press play button to play the chapter.

Note: It just can be worked by the remote control.

  13. MENU Select

In playing mode, press PBC button on remote control to back to the menu, display will show chapter and section in disc. Work with / button on remote control or touch button on display to choose your desired song. Press  button / ENTER button to play.

Note: This function can only be worked by the remote control.

OPEN: Press OPEN button on panel to eject disc.

14. Program Play

In DVD mode, you can set the sequence of playing by the program function, the operation is as follow:

PROG	TC	TC	TC	TC			
1	01:03	5	---	9	---	13	---
2	01:06	6	---	10	---	14	---
3	---	7	---	11	---	15	---
4	---	8	---	12	---	16	---
		PLAY		DELETE			

When DVD is playing, press ST / PROG button, then display shows:

For example, program the first song, input 01, press ► button move the cursor to the second lattice, input desired song, for example, the third song. Program the second song, press ▼ button, move the cursor to 2_ _ _ input 01, press ► button move the cursor to the second lattice, input desired song, for example, the 6th song (press 6). Press ►► button to program play. Back to the normal mode, press the ST/PROG button, then press ►► button.

Note: This function can only be worked by the remote control.

15. Digital Album

Play the disc contains JPEG pictures, read the picture menu first.

1. Press ►► button on remote control, the pictures will be browsed automatically. (It also can be worked to press number 6 button on the unit.)
2. Press ENTER button on the remote control, it can be manual browsed by SEEK + and SEEK -.
3. ZOOM in picture function: During auto browsing, press pause button stop the screen, press ZOOM button to zoom in or zoom out the picture. During manual browsing, you can press ZOOM button to zoom in or zoom out picture directly.
4. Under zoom in picture, you can move the picture by ◀▶.

Note: You can not move picture in normal mode and zoom out mode.

16. Setup

Press SETUP button, display will show the system setup menu and the submenu, select the item you want by ◀▶, after selecting the proper item, press ▲/▼/◀/▶ to press ENTER to confirm.


Note:

1. It just can be worked by the remote control.
2. Some function setting maybe different because of the different model or disc.
3. If the selected language is not recorded in the disc, then unit will show the appointed language.
4. About the "SETUP", please read the follow.






Press "SETUP" on the remote control, it will appear the following touch menu:







SYSTEM SETUP

1. Press ▲ or ▼ button

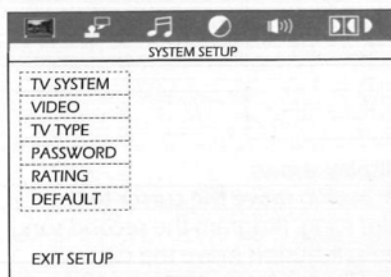

2. Press ▲/▼/◀/▶ button, then to enter.

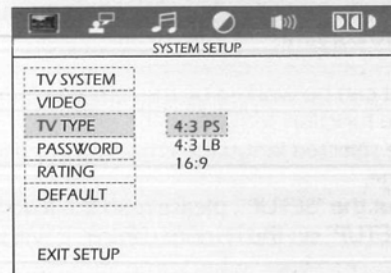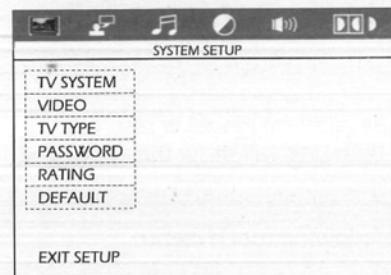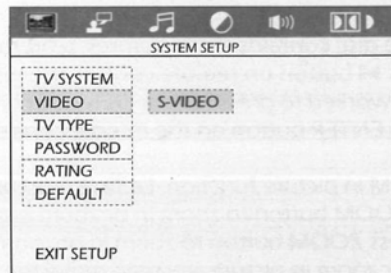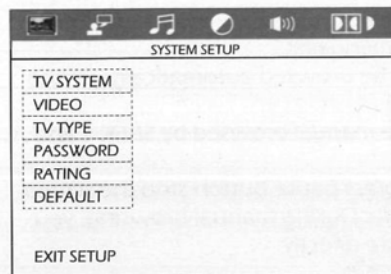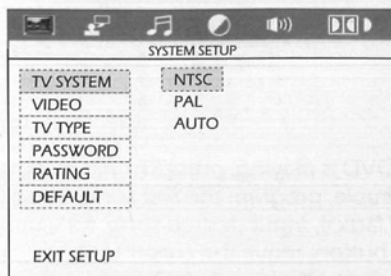

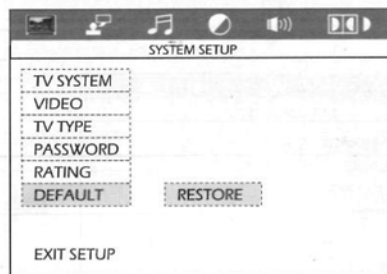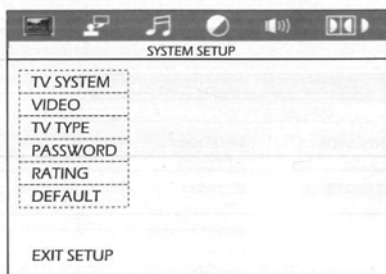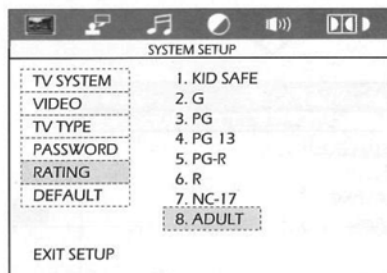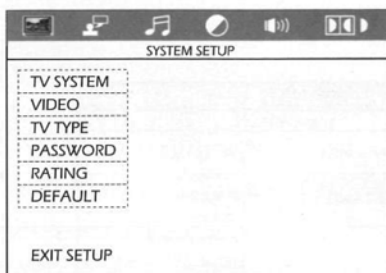
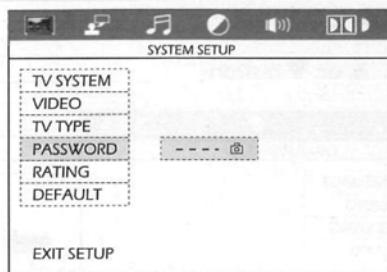
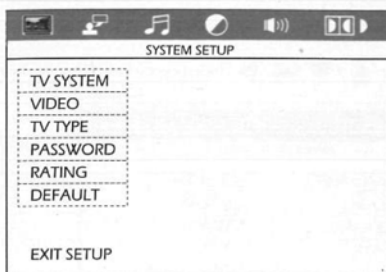


Note:



1. After input code "0000" press ENTER button to turn on child lock;
2. Move cursor to level item, choose desired level;
3. Only child lock is in can you choose.


LANGUAGE SETUP

1. Press ▲ or ▼ button

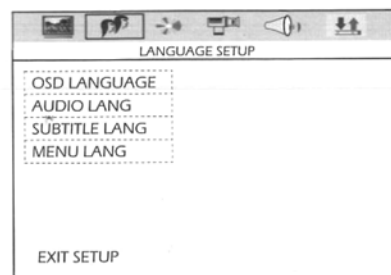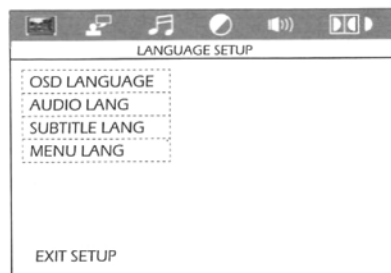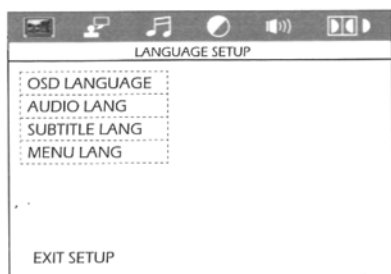





2. Press ▲/▼/◀/▶ button, then to enter.

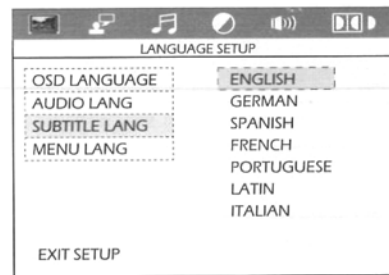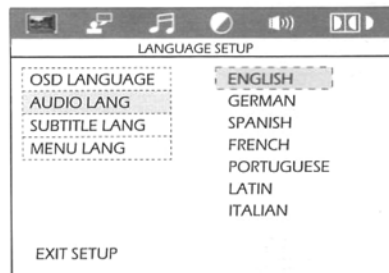

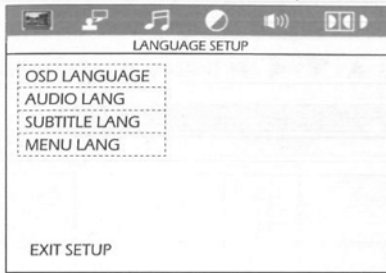




AUDIO SETUP

1. Press ▲ or ▼ button

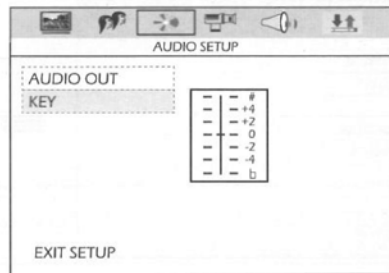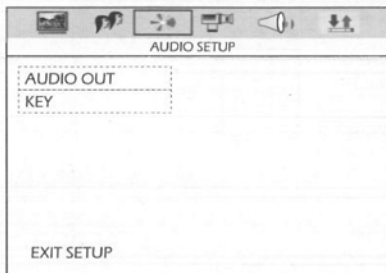
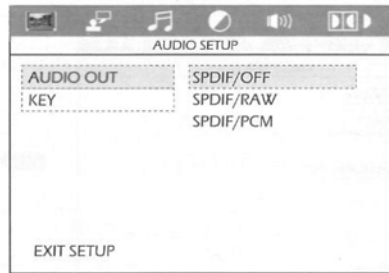
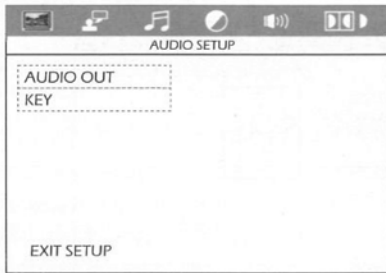






VIDEO SETUP

1. Press ▲ or ▼ button

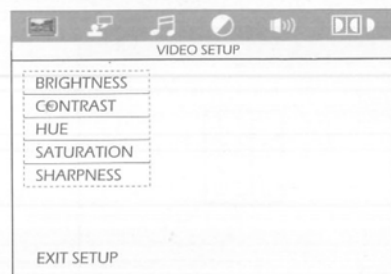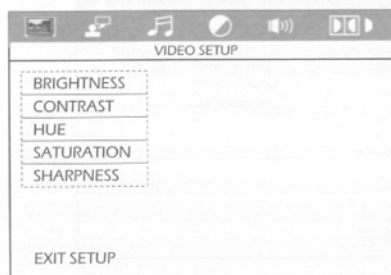
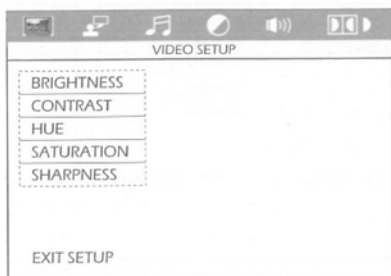


2. Press ▲/▼/◀/▶ button, then to enter.

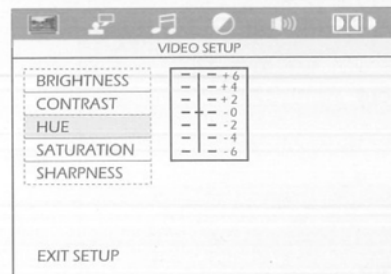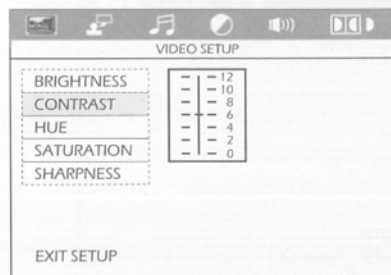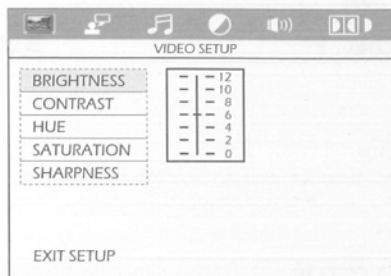

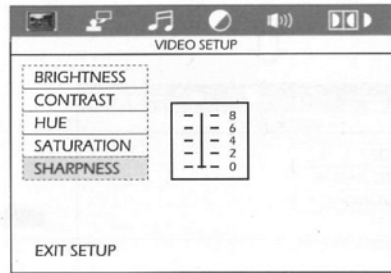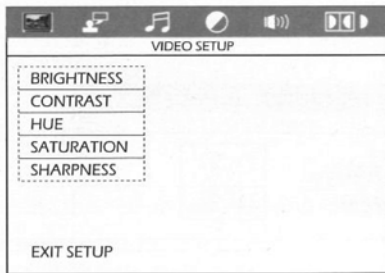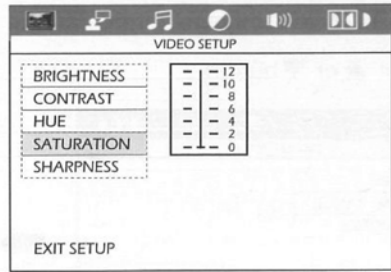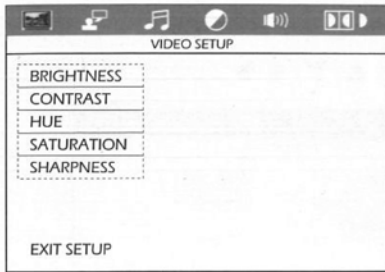


SPERKER SETUP




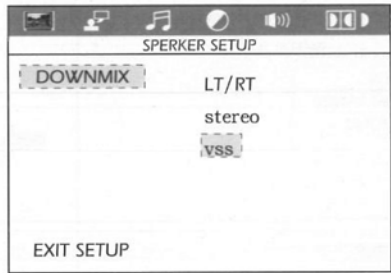
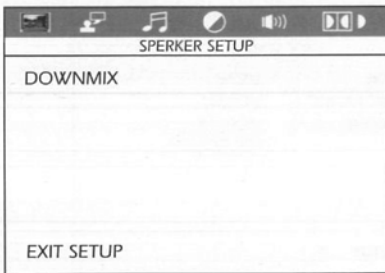


DIGITAL SETUP

1. Press ▲ or ▼ button

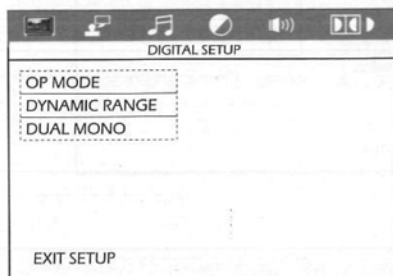

2. Press ▲/▼/◀/▶ button, then to enter.

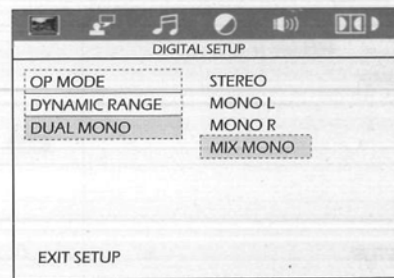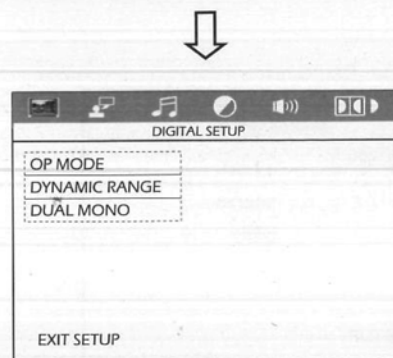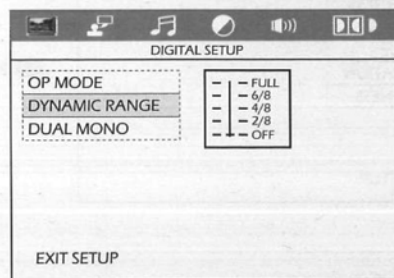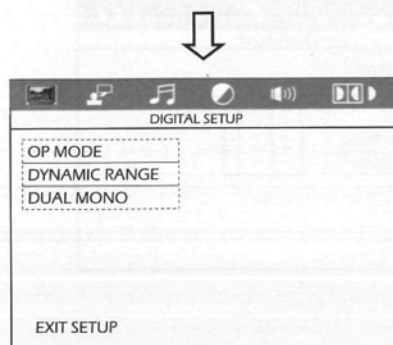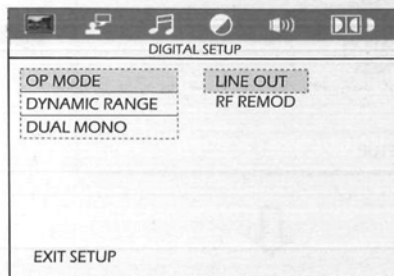

VCD BASIC OPERATION (Look at picture #4)

Slide in the VCD disc, it will play it automatically. If the disc is in slot, press DVD touch button on main menu can to play.

1. Pause Play

In playing mode, press **⏸** button on remote control, or **⏸** on display to pause. Press again to back to normal play.

2. Stop Play

In playing mode, 1) Press **⏹** button on remote control to enter the pause mode, the position will be stored in unit. At that time, press **⏸** button on remote control or touch button on display to resume playing at the stored position.

2) Press **⏹** button on remote control twice to enter into stop mode, here, press **⏸** button on remote control or touch button on display, unit will play from the first song.

3. Fast Forward/Rewind Function

In playing mode, press **⏮** button on remote control, or **⏮** touch button on display to speed play.

When you need quick back, press **⏭** button on remote control, or **⏭** touch button on display to quick back play.

Note: Hold above button a bit longer to operate.

4. Previous/Next Song Play

In playing mode, press **⏮** / **⏭** on remote control, or **⏮** / **⏭** touch button on display to choose previous/next song.

5. Switch System

In playing mode, short press the **BAND/P/N** button on remote control, to select PAL, AUTO, NTSC TV system.

Note: This function can only be worked by the remote control.

6. Slow Play

Press **SLOW** button on remote control to slow play. The level of slow playing is as follows.

Sequence is :

```

    SLOW 1/2 → SLOW 1/3 → SLOW 1/4 → SLOW 1/5
    ↑                ↓
    └─ PLAY ← SLOW 1/7 ← SLOW 1/6 ─┘
  
```

Note: This function can only be worked by the remote control.

7. Zoom In / Zoom Out

Press **ZOOM** button on remote control to zoom in / zoom out the picture. The levels are as follows:

```

    ZOOM IN 2 → ZOOM IN 3 → ZOOM IN 4 → ZOOM IN 1/2
    ↑                ↓
    └─ ZOOM IN OFF ← ZOOM IN 1/4 ← ZOOM IN 1/3 ─┘
  
```

Note:

1. This function can only be worked by the remote control.
2. Image which is zoomed in can be moved by up/down/left/right cursor to move.
3. Image which is zoomed out cannot be moved.

BRAND X

8. OSD

In playing mode, short press OSD on remote control to show all information of present disc.

9. Number Buttons

In VCD mode, press 0-9 number button to input song. For example, you want to choose 13th song, press 10+ button, and then press 3 button once to play 13th song.

Note: This function can only be worked by the remote control.

10. Repeat Play

In playing mode, press AMS/RPT button on remote control, to startup following, repeat function. Single song repeat → Repeat play off.

Note:

- 1) When playing VCD disc, if PBC is on, no repeat function.
- 2) After unit is power off or mode is switched to other playing mode except VCD mode, if you switch back to VCD mode, repeat playing will be cancelled.

 
11. Randomly Play

In VCD mode, press LOC/RDM button on remote control, to instantly play each song. Press again to back to the normal play.

Note: When VCD disc, if PBC is on, RDM will not work.

12. Switch Track

In VCD mode, press AUDIO button on remote control to switch track as following sequence:



13. OPEN

Press OPEN button on panel to eject disc.

14. PBC (MENU) Play

In VCD mode, press this button then play the PBC and display will show whole menu in disc, work with number button to choose song. When you are playing either song of the PBC, and you want to stop to select another song, press the button to turn off.

Note:

- 1) This function can be worked by the control.
- 2) PBC is suitable for the SVCD and VCD 2.0 disc.
- 3) In PBC mode, you can not press number button only to choose song.

15. VCD Program Playing

In VCD mode, you can set playing sequence of songs by program play function.

The program playing operation steps are as follows:

In VCD mode, press ST/PTOG button, display will show:

PROG			
TC	TC	TC	TC
1 _ _ : _ _	5 _ _ : _ _	9 _ _ : _ _	13 _ _ : _ _
2 _ _ : _ _	6 _ _ : _ _	10 _ _ : _ _	14 _ _ : _ _
3 _ _ : _ _	7 _ _ : _ _	11 _ _ : _ _	15 _ _ : _ _
4 _ _ : _ _	8 _ _ : _ _	12 _ _ : _ _	16 _ _ : _ _
	PLAY	DELETE	

Input the songs which you want to programmed by the number buttons on remote control. For example: Program the first song, input your desires song, for example, the fourth song, and press number button 4 on the remote control. Program the second song, press ▼ button move the cursor to 2 _ _ _ _ . Input your desired song, for example, the eighth song, press number button 8 on the remote control. Press ►|| button to program play. Back to the normal mode, press the ST/PROG button, then press ►|| button.

Note: This function can only be worked by the remote control.

CD/MP3 BASIC OPERATION (Look at Picture #4)

Slide in CD/MP3 disc, unit will play it automatically. If disc is in slot, press DVD touch button on main menu can to play.

1. Repeat Play

In CD/MP3 mode, press AMS/RPT button on remote control, to startup following, repeat CD disc: Single song repeat→ Repeat play off.

MP3 disc: Single song repeat→Directory repeat→ Repeat play off.

2. Fast Forward/Fast Rewind

Press SEEK + / SEEK - button on remote control, or ►►/◄◄ touch button on display to speed forward or backward playing.

Note: Hold above button a bit longer to operate.

3. Previous/Next Song Play

In playing mode, press SEEK + / SEEK - on remote control, or ►|/◄◄ touch button on display to choose previous/next song.

4. Pause Play

In play mode, press ►II button on remote control, or ►II button on display to pause.

Press again to go back to normal play.

5. Stop Play

In play mode:

1) Press ■/〉 button on remote control to enter the pause mode, the position will be stored in unit. At that time, press ►II button on remote control or touch button on display to resume playing at the stored position.

2) Press ■/〉 button on remote control twice to enter into stop mode, here, press ►II button on remote control or touch button on display, unit will play from the first song.

6. OSD

In playing mode, short press OSD on remote control to show all information of present disc.

7. Randomly Play

In CD mode, press LOC/RDM button on remote control, to instantly play each song.

Press again to back to the normal play.

8. EQ Mode

1) This function can only be worked by remote control.

2) When playing CD/MP3, press the "ZOOM" button on the remote control, you can choose the sound mode.

3) When enter this function, press the button ▲/▼/◄/► to move the course to select sound mode which in the system menu, after your selection position will show red color to indicate the confirmation.

9. OPEN

Press OPEN button on panel to eject disc.

10. CD Program Play

In CD mode, you can set the sequence of playing by the program function, the operation is as follows:

When CD is playing, press ST/PROG button, then the display shows:

PROG			
TC	TC	TC	TC
1 _ _ : _ _	5 _ _ : _ _	9 _ _ : _ _	13 _ _ : _ _
2 _ _ : _ _	6 _ _ : _ _	10 _ _ : _ _	14 _ _ : _ _
3 _ _ : _ _	7 _ _ : _ _	11 _ _ : _ _	15 _ _ : _ _
4 _ _ : _ _	8 _ _ : _ _	12 _ _ : _ _	16 _ _ : _ _
	PLAY	DELETE	

Input the number of the song you want to program by the remote control, program the first song, input your desired song, for example, the sixth song, and press number button 6 on the remote control. Program the second song, press ▼ button move the cursor to 2[_ _]. Input your desired song, for example, the ninth song, press number button 9 on the remote control. Press ► button to program play.

Back to the normal mode, press the ST/PROG button, then press ► button.

Note: This function can only be worked by the remote control.

11. MP3 Program Play

In MP3 mode, you can set the sequence of playing by the program function, the operation is as follows:

When MP3 is playing, press ST/PROG button, then the display shows:

PROG			
TC	TC	TC	TC
1 _ _ : _ _	5 _ _ : _ _	9 _ _ : _ _	13 _ _ : _ _
2 _ _ : _ _	6 _ _ : _ _	10 _ _ : _ _	14 _ _ : _ _
3 _ _ : _ _	7 _ _ : _ _	11 _ _ : _ _	15 _ _ : _ _
4 _ _ : _ _	8 _ _ : _ _	12 _ _ : _ _	16 _ _ : _ _
	PLAY	DELETE	


Then, input desired song by remote control.

For example: Program the first song, input 01, press ► button move the cursor to the second lattice, input desired song, for example the third song. Program the second song, press ► button, work with ▼ button, move the cursor to 2[_ _]. Input 01, press ► button move the cursor to the second lattice, input desired song, for example, the sixth song (press 6). Press ► button to program play.


Back to the normal mode, press the ST/PROG button and then press ► button.

Note: This function can only be worked by the remote control.


MP3/USB/SD OPERATION

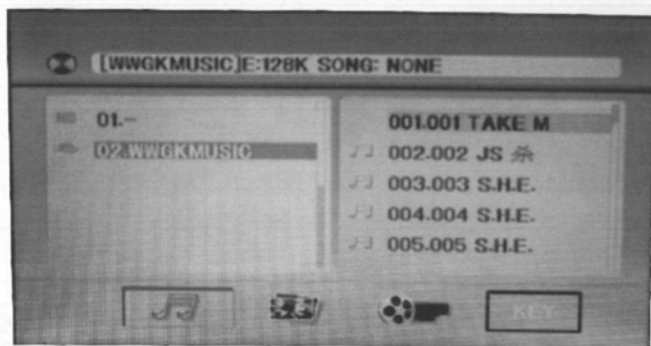



Insert SD card or USB, MP3 disc; click the name of the song directly to select the song you want to broadcast. If there are pictures or video document in the disc or SD card, you can select the relative icon to broadcast.

Playback Mp4 files, the touch screen  into the Mp4 format, you can click directly or through remote control and touch button to choose the direction you need Mp4 repertoire.

 
This interface of DVD touch function will display if you click on KEY
(Please refer to the instruction of DVD touch function)

NOTE: By a remote control  stop button to return to the playback screen.

  
1. Pause play

In playing mode, press  button on remote control, or  touch button on display to pause. Press again to back to normal play.

 2. Previous / next song play

In playing mode, press SEEK + / SEEK - on remote control, or  touch button on display to choose previous/next song.

 3. Speed forward / backward play

Press SEEK + / SEEK - button on remote control, or  touch button on display to speed forward or backward playing.

4. Repeatedly play

In CD mode, press AMS/RPT button on remote control, to startup following, repeat
Mp3 disc: Single song repeat → Directory repeat → Repeat play off.


OTHER PLAY MODE

AUX IN:

AUX IN OPERATION

- 1) Press "Source" button on remote control or touch "AUX" on the touch screen, to switch to AUX mode.
- 2) This will allow you to listen and or watch any source that you have plugged into this section of the radio.
- 3) This unit has 1 - Video RCA input & 1 pair of Audio RCA's for this feature.

CCD (Back-Up Camera)

- 1) If there is a back-up camera installed onto your car, you will need to connect it to the CCD video input.
- 2) When you are backing up the car there you will see this image  on your screen.
- 3) You can set CCD image according to your car's own position in general setting mode.

TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Can not power on	Check whether power fuse blew or not	Change fuse same as the old one
	Some factor cause MPU wrong operation	Press RESET button on the panel by pen point, then, power on
After ignition switch off, setting information all lose	Wrong connection between ignition line ACC and Constant 12 Volt wire	Change the wiring around
Remote control no function	No enough power supply from battery	Change battery in remote control
Poor performance of radio station	Improper length of antenna, poor connection of antenna grounding	Check whether antenna is connected or not, or poor connection
Can not load disc	The disc will not go in all the way	Remove the 2 screws on top of the radio
Can not play disc	Disc is scratched	Change new disc
	Put wrong side of disc into unit	Slot in the disc with sign side up
	Lens has dirty	Clean lens by lens clean disc
Can not switch language/subtitle	There is only one language/subtitle in disc	If disc is not with multi-language/subtitle, it cannot switch language/subtitle
No image	Video line between unit and TV is not properly connected	Reconnect lines

SPECIFICATIONS:

Power supply	DC 12V
Power range.....	10.8-16.0V DC
Max operate current	10A
Ground system.....	Negative ground

FM tuner

Frequency range.....	87.5-108MHz
USA frequency range.....	87.5-107.9MHz
Signal/Noise ratio	55dB
Stereo separation.....	30dB
Search station volt	20-30dBuv
Distortion rate	1.5%

AM tuner

Frequency range.....	522-1620KHz
USA frequency range.....	530-1710KHz
Limit noise sensitivity	32dB

DVD PLAYER


Signal/Noise ratio	70dB
Frequency response.....	20Hz-20KHz

BRAND X

WIRING DIAGRAM

This player is equipped with ISO standard connector, please follow below instruction:

- Red - ACC ON (+12V)
- Yellow - 12 V Constant
- Black - Ground wire
- Blue - Power Antenna / Remote Amp Turn On
- Orange - Back-Up Camera Trigger (+)
- Grey/Grey black - Right front speaker (+/-)
- White/White black - Left front speaker (+/-)
- Purple/Purple black - Right rear speaker (+/-)
- Green/Green black - Left rear speaker (+/-)
- Pink - Parking Brake (-)

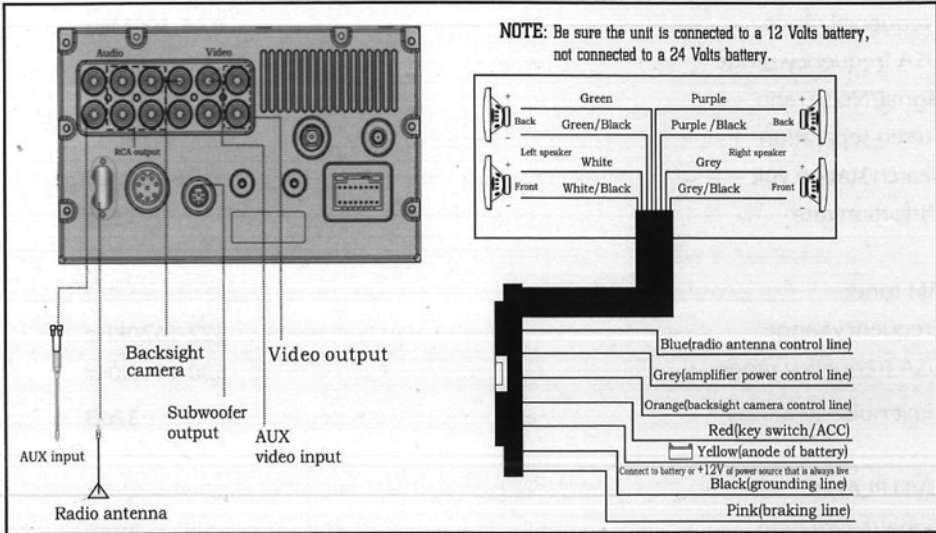



Brand X Warranty

Brand X Products are carefully constructed and thoroughly tested before shipment. Products purchased in the USA are warranted to be free of defects in material and workmanship for 3 years from the date of purchase. 3 year warranty with proof of installation from an authorized Brand X dealer. Otherwise the warranty is for 1 year with proof of purchase.

Should the product fail due the factory defect in material or workmanship . Your unit will be repaired or replaced at the sole discretion of Brand X

To obtain warranty service, the unit must be carefully packed and shipped prepaid to:

Brand X Service Center
1600 63rd Street
Brooklyn, NY 11204

You must also include the following items:

- * A copy of your sales receipt or other proof of purchase.
- * A brief letter indicating the problem you are experiencing.
- * Include in your letter your return address, daytime phone number.
- * Also include a money order for (Radios-\$15.00, Amp/Woofers/FastBatts-\$20.00) Accessories/Wakeboard Speakers-\$20.00. Boxes-\$30.00) or provide your Visa/MC number with expiration date.

Our Obligation under this warranty is limited to the repair or replacement of the defective unit when its returned to us prepaid. This warranty will be considered void if the unit was tampered with, improperly serviced or subject to misuse, neglect or accidental damage.

Register Online

(718)535-1800 * www.BrandXAudioVideo.com

WWW.BrandXAudioVideo.com