

**nutri**chef



## *NCBL100RC*

Portable Kitchen Blender  
Compact Electric Home Blender  
with Built-in Rechargeable Battery

**USER MANUAL**

***For household use only!***

To ensure proper operation, please read this Instruction Manual carefully before using this product. Keep this manual in a safe place for future reference.

***Table of Contents***

Important Safeguards ..... 3

Box Contents ..... 7

How to Use the Blender ..... 8

How to Maintenance ..... 11

Troubleshooting ..... 11

Features and Technical Specifications ..... 12

## IMPORTANT SAFEGUARDS

**PLEASE READ ALL INSTRUCTIONS BEFORE OPERATING THE BLENDER  
AND SAVE THIS INSTRUCTIONS.**

### **WARNING!**

1. Do not use appliance for other than intended purpose. When using electrical appliances, basic safety precautions should always be followed, including the following.
2. Do not put the body (motor element) into water or other liquid, nor can risen it under water to protect against the risk of electrical shock. Only can use dry cloth to clean.
3. This charger has a polarized plug (one wide blade) that reduces the risk of electric shock. The plug fits only one way into a polarized outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
4. Do not operate any appliance with a damaged cord or plug, or after appliance malfunctions, or is dropped or damaged in any manner.  
Contact Customer Service for assistance in obtaining a replacement.
5. Unplug cord from outlet when the charger is not in use
6. Do not use the appliance while charging.
7. The use of attachments, including canning jars, not recommended or sold by the appliance manufacturer may cause fire, electric shock or a risk of injury to persons and void any applicable warranty.
8. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
9. The batteries can explode in a fire. Keep the appliance away from hot gas or electric burner or heated oven.
10. The ingredients in bottle are suggested not exceed the **MAX** line, leave some spaces to have the best performance.

### ***Where can we use the blender?***

1. Always use your blender on a clean, flat, hard, dry surface, never on cloth or paper, which may block the fan vents and cause overheating.
2. This appliance accessory is intended for household and outdoor use only. Use for food or liquids only.
3. Do not use in the rain or in wet conditions.
4. Do not let charger cord hang over edge of table or counter, or touch hot surfaces, including the stove.
5. Close supervision is necessary when any appliance is used by or near children.
6. The countertop or tabletop where it can be pulled on by children or accidentally tripped over.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Do not place blender jar in the freezer filled with food and liquid. The will freeze and damage the cutting unit, jar, and motor.
9. Do not use appliance for other than intended use.

### ***Please check before you use blender.***

1. Always completely assemble the cross blade and cup before placing on power base; never insert or store the cross blade in base unless attached to a cup.
2. Do not use a broken, chipped, or cracked blender jar.
3. Do not use broken, cracked, or loose cutting blades. Be certain that the cross blade is completely and firmly screwed on to the cup before operating appliance, to reduce the risk of injury.
4. Always operate blender with lid in place.
5. Before using the cross blade, check the gasket to make sure it is not damaged and it is completely seated in the cross blade unit before each use.
6. Make sure the blade is complete dry before re-inserting the gasket.

## BLENDER SAFEGUARDS

1. Avoid any contact with blades or moveable parts.
2. Keep hands and utensils away from the cutting blade or jar while blending to reduce the risk of severe injury to persons or damage to the blender. A rubber spatula may be used but must be used only when blender is not running.
3. Blades are sharp. Handle carefully—especially when cleaning inside blender jar.
4. **NEVER BLEND CARBONATED BEVERAGES!** Released gases can cause pressure to build up and the container to burst, resulting in possible injury.
5. Never run the blender without food or liquid contents in any of the cups.
6. Do not blend hot liquids.
7. **NEVER KEEP THE BLADE RUNNING FOR MORE THAN ONE MINUTE AT A TIME, AS IT CAN CAUSE PERMANENT DAMAGE TO THE MOTOR.** If the motor stops working, unplug the power base and let it cool for a few hours before attempting to use it again. Your blender has an internal thermal breaker that shuts off the unit when it overheats. Letting the thermal breaker cool down should allow the Power Base to reset.
8. Do not attempt to defeat the cover interlock mechanism.
9. Always operate blender with cover in place.
10. Never feed blender container food by hand, always use the plunger.
11. If the cutting unit blades lock and do not move, it will damage the motor.

**Do not use.**

## MICROWAVE SAFEGUARDS

**⚠ CAUTION:**

**NEVER MICROWAVE UNVENTED, SEALED CONTAINERS AS THEIR CONTENTS MAY EXPAND WITH HEAT PRESSURE AND EXPLODE, RESULTING IN INJURY OR PROPERTY DAMAGE. DO NOT USE THE SOLID LID IN THE MICROWAVE, USE ONLY THE VENTED LIDS.**

**⚠ WARNING:**

**NEVER MICROWAVE CUPS WITH THE BLADE ATTACHED TO THE CUP. THE METAL IN THE BLADE MAY SPARK, OR FIRE AND MAY RESULT IN INJURY OR DAMAGE TO PROPERTY.**

1. To prevent possible injury, always use protective oven gloves and direct steam away from hands and face.
2. Follow the precautions and recommendations found in your microwave oven instruction manuals, specifically the overall heating times, but never run microwave longer than 2 minutes consecutively. Heat for 2 minutes. Let the food sit for 2 minutes, remove from microwave, open the container and carefully stir, then heat for 2 minutes again.
3. Do not use excessive amounts of time when heating water or liquids in the microwave, and do not exceed more than 2 minutes consecutively.
4. Do not overheat the liquid.
5. **Super Heated Water** – Liquids such as water, coffee, tea or soups are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave is not always present. This could result in very hot liquids suddenly boiling over when the container is disturbed or a spoon or other utensil is inserted into the liquid. To reduce the risk of injury to persons.
6. Stir the liquid both before and halfway through heating it to avoid eruption.
7. Use extreme care when inserting a spoon or other utensils into the container.
8. Avoid heating baby food or formula in cups.
9. Don't defrost frozen beverages in cups (especially carbonated beverages). Even if the container is opened, pressure can build up. This can cause the container to burst, possibly resulting in injury.
10. Hot foods and steam can cause burns. Be careful when removing cups from the microwave when they contain hot foods and liquids.
11. Do not overcook food. Carefully attend to appliance when Cups are placed inside an operating microwave.
12. After heating, allow the container to stand in the microwave for a short time before removing container.
13. After microwaving, always use heat resistant pads to handle cups. Allow the ingredients to settle for a moment and then carefully open the lid pointing the container away from your body as escaping steam and moisture may cause scalding burns.

## Box Contents



● ..... | Sip & Seal Lid



● ..... | Bottle



● ..... | Blade Assembly



● ..... | Motor base



● ..... | Charger

## How to Use the Blender

### ASSEMBLY AND OPERATION

**Note: Please read the 1-5 page safeguard again before you use it.**

1. Take out the blender and remove all packaging material and labels from the appliance.
2. Wash the lid, cups and blades assembly in warm, soapy water with a soft cloth.

**CAUTION:** Handle the blades assembly with care when washing, as the blades are very sharp.

3. Rinse and dry thoroughly.
4. Cups and lid are dishwasher safe.
5. Wipe the motor base clean with a damp cloth.
6. Place the motor base on a clean, dry, level surface such as a counter or table top.
7. Ensure the blender is fully charged. Take cup and fill with ingredients up to the max fill line.
8. Place the blades assembly onto the cup and twist it on tightly until you have a good seal (Fig.1).
9. Turn the cup upside down and place it onto the motor base, aligning the tabs on the cup with the motor base.  
Turn it clockwise, now, it is ready to use (Fig.2 & Fig.3).
10. Double click the power button, it starts to work. (Fig.4) After 1 mins blending, it will stop working automatically. When you have reached your desired consistency, stop the appliance by clicking the power button.  
Wait for the motor to stop running. Then turn the cup counterclockwise and pull straight up to remove. (Fig.5)
11. Turn the cup upright and remove the blades assembly by twisting the blades assembly counterclockwise. (Fig.6) Be sure to store the blades assembly attached to an empty cup when not in use.
12. Place the Sip & Seal lid onto the cup, twist to seal and enjoy!



# Assembly



Fig. 1



Fig. 2



Fig. 3

**Double Click  
to Start/Stop**

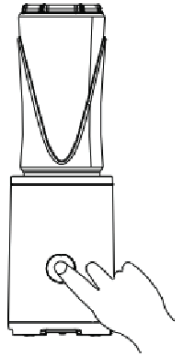


Fig. 4

# Removal



Fig. 5



Fig. 6



## INSTRUCTIONS ON THE POWER INDICATOR COLOR

1. When the product works normally, the power indicator will be in blue color.
2. When the power is not enough, the power indicator will be in red color, indicating the product needs charging.

Do not turn on the product when the power is not enough.

3. It will take 2.5 hours to get fully charged.

The indicator will be in green color once it is done.

### NOTE:

Use only with the charger provided with the appliance.

Do not attempt to use this charger with any other product.

Likewise, do not attempt to charge this appliance with any other charger.



**Charger**



**Charging Port**  
on the back of motor base

FUNCTION	CUP	SUGGESTED FOOD
Nutrient Juices/Smoothies	10 oz	Fruits
		Vegetables
		Leafy Greens
Mixing	10 oz	Batters
		Dips
Sauces	10 oz	Vinaigrettes
		Salad Dressings
		Simple Sauces

### Note:

1. When blending sauces and soups, make sure they're cooled to room temperature first - the containers are not intended for hot blending.
2. This product is not intended for dry blending.  
Please **DO NOT** process dry ingredients without adding liquid to the cup
3. **DO NOT** suggest for frozen blending or chopping.

## How to Maintenance

**CAUTION: DO NOT** immerse the motor base into water or any other liquid, nor can risen it under water.

**CAUTION:** Handle the blades assembly with care, as the blades are very sharp.

1. Separate / remove all parts from each other.
2. Clean the motor base with a damp cloth and wipe dry.
3. Place the cups, lids in the top rack of the dishwasher. Carefully hand wash the lids, cups and blades assembly in warm, soapy water with a soft cloth.
4. Always clean the product before storing.
5. Store the blender upright. Do not place anything on top. Store the cups and the rest of the attachments along side the appliance where they will not be damaged and won't cause a hazard.
6. Store in a dry dark place, keep it out of sunshine.

## Troubleshooting

**Please check and analyze the fault before contacting the after-sales service department.**

PROBLEMS POSSIBLE	REASONS AND SOLUTIONS
Double click the power button and no feedback	Check the product if it is fully charged. If the indicator shows in red color, it means with no power. Charge the blender
	Check the machine and parts if all are assembled well. Reassemble the machine and parts followed with instructions on manual
Stop working at midway	Too much food and fruit in the cup which caused overload or block up then ceased. Decrease the food inside and restart.
Leakage at the container	Make sure that your lid or blade assembly is properly assembled to the cup. Leaking may occur if it is misaligned when twisted onto the cup. Turn the lid tightly clockwise.
Lid/Blade assembly will not properly align to the cup.	Set the cup on a level surface. Place the lid or blade assembly on top of the cup and align the threads so that the lid/blades sit flat on the cup. Twist clockwise so that the lid/blades evenly align to the cup until you have a tight seal.
It appears unusual smell when initial use	It is normal that appears unusual smell in the initial uses. It will not appear this kind of situation after several uses. It will appear unusual smell if use the product for too long time, then you must turn off the button, let it cool down for 30mins.

## *Features and Technical Specifications*

### **NCBL100RC**

#### **Portable Kitchen Blender**

Compact Electric Home Blender with Built-in Rechargeable Battery

#### **Features:**

- Compact Home Kitchen Blender
- Lightweight & Portable Food Blender Style
- Built-in Rechargeable Battery
- Includes Micro USB Charging Cable
- Simple Electric Plug-in Design
- High-Speed Blending Motor
- Hassle-Free One Button Activation
- Stainless Steel Cutting Blade
- Perfect for Mixed Drinks, Fresh Juices, Smoothies, Soups, & More
- Powerful 360° Cylindrical Impact for Instant Nutrition Extraction
- Stain Resistant & Easy-to-Clean
- Large Capacity Easy-Pour Container
- BPA Free, Food Grade Construction
- Great for Travel, Camping, Backpacking & Outdoor Parties

#### **What's in the Box:**

- Portable Blender
- Micro USB Charging Cable
- Wall Power Adapter

## Technical Specs:

- High-Powered Blender Motor: 100 Watt
- Blend Speed Settings: Up to 13,000+ RPM
- Blender Cup Capacity: 300ml (10 oz.)
- Construction Material: Clear Tritan Blend Container, Engineered ABS Housing
- Battery Life: Up to 2.5 Hours / 300 Cycles
- Rechargeable Battery: 7.4V Li-iOn, 2000mAh - 7.4Wh
- Power Cable Length: 4.9' ft.
- Power Supply: 120V
- Total Blender Size (L x W x H): 3.7" x 3.8" x 11.4" -inches



### Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: [support@pyleusa.com](mailto:support@pyleusa.com)



**WARNING:**

This product can expose you to a chemical or group of chemicals, which may include "Lead (Pb)" which is known in the state of California to cause cancer, birth defects, or other reproductive harm. For more info, go to <https://www.p65warnings.ca.gov/>.



nutrichechef