

INTRODUCTION

Thank you for purchasing this S'MORES MAKER from Nutrichef!
Now you can make your own s'mores right at home in a fun and easy way.

Please read through the Instructions before use and keep it properly
If there is any difference between the product and the pictures herein, the product shall govern.

(The technical specifications in the instructions are subject to change without notice)

Contents

Chapter I	Safety Precautions	3
Chapter II	Parts and Functions	4
Chapter III	Usage and Recipes	5
Chapter IV	Cleaning and Maintenance	6
Chapter V	Production Safety Index	6
Chapter VI	Malfunction Analysis and Exclusion	7

CHAPTER VI FAILURE ANALYSIS AND TROUBLESHOOTING

MALFUNCTION	CAUSE	SOLUTION
DOES NOT WORK	Plugged out	Planted Plug
	Power Switch is off	Power Switch On
	Damaged cord or plug	Return to maintenance center
INDICATOR LIGHT DOESN'T TURN ON WHEN TURNING ON POWER SWITCH	Switch contact not good, switch no power, or indicator light broken	Ask maintenance center for service

Note: If any of the above failures cannot be eliminated or there is any other failure, please contact the maintenance point or distributor of our company. Any person other than professionals shall not disassemble this product without permission.

CHAPTER IV CLEANING AND MAINTENANCE

- WARNING: Metal and plastic around heating zone will be very hot.**
1. Disconnect from the electrical outlet by unplugging the appliance before cleaning.
 2. Please clean the product in time after using.
 3. Turn control dial to “O” (OFF). Unplug the appliance from the outlet. Allow to cool for 20 minutes at least before cleaning. DO NOT touch until cool.
 4. Remove all parts from heated base.
 5. Dispose of any remaining mixture by emptying into a bag or trash receptacle.
 6. It is not recommended that you pour the leftover mixture down the sink.
 7. Soapy water with a non-abrasive cloth.
 8. Dry parts thoroughly with a soft, non-abrasive cloth.
 9. DO NOT put any parts in a dishwasher, except for the silicone molds. The silicone molds may be washed in the dishwasher if you wish.
 10. NEVER immerse heated base or cord in water.
 11. This product should be stored in a dry place and avoid direct exposure to ultraviolet light.
 12. Make sure that product is clean and dry before storage
 13. This warranty is good for one year after the date of the purchase of the product.
 14. Guarantee only for the purchase of a product to buy the signature and seal of the guarantee card.
 15. Do not disassemble it by yourself,it may cause the invalidation of product guarantee.


CHAPTER V SAFETY INDICATORS

Product Model:	PKSMGM26
Rated Power:	200 Watts
Rated Voltage:	120V~ 50/60Hz
Reference Standard:	GB4706.1 GB4706.14
Continuous Operating Time:	4 Hours
Interval:	1 Hour

CHAPTER I SAFETY PRECAUTIONS

- When using electrical appliances, basic safety precautions should always be followed, including the following
- Check that your mains voltage corresponds is AC120V,50/60Hz 100w.
- If need maintain, please contact our service department, or return the appliance to the nearest authorized serviced facility. Do not disassemble the appliance yourself to avoid dangerous.
- Before installing any part of the product, please be sure to disconnect the power.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Looking for the professional to replace. Do not disassemble the appliance yourself to avoid dangerous.
- When using the appliance,do not touch the hot surface .As to avoid burn wait at least 20 minutes unit it cools down before touching the unit.
- Never immerse or wash host in water and other liquid.
- Never put any parts in a dishwasher
- Never use near water.
- Never use an abrasive sponge or cloth on the appliance
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not overload wall outlet, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
- This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
- Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- An extension cord or longer detachable cord is not recommended for use with this appliance.
- If a long detachable power-supply cord or extension cord is used:1)the marked electrical rating of the cord or extension cord should be at least as great as the electric rating of the appliance;2) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
- Extreme caution should be used when moving appliance with hot food.
- Please keep out of reach of children and pets. This products is not intended for use by children, by persons with reduced physical, sensory or mental capabilities, or lacking experience or knowledge,
- For household use only.
- Never leave appliance unattended while in use.
- Do not operate the appliance with wet hand, and do not move when the electric is on.
- Forbid using the MAX power to make gummy. Otherwise the food be burnt and pot melted.
- Do not let drip on switch parts and power cord .This will reduce insulation performance and make the risk of arc ,short circuit and electric shock.
- After use, please unplug the power plug, so as to avoid accidents.
- To ensure that the voltage used with the machine marked with the rated voltage in line. Do not share a socket with other electrical appliances
- Do not put the cord on the countertop or table top where it can be pulled on by children
- This appliance is not a toy, not intended for use by young children or the cognitively challenged without supervision.
- Close supervision is necessary when the appliance is used by or near children. So as to avoid burning ,keep out of reach of children.
- Don't idle the heating tube for a long time. Occasionally there is oil splash particles or smoke in the heating rube, electricity to a high temperature, then it will volatilize automatically .
- Do not put these into the appliance, including but not limited to paper, card, plastic cement, cloth, charcoal, inflammable plastic.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system
- Before first use, rinse pot and molds with boiling water.

CHAPTER II COMPONENTS AND FUNCTIONS

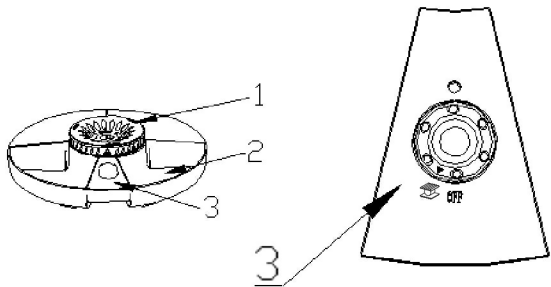

NO.	COMPONENT	FUNCTION
1	Host	Heat Food
2	Tray	Place Food & Fix Silicon Bracket
3	Thermal Switch	Adjust Temperatures

CHAPTER III USAGE AND RECIPES

INSTALL: Make sure that the product is not connected to the power
RECIPES FOR MAKING S'MORES

1. For the original s'mores taste, use original "Graham crackers", which are more like cookies than crackers.
2. Get the crackers and chocolate ready before you toast the marshmallows.
3. Marshmallows are ready when slightly brown outside and runny inside.
4. Sandwich chocolate with a toasted marshmallow between a halved cracker and squeeze together gently.
5. You can also use variations on the traditional s'mores
 - **The Mexican s'more:** cut a flour tortilla, spread with crunchy peanut butter in 1 ½ inch wide stripes, add chocolate chips and marshmallow, and roll.
 - **The Banana s'more:** spread peanut butter on the Graham cracker, add the chocolate, and a slice of banana with the toasted marshmallow.
 - **The cookie s'more:** replace the cracker with chocolate chip cookies, and use large marshmallows.