

 **PYLE**<sup>®</sup>  
**VINTAGE**  
**[www.PyleAudio.com](http://www.PyleAudio.com)**




**PVTTBT8**

**Retro Belt-Drive Bluetooth Turntable with  
USB-to-PC Connection**

**USER MANUAL**

## TURNTABLE PARTS

1. Tone Arm
2. Speakers
3. Tone Arm Rest
4. Function Selection Knob
5. Power/Volume Control Switch
6. Power Led Light Indicator
7. BT Led light indicator
8. Internal Battery Charging Led light Indicator
9. Speaker Buckles
10. Turntable Player Lock
11. Handle
12. Stylus/cartridge
13. Turntable platter
14. Speaker Cable
15. 3.5mm line-in Jack
16. RCA output Jack
17. USB Jack to PC for recording
18. Speed Selection Switch
19. Power Adaptor Jack

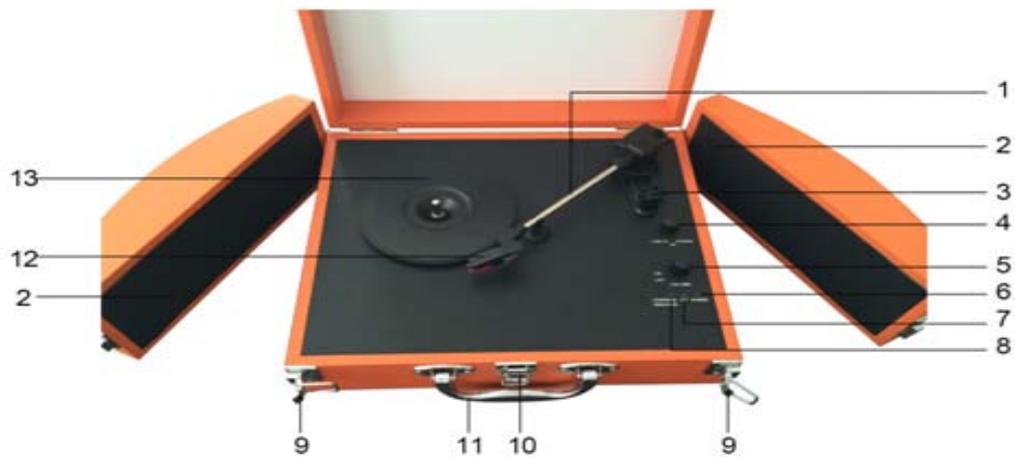

#### POWER ON THE UNIT

Connect the power adaptor to an electrical outlet (120V-60Hz); Or make sure that the rechargeable battery has been fully charged. Then, turn the Power/Volume Control knob clockwise to switch on the unit. The Power led light indicator will light up(6).

#### CHARGING INTERNAL BATTERY

Once connected to the power adaptor, the internal battery is automatically charging, the red led light indicator(8) will light red. Once fully charged, the charging led light indicator(8) will turn off.

#### PLAY A RECORD

1. Open the suitcase by unlock the 3 buckles(9, 10)
2. Turn the function selection knob (4) to Phono mode
3. Place a record on the turntable (13) and set the player speed (18) to match the record speed (33/45). NOTE: when playing a single (a 45 rpm record) and/or records with large centre holes, use the 45 rpm adaptor (packed together with the instruction manual).
4. Remove the tone arm (1) from the rest (3), push lift lever backward to raise the tone arm and gently move the tone arm to the desired position over the record. The turntable will begin to spin when the tone arm is above record. Slowly lower onto the desired position on the record to begin playing the record.
5. Turn the volume control(5) to adjust the volume level.
6. For best performance and product maintenance, unplug the turntable when not in use.

#### PLAY BLUETOOTH

7. Turn the function selection knob (4) to BT mode. The BT light indicator(7) will flash with Blue led light.
8. Open the BT audio source and connect with "Speaker". Once connected, the BT light indicator will flash only in blue color.
9. Control the BT audio source to select songs and volume for playback.

#### LINE IN

10. Turn the function selection knob (4) to LINE IN mode. Connect the 3.5mm line-in jack (15) which is located at the rear of the unit. Connect the other end of the aux cable (not included) to your aux source.
11. Control the Line-in audio source to select songs and volume for playback.

## RECORD YOUR VINYL TO YOUR WINDOWS PC

### Audacity Recording Software

Your USB turntable is compatible with any recording software that supports USB Audio devices. We have included Audacity, which is free software, distributed under the General Public License(GPL), However you may prefer to use a variety of 3rd party software packages.

### BEFORE STARTING THE SOFTWARE

Make sure that your USB turntable is plugged into the computer with the supplied USB cable, and both the computer and the turntable are plugged in and on. Refer to the USB turntable quick start instruction manual included before proceeding with software installation.

### TO INSTALL SOFTWARE ( BOTH PC AND MAC)

### RECORDING INTO A COMPUTER



1. Press the Record Button
2. Start playback on the USB turntable. You will see the waveform of the audio on the screen as it is recording. You will hear the audio coming from the output of your computers soundcard.  
No Audio? - go back to the preference menu (Figure 1) and make sure you have “Software Play through” selected and the speaker volume up on your computer.

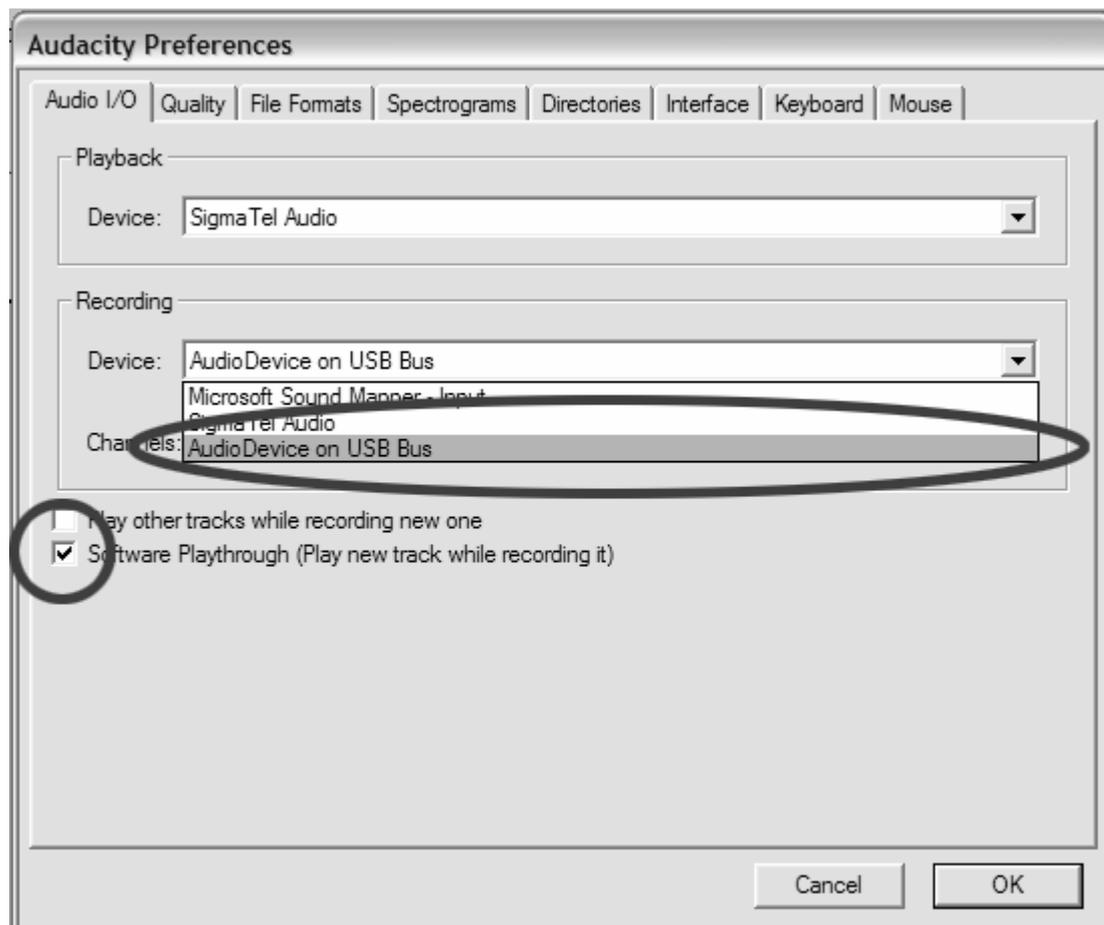


Figure 1: Select USB Audio Device from Preferences

3. Play through the entire track/album you desire to record.



4. Press Stop
5. SAVE YOUR FILE NOW by clicking on 'File' -> 'Save Project'. Select the destination and file name for the project and click 'Save'.
6. You have completed the recording process. (See Figure 2)



Figure 2: Recording Sample  
Adjusting Your Audio Level (Optional)

1. Select your entire recording by selecting "Edit", then "Select...", then click "All". You can also use Ctrl+A on a PC or APPLE+A on a Macintosh to quickly select all.

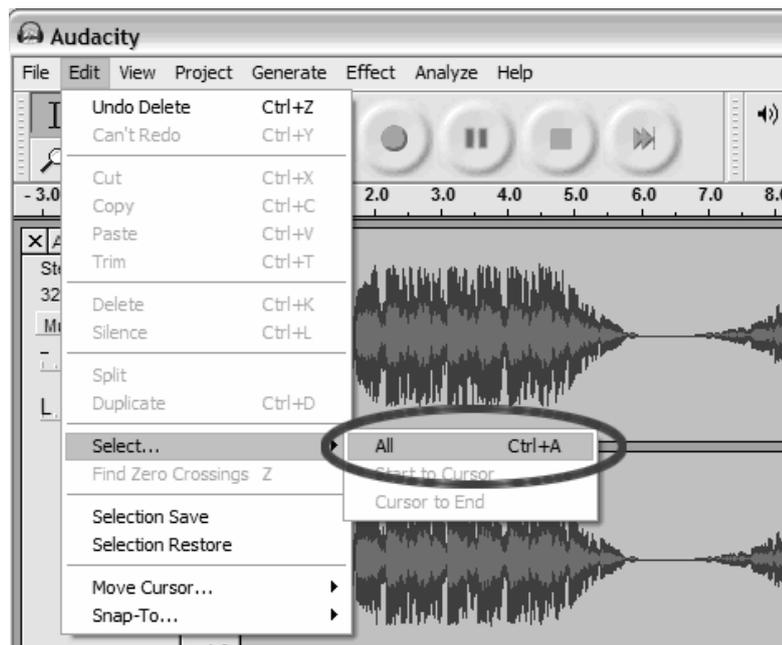


Figure 3:  
Figure 3: Select All

2. Select the "Effect" menu and choose the desired effect. There are various types of effects which

are described further in the software's help section as well as on the web (See Figure 4).

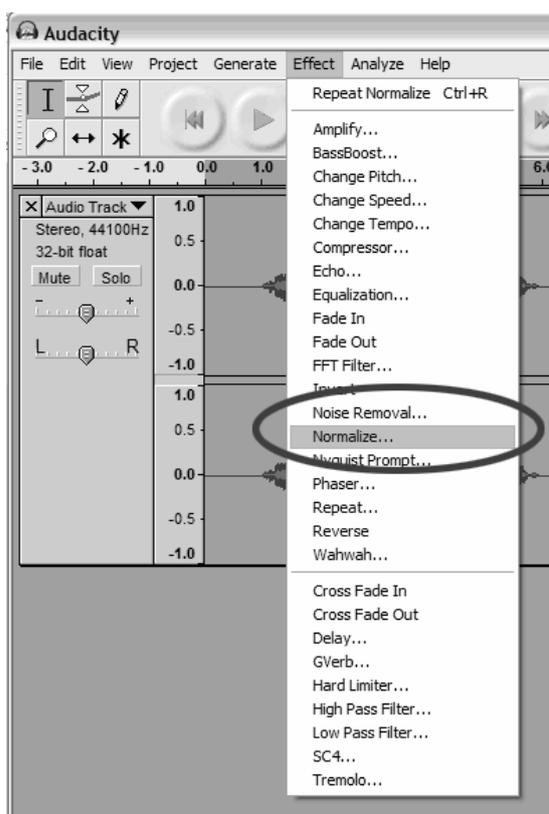


Figure 4: Effect Drop Down List

b. Normalize should be used to have the correct volume on the recording. (See Figure 5)

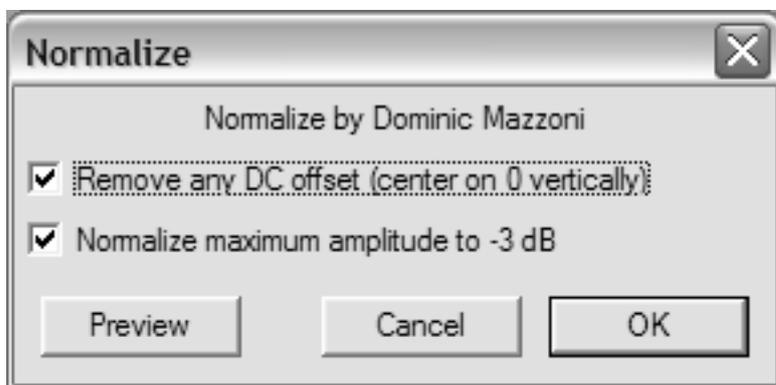


Figure 5: Normalize

### **Cleaning Your Audio (Optional)**

1. Drag the cursor over a portion of the audio track which contains noise. We recommend using the beginning or the end of a track where there is no music and only noise. (See Figure 6)
2. Select "Noise Removal" from the "Effect" drop down menu to bring up the "Noise Removal" window. (See Figure 7)
3. Click "Get Noise Profile". The Noise Removal window will now close automatically.
4. Select the entire track of audio you wish to remove noise from.

If you wish to clean up the entire recording, use “Select All” under the “Edit Menu” (See Figure 3)

5. Repeat Step 2 to bring up the “Noise Removal” Window.

6. Adjust the amount of audio that you would like to filter by moving the slider in the “Noise Removal” window. We recommend using the minimum noise removal for optimum sound. Note: you can preview the audio before removing the noise by clicking on ‘Preview’.

7. Click on ‘Remove Noise’.

#### Cleaning Your Audio (Optional)

1. Drag the cursor over a portion of the audio track which contains noise. We recommend using the beginning or the end of a track where there is no music and only noise. (See Figure 6)

2. Select “Noise Removal” from the “Effect” drop down menu to bring up the “Noise Removal” window. (See Figure 7)

3. Click “Get Noise Profile”. The Noise Removal window will now close automatically.

4. Select the entire track of audio you wish to remove noise from. If you wish to clean up the entire recording, use “Select All” under the “Edit Menu” (See Figure 3)

5. Repeat Step 2 to bring up the “Noise Removal” Window.

6. Adjust the amount of audio that you would like to filter by moving the slider in the “Noise Removal” window. We recommend using the minimum noise removal for optimum sound. Note: you can preview the audio before removing the noise by clicking on ‘Preview’.

7. Click on ‘Remove Noise’.

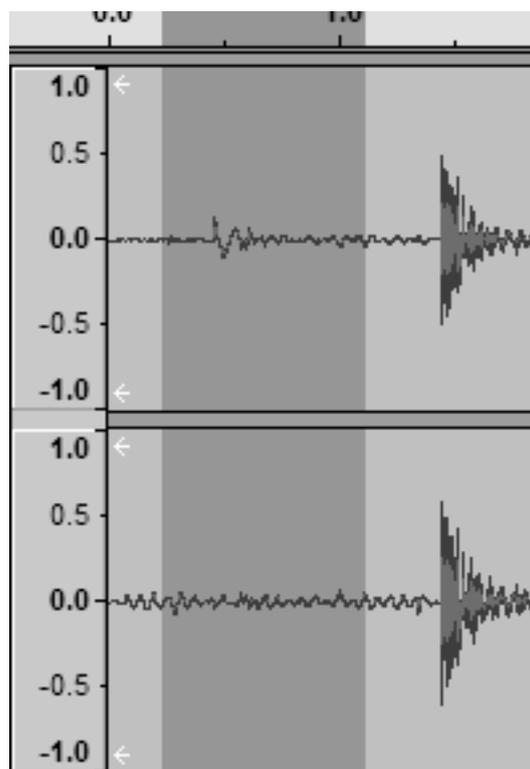


Figure 6: Selecting Noise in Track

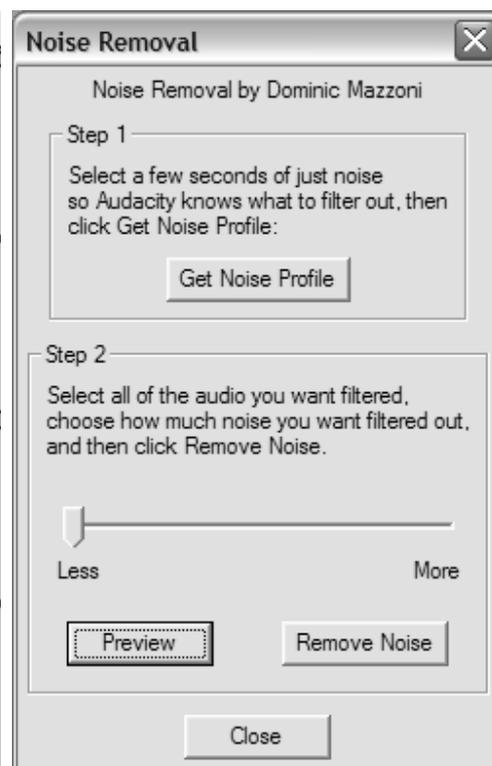


Figure 7: Noise Removal Window

### **TIPS FOR BETTER TURNTABLE PERFORMANCE**

1. When opening or closing the turntable cover, handle it gently, gripping it either at the centre or at each side.
2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
3. Frequently clean the needle tip-use a soft brush in a “back-to-front” motion only.
4. If you must use a needle cleaning fluid, use very sparingly.
5. Gently wipe the dust cover and turntable housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable and dust cover.
6. Never apply harsh chemicals or solvents to any part of the turntable system.