

Model: PSCBLKIT22

Patch Cable Length Setup & Connection

You can assemble the cable connection in two different methods: Straight or Right-Angle Profiles.



Right-Angle Profile Connection:

Cut the cable to the desired length, then use the equipped cable stripper to strip the cable as pictured below, revealing about ¼" of the inner red wire.




Enlarge the center of the inner red wire. This will ensure a proper connection once the connector is inserted.



Add the connector firmly onto the exposed red wire -- ensuring the inside needle of the connector reaches the center core of the cable. Apply firm pressure and rotate/turn the connector to ensure secure contact.



Bend the cable slightly, as so it allows you fasten the cap connector cap to the connector base threading.

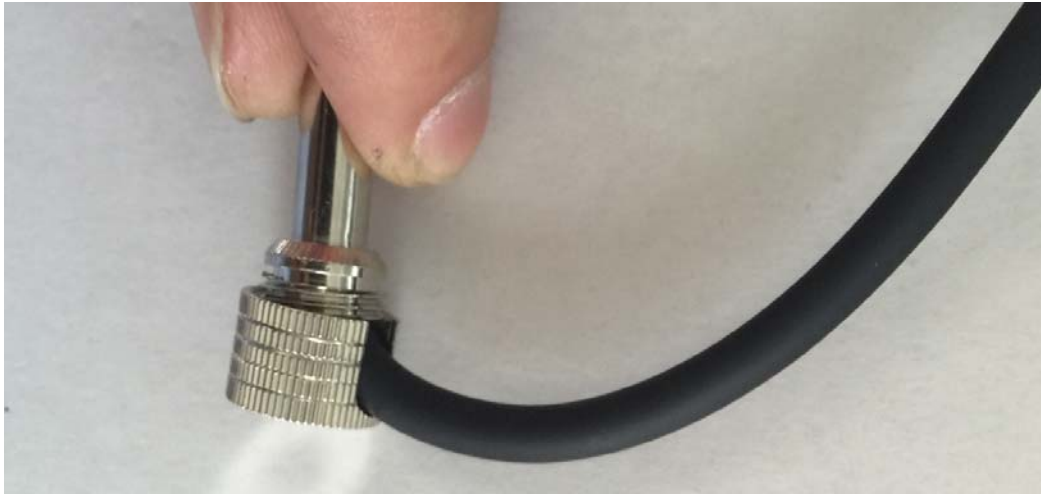

Repeat the above steps to add the connector to the opposite end of the cable. If possible, use a cable tester to check if you have successfully created a custom patch cable.