

PYLEPRO

PyleUSA.com



PWMA60UB

Compact & Portable Waistband PA Speaker System

Voice Amplifier & Microphone Headset with
Built-in Rechargeable Battery & MP3/USB Playback

User Manual

INTRODUCTION

Before operating, please read this instruction manual carefully and thoroughly in order to understand the correct operating procedures to achieve the best results. Keep this manual in a safe place for quick reference in the event that a question arises. We try our best to make it accurate and integrated, errors may still exist in this manual, so please tell us your suggestions. The contents of this manual are subject to change without prior notice as a result of continuing improvements to the instrument's performance and functionality.

FEATURES

- Compact, Portable & Powerful
- PA Speaker Amplifier Projects Your Voice
- Includes Headset Microphone
- USB Flash Drive Memory Reader
- MP3 Digital Audio File Playback Compatibility
- Used for Karaoke, Crowd Control, Presentations
- Built-in Rechargeable Battery, Up to 8+ Hour Life
- Aux (3.5mm) Input & Microphone Jack
- Connect & Stream Audio from External Devices
- Rotary Volume Control




BATTERY CHARGING PROCEDURES

- Please charge the battery if the LED light is dim or off.
- Turn off the voice amplifier, and then insert the plug of the power adapter into charging socket of the voice amplifier, plug the power adapter to 220V power source.
- When charging process is complete, the red LED turns to green.
- To extend the battery life, please charge after the battery is used out.

WEARING YOUR VOICE AMPLIFIER

With the attached waistband, you can fix the voice amplifier to your waist in front or back of your body. You can adjust the length of the waistband.

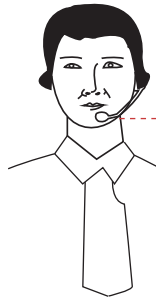

Roughly 2-3 cm

Attentions before wearing the Ear-hanging microphone:

Before wearing, please don't turn **ON** the power and volume.

MICROPHONE OPERATION

Wear microphone as the image shown. The two hole inside the sponge must aim at your mouth. The suitable distance between the microphone and the mouth is 20-30 millimeter. Insert the plug of the microphone into the right hole of the voice amplifier.



There is a white line on the end of microphone, please position against your mouth.

To achieve a maximum effect, please use the provided microphone. Cutting in and pulling out the plug often may cause bad connection between microphone and amplifier.

HOW TO USE

- Fix the voice amplifier to your body as image shown.
- Wear the microphone to your head and insert the microphone plug into the voice amplifier. Turn the power switch clockwise, then LED light is lightened, that means the amplifier is working. Turn the volume button clockwise or counter-clockwise to increase or decrease the volume. Decrease the volume to avoid noise.

BATTERY CHANGE

- Don't change the battery by yourself if under warranty
- The battery provided can work for long period of time and also to avoid the damaging the voice amplifier
- Be sure that the polarity is correct when you change the battery

FAQ

Question: Why the voice amplifier produce so much noises?

Answer: Wear the microphone and adjust. Decreasing volume can avoid the noise effectively.

Question: How long does it take to charge the battery?

Answer: Generally about 3-4 hours is needed for battery charge, temperature and other factors may change the time.

Question: How long is the life of the battery, can I change the battery one year later.

Answer: The battery life is about 2-4 years, and it is changeable, please get in touch with us or our dealers.

Question: Why my voice amplifier doesn't work?

Answer: Please check if:

1. Your microphone is inserted properly
2. Batteries are low
3. The voice amplifier is not turned ON

Please get in touch with us or our dealers if you still can't solve it by yourself.

WHAT'S IN THE BOX:

- Compact PA Speaker Amplifier
- Headset Microphone
- Power Adapter
- Waist-Band Strap
- Belt Clip

TECHNICAL SPECS:

- MAX Power Output: 50 Watt
- S/N Ratio: 53dB
- Built-in Rechargeable Battery: 7.4V Lithium, 1600mAh
- Headset Microphone Cable Length: 3.3' ft.
- Power: 110/240V
- Dimensions (L x W x H): 3.9" x 1.8" x 3.6"



PYLE

PyleUSA.com



VISIT US ONLINE:

Have a question?

Need service or repair?

Want to leave a comment?

PyleUSA.com/ContactUs

PYLE

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com