

serenelife™



SLFTSP140

Steam Foot Spa Bath Massager
Foot Sauna Care with Fast Heating,
No Water Pouring, Best for Stress Relief

User Manual

CONTENTS

Important Safety Instructions	3
Notice	3
Caution	5
Product Instruction	6
Using the Steam Foot Spa Bath Massager	7
Important Tips Before Use	7
Operation Instruction	7
Product Care and Maintenance	9
Troubleshooting	10
Features & Specifications	11

WARNING:

**BE SURE TO READ ALL INSTRUCTIONS, WARNINGS AND PRECAUTIONS
CAREFULLY BEFORE USING THIS PRODUCT.**

**FAILURE TO DO SO COULD RESULT IN INJURY TO YOU
OR DAMAGE TO THE UNIT.**

The **SLFTSP140 Steam Foot Bath** offers a comfortable steam massage. While enjoying foot relief, you should use it with care and safety in mind. To ensure safety and avoid any property damage, please read this manual carefully and use it as indicated. Non-compliance may cause serious injuries or death or severe property damage. This appliance steam risk have not been investigated.

 **CAUTION:**

- To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
- Do not immerse in water.
- Not for Space Heating Purposes.

IMPORTANT SAFETY INSTRUCTIONS

1. NOTICE

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is not intended for medical use. It just offers a steam massage function.
- Any Individual who may be pregnant or recently gave birth or during menstruation, minors or physically/mentally disabled, has a foot diseases or skin diseases, has a heart condition or a pacemaker, suffers from diabetes or other sensory impairment, phlebitis and/or thrombosis, hypertension or cerebral arteriosclerosis, malignant tumor, acute illness, foot joint dysfunction, inflammation or injuries, weak bones, osteoporosis, a high fever, is at an


increased risk of developing blood clots, has pins/screws/artificial joints or other medical devices implanted in his/her foot, is being treated for a medical condition or physical injury or is under a doctor's care should consult with a medical professional before using a massaging device designed for home use.

- If you have any concerns regarding your health, consult your doctor before using your **SLFTSP140 Steam Foot Spa Bath Massager**.
- **NEVER** use any steam foot bath on open wounds, discolored areas, or any area of the body that is swollen, burned, inflamed or where skin eruptions or sores are present.
- If water leaks from the appliance, the appliance should no longer be used.
- Every steam foot bath has been tested with water before leaving the factory to ensure its functions are well. Its normal that there is a little wet in the steam foot bath.
- Please use room temperature water which is $77\pm 9^{\circ}\text{F}$.
- Use this appliance only for its intended use as described in this manual.
- Ensure that your hands are dry when operating the controls or removing the plug.
- Connect this appliance to a properly grounded outlet only.
See Grounding Instructions.
- Use appliance on a dry sturdy level surface.
- Always keep the unit horizontally when using or not.
- Always unplug the unit when filling or moving the unit.
- Keep cord away from heated surfaces.
- Unplug the power after use or before cleaning the product.
- Do not use if your skin is dull and sensitive or areas with poor blood circulation.
- If you feel unwell during use, stop immediately.
- If you want to cut off the power, please turn off all operation controls and then unplug the power.
- The appliance has a heated surface.
Persons insensitive to heat must be careful when using the appliance.

2. CAUTION

- **DO NOT** use the product in a humid or dusty environment to avoid product failure.
- **DO NOT** use the product in an environment with temperature above 104°F.
- **DO NOT** leave the product outdoors.
- **DO NOT** place the product near electric heaters, near stoves or in direct sunlight.
- **DO NOT** step on or drag the power cord.
- **DO NOT** use the product on a seat that can be slid or shaken.
Please sit firmly before using it to prevent accidents.
- **DO NOT** throw things like towel inside the tub to avoid blockage of the water inlet outlet.
- **DO NOT** put fingers or toes into the gap of rollers during use to prevent injuries.
- **DO NOT** use the product anymore if liquid leaks from the tub.
- **DO NOT** pour water into the product.
- **DO NOT** turn on or operate the machine without water in the water tank.
- **DO NOT** immerse the machine in water or any other liquid.
- **DO NOT** attempt to stand on when you use the steam foot bath.
Use only while seated.
- **DO NOT** operate the product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water.
- **DO NOT** operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock or injury to persons.
- **DO NOT** move the machine by dragging cord or use cord as a handle.
- **NEVER** drop or insert any object into any opening.
- **DO NOT** reach for an appliance that has fallen into the water.
Unplug it immediately.
- **DO NOT** use while bathing or showering. Use only in a dry area.
- **DO NOT** place or store appliance where it can fall or be pulled into a tub or sink.
- **DO NOT** attempt to plug or unplug the machine when your feet are in the basin.

Production Instruction

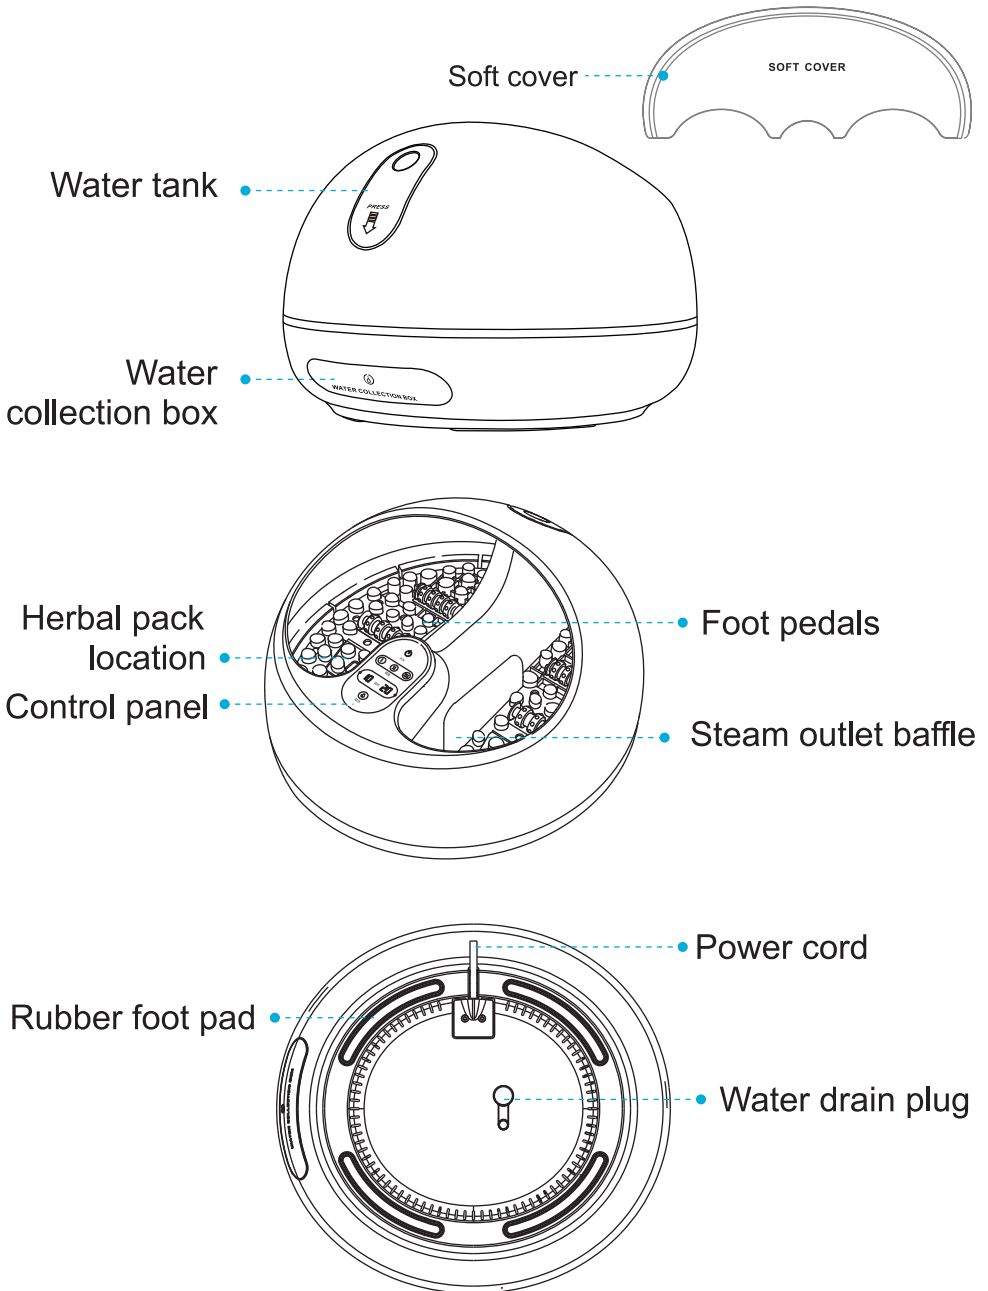

Using the Steam Foot Spa Bath Massager


1. IMPORTANT TIPS BEFORE USE

Grounding Instructions

This product must be grounded. If a malfunction or breakdown occurs, grounding provides a path of least resistance for the electric current to reduce the risk of electric shock. This product is for use on a nominal 120V circuit and has a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

2. OPERATION INSTRUCTION

2.1. Button Function

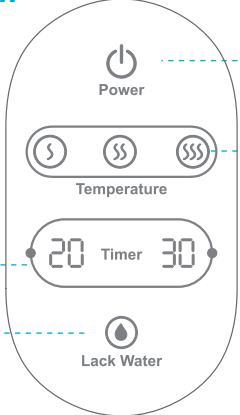

The diagram shows the control panel of the Steam Foot Spa Bath Massager. It features a Power button at the top, three Temperature adjustment buttons (Low, Mid, High) in the middle, a Timer display showing 20 and 30 minutes, and a Lack Water indicator light at the bottom. Callouts point to each of these features.

Power button
Default mode:
Mid temperature and
20 minutes timer

Steam temperature adjustment buttons

- Low (White Light): $107\pm 4^{\circ}\text{F}$
- Mid (Orange Light): $118\pm 4^{\circ}\text{F}$
- High (Red Light): $129\pm 4^{\circ}\text{F}$

Timer buttons
20/30 minutes

Water lack indicator light



WATER LACK INDICATOR LIGHT:

When there is no water in the water tank, the indicator light will flash, and the steam foot spa will automatically shut down after about 10 seconds.

Different using time at different temperature with full water status.

Temperature	Water Tank Status	Using Time
Low	Full water	65 minutes
Mid	Full water	60 minutes
High	Full water	50 minutes

2.2. Using Guide

1. **Fill the Water Tank:** Press the water tank firmly until it pops out, fill the water tank fully with water (You need to rotate to open the water tank lid), install back by pushing strongly again.
2. **Connect Power:** Put the foot pedals in the device and plug the power. You will hear two beeps and the power button light will turn to red breathing status.
3. **Power On:** Touch the power button and the product starts to work. The default mode is mid-temperature and 20 minutes. The corresponding light is on.
4. **Adjust Temperature:** Choose your want temperature via touch corresponding Low/Mid/High button.
5. **Adjust Timer:** Choose your want time via touch corresponding 20/30 minutes button to choose from.
6. **Lack water Prompt:** When there is no water in the water tank, the indicator light will flash, and the steam foot spa will automatically shut down after about 10 seconds.
7. **Tips:**
 1. **Water Collection Box:** After about 40 minutes using, press the water collection box firmly until it pops out. Take out the water collection box and empty it. Or the water will get out when you move the steam spa bath.
 2. **Water Tank:** When not in use for a long time, lift off the water drain plug to drain the remaining water in the device.

Product Care and Maintenance

TO CLEAN

1. Before cleaning, make sure that the product is disconnected from the power supply.
2. Take out the water collection box and empty it.
3. Wipe the product with a soft cloth and mild, non-corrosive detergent.
4. Foot pedals need to be taken out for cleaning separately, then place them back after wiping them dry. Use only until dry after wiping the inner wall of the product. When cleaning, avoid spilling water directly inside the product.

TO STORE

- Wind the power cord over the cord wrap.
- Store in a cool, dry area.
- Do not hang the unit by the power cord.
- After use, pour the water of the water collection box clean and lift off the water drain plug to drain the remaining water in the water tank to ensure the product is clean.



This symbol on the device or its packaging indicates: Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

Troubleshooting

PROBLEM	CAUSE	SOLUTION
Device not turning ON	No power	Make sure the machine is properly plugged in
	Power not switched ON	Open the power button
Device stops working	Power off	Check the power is connected well
	Lack of water	Refill the water tank with water
	Massage session has ended	Restart the device
	Used continuously, the product is overheating, shutdown automatically	Restart after cooling down
Leaking water	The water collection box is full.	Empty the water collection box immediately

Features:

- Steam Temperature Adjustment Buttons: Low (White), Mid (Orange), and High (Red)
- Water Lack Indicator Light
- Relieve Pains and Stress
- More effective and Safer to Use
- Atomization Volume Up to 300m per Hour
- Easy to Clean, One-touch Operation
- Fast Heating
- Warm Steam
- Pebble Sensation
- Massaging Rollers
- Smart Control Panel
- Herbal Pack Insertion

What's in the Box:

- Steam Foot Bath
- Foot Pedals
- Soft Cover

Technical Specs:

- Construction Material: Engineered ABS, PC
- Maximum Water Capacity: 12.17 oz
- Temperature Range: 107°F~129°F (41☒ to 54☒)
- Power Supply: 280W
- Power Output: AC 120V
- Timer: 20-30 minutes
- Frequency Response: 60Hz
- Noise: 50dB
- Power Cord Length: 5.91 ft.
- Product Dimensions (L x W x H): 15.43" x 14.45" x 10.71" -inches



serenelife™

Questions? Issues?

We are here to help!

Phone: (1) 718-535-1800

Email: support@pyleusa.com