



**USER'S MANUAL**

**PCMX240i**


**Battery Powered Portable PA w/iPod Dock**

[www.pyleaudio.com](http://www.pyleaudio.com)







# QUICK SETUP GUIDE (ENGLISH)

1. Make sure all items listed on the front of this guide are included in the box.
2. **READ SAFETY INSTRUCTION BOOKLET BEFORE USING THE PRODUCT.**
3. **MAKE SURE THAT YOU HAVE COMPLETELY CHARGED THE BATTERY PRIOR TO FIRST USE FOR MAXIMUM BATTERY LIFE.**
4. Study this setup diagram.
5. Place product in an appropriate position for operation.
6. Make sure all input devices such as microphones, CD players, mp3 players, and linked amplifiers/PAs are turned off and volume settings are set at "zero"
7. Connect all devices as shown above.
8. Connect the stereo outputs to the power amplifier(s), tape decks, and/or audio sources.
9. Switch everything on in the following order.
  - audio input sources (i.e. microphones, instruments, CD/MP3 Players)
  - last, any amplifiers
10. When turning off, always reverse this operation by,
  - turning off amplifiers
  - last, any input devices



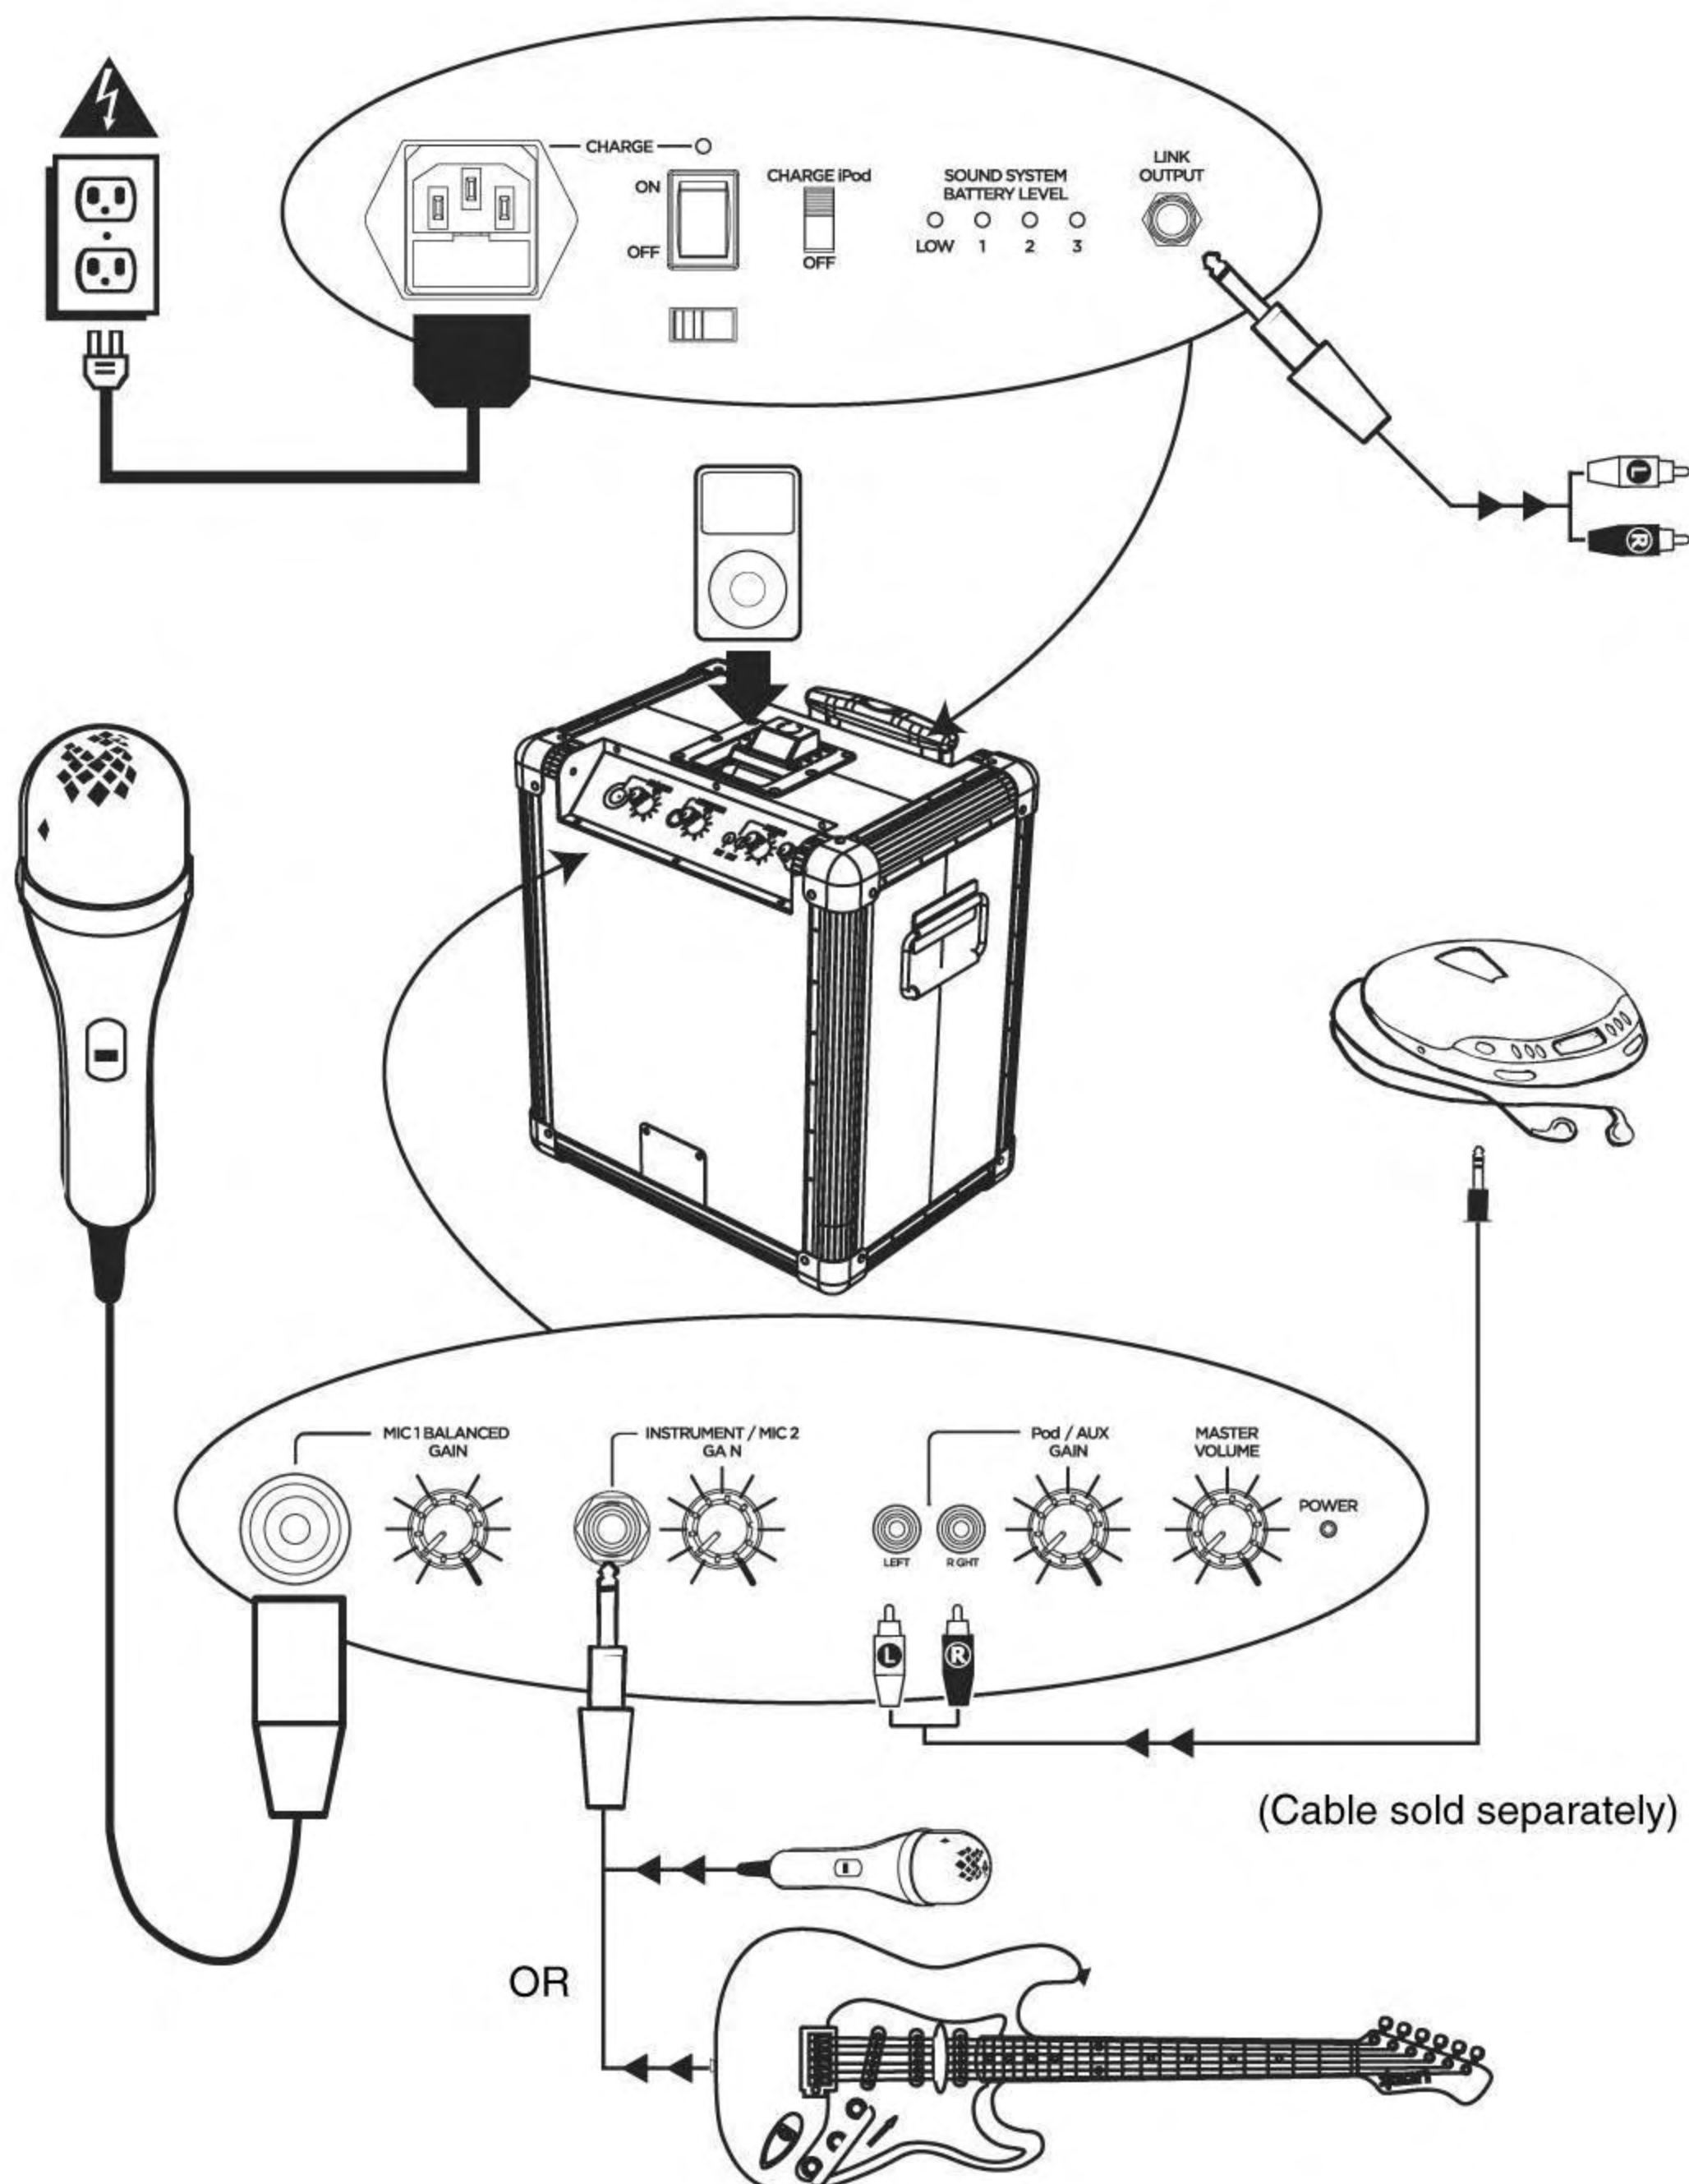


## DIAGRAM AND PARTS DESCRIPTION

- Microphone 1 Balanced Input with Gain Control (1/4" and XLR):** This jack can either take a 1/4" balanced or a XLR balanced cable. An XLR Cable is included with the microphone.

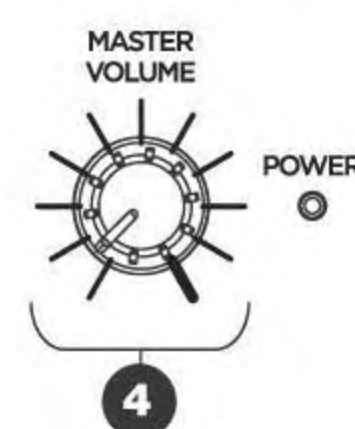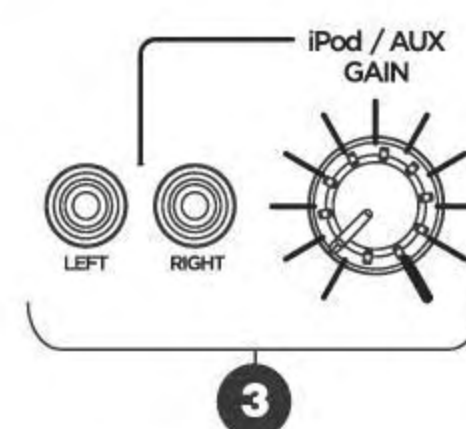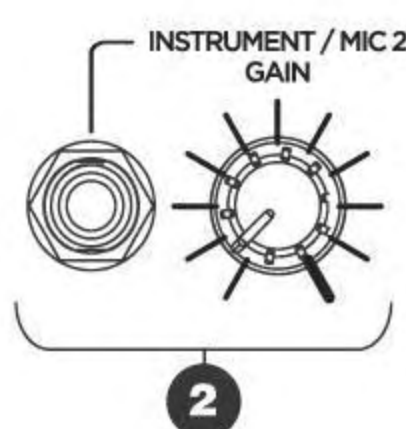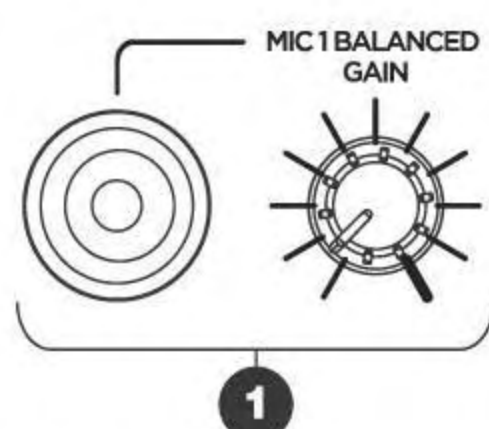

- Instrument/Microphone 2 Input with Gain Control (1/4"):** This mono input accepts a 1/4" input such as a microphone, guitar, or other musical instrument.

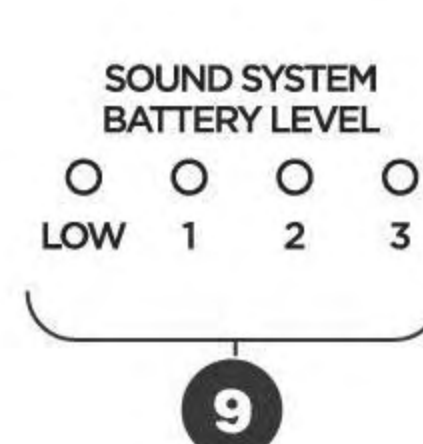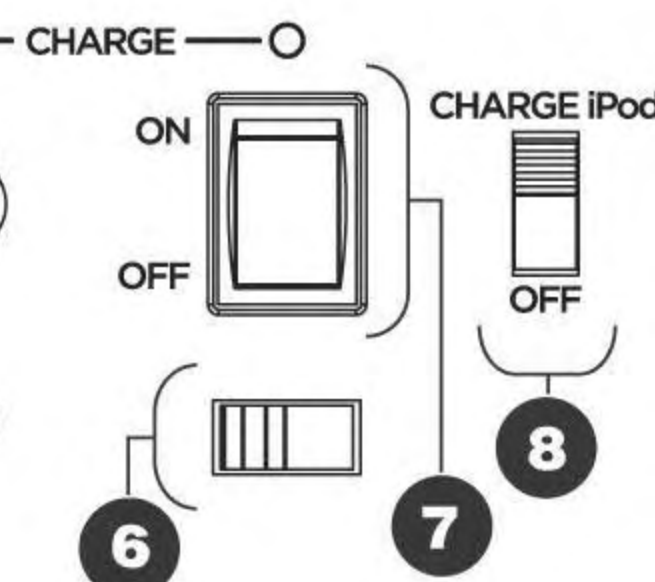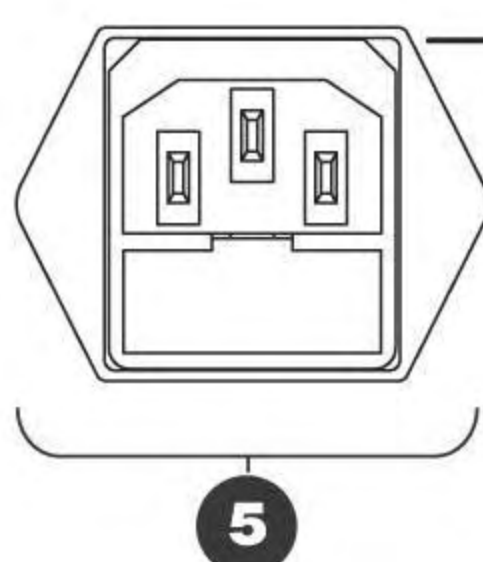

- iPod/Auxiliary input with Gain Control (Stereo RCA):** This knob controls the level of the iPod and the RCA input. This stereo RCA input can be used to connect a CD, MP3, or other audio source. To connect to a portable device with a 1/8" headphone jack, you need a standard (1/8" to RCA) adapter which is NOT included.

4. **Master Volume Control:** This knob controls the master volume.

- Power Adapter (IEC):** Insert the included power cable here to charge the unit. Note that it can run off the power adapter while it simultaneously charges the battery. The charge indicator illuminates when the battery is charging.

- Voltage Selector:** Set this to the correct voltage for your location standard.

- Power ON/OFF Switch**

- iPod Charging Switch**

- Battery Level Indicator:** While the unit is powered ON, these four lights indicate the power left in the battery. Battery life varies based on volume and usage.

- Link Output:** This 1/4" jack is a stereo line level output that can be connected to the stereo input of an amplifier or amplified loudspeaker such as another

## IMPORTANT NOTES

Use this troubleshooting guide if: **The sound is distorted at high volumes.**

- Input is clipping:** Try lowering the input gain or the volume control on your sound source or music instrument.
- Output is clipping:** Lower the main volume level.
- There is too much bass:** Try adjusting the tone or EQ control on your sound source to lower the bass level. This will allow you to play the music louder before clipping (distortion) occurs.
- The link cable:** is being plugged into the instrument or MIC input instead of the RCA line input.

**Important:** With all large speakers, an initial "break-in" period is needed to perform at optimal levels. To properly "break-in", play an audio source at medium volume for a few hours.

## SPECIFICATIONS

**Input Voltage:** AC 100-120V/ 60Hz 220-240V/ 50Hz

**Output Wattage:** (Peak) 400W

**Output Wattage:** (RMS) 15W, 1%THD

**Frequency Response:** 70Hz~ 50kHz +/- 3dB

**Bottom pole mount specifications:** Standard Pole Mount found at professional audio retailer:

Depth 80mm (3.15")

Diameter 35.5mm (1.40")

**Time required to fully charge :** under 4 hours

**Battery life:** Over 12 hours\* at full volume when fully charged.

\*Note: Battery life may vary based on temperature, age, and volume usage of product.